

SanDisk SDCZ75-256G-G46

SanDisk Ultra Luxe 256GB USB Type-C Flash Drive User Manual

Model: SDCZ75-256G-G46

Brand: SanDisk

[Introduction](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

The SanDisk Ultra Luxe 256GB USB Type-C Flash Drive is designed for efficient and stylish file transfer across various USB Type-C compatible devices. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your flash drive to ensure optimal performance and longevity.


2. KEY FEATURES

- **Universal Compatibility:** Seamlessly transfer files between your USB Type-C devices, including laptops, tablets, and smartphones.
- **Premium Design:** Features a luxurious and durable metal enclosure, offering both style and robust protection for your data.
- **High-Speed Performance:** Experience rapid data access with read speeds of up to 400MB/s, utilizing USB 3.2 Gen 1 technology for quick file transfers.
- **Retractable Connector:** A smooth, retractable USB Type-C connector helps protect the drive from wear and tear when not in use.
- **Enhanced Portability:** Equipped with a convenient keyring hole, allowing you to easily attach the drive to your keys or bag for secure transport.




The SanDisk Ultra Luxe drive offers versatile connectivity with USB Type-C devices, enabling easy


file transfer between laptops and smartphones.

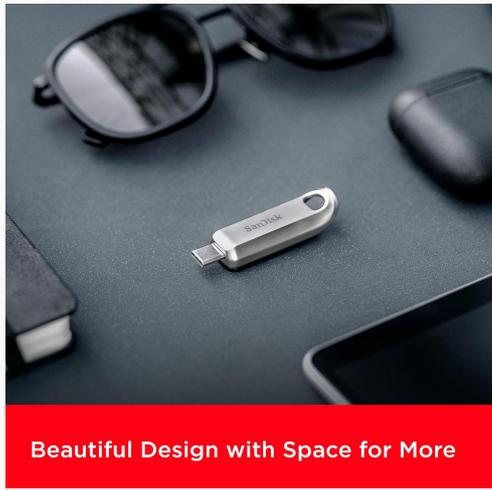

Showcasing the elegant and compact design of the SanDisk Ultra Luxe flash drive, suitable for any modern workspace.

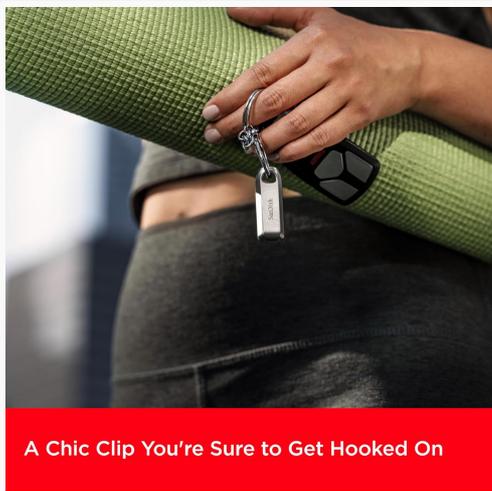

The integrated keyring hole allows for convenient attachment to keys or bags, making the drive easy to carry.

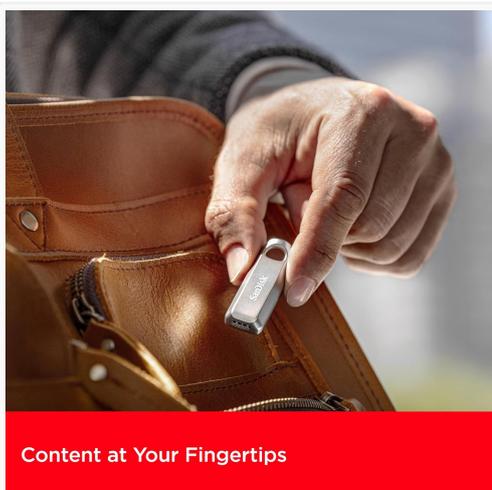

Content at your fingertips: The compact design ensures your data is always within reach.

3. SETUP INSTRUCTIONS

The SanDisk Ultra Luxe USB Type-C Flash Drive is designed for plug-and-play functionality, requiring no special software installation for basic use on most operating systems (Windows, macOS, Linux, Android,

iOS with compatible devices).


1. **Unpack the Drive:** Carefully remove the flash drive from its packaging.
2. **Identify USB Type-C Port:** Locate an available USB Type-C port on your computer, tablet, or smartphone.
3. **Insert the Drive:** Gently slide the retractable connector out and insert the flash drive into the USB Type-C port. Ensure it is fully seated.
4. **Automatic Recognition:** Your device should automatically detect the flash drive and display its contents or prompt you to open it.

4. OPERATING INSTRUCTIONS

4.1. Transferring Files

Once the drive is recognized by your device, you can transfer files using standard operating system functions:

- **Drag and Drop:** Click and drag files or folders from your device's storage to the flash drive's folder, or vice versa.
- **Copy and Paste:** Right-click (or long-press on touch devices) on the desired file(s), select 'Copy', navigate to the destination (flash drive or device storage), right-click (or long-press), and select 'Paste'.

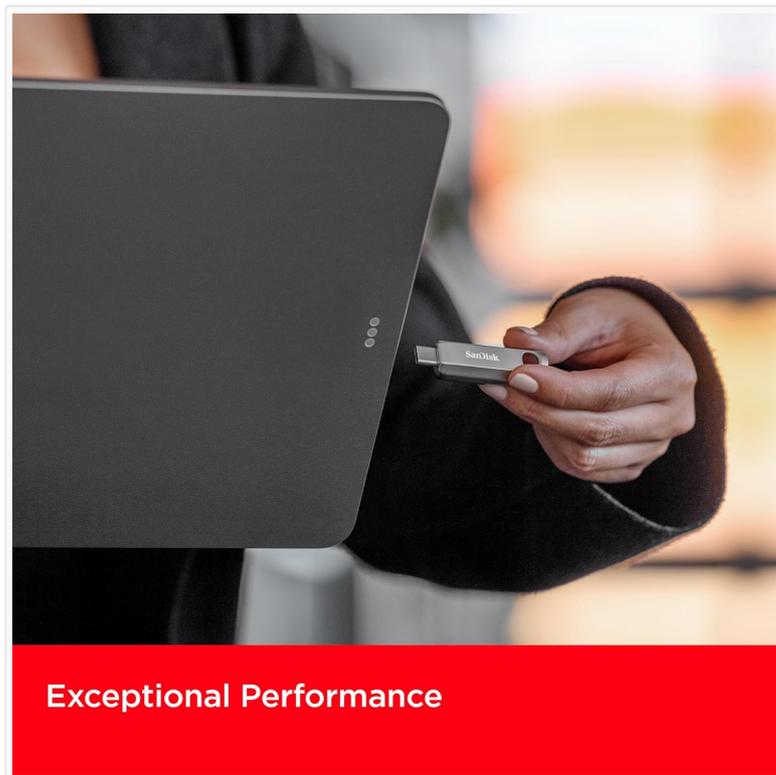


The retractable connector slides out for easy insertion into a USB Type-C port, ensuring exceptional performance.

4.2. Safely Ejecting the Drive

Always safely eject the flash drive before physically removing it to prevent data corruption or loss.

- **Windows:** Right-click the drive icon in 'This PC' or the system tray, then select 'Eject'. Wait for the 'Safe to Remove Hardware' notification.
- **macOS:** Drag the drive icon from the desktop to the Trash, or click the 'Eject' icon next to the drive in Finder.
- **Android:** Go to 'Settings' > 'Connected devices' > 'USB' and tap 'Eject' or 'Unmount'.

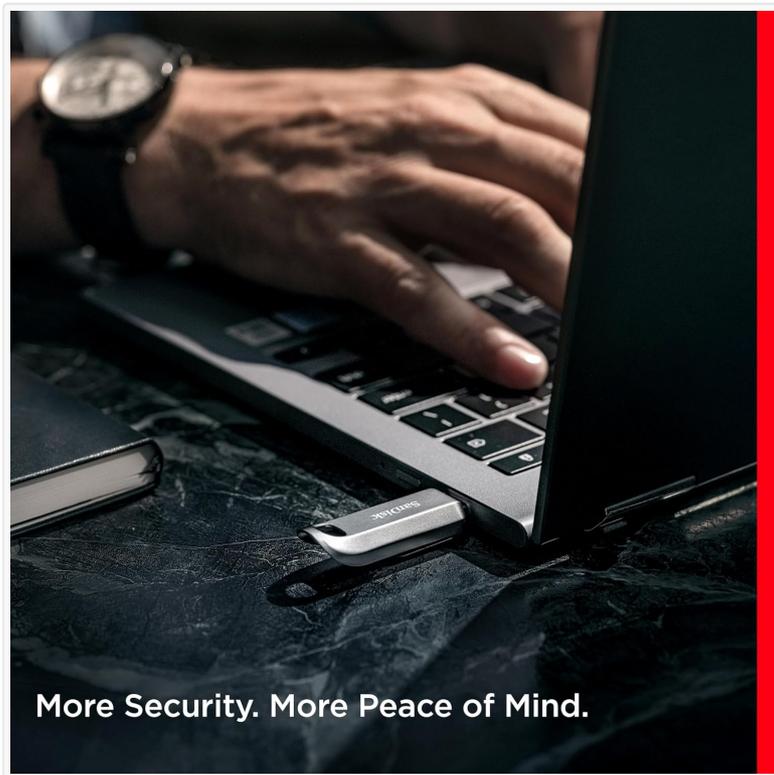

Ensuring data security and peace of mind through proper usage and safe ejection practices.

5. MAINTENANCE

- **Physical Care:** Keep the drive clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- **Temperature:** Avoid exposing the drive to extreme temperatures or direct sunlight.
- **Data Backup:** Regularly back up important data stored on the flash drive to another storage medium to prevent accidental loss.
- **Firmware Updates:** Periodically check the SanDisk website for any available firmware updates for your drive model to ensure optimal performance and compatibility.

6. TROUBLESHOOTING

6.1. Drive Not Recognized

- Ensure the drive is fully inserted into the USB Type-C port.
- Try connecting the drive to a different USB Type-C port on your device.
- Test the drive on another compatible device to determine if the issue is with the drive or the original device.
- Restart your computer or device.

6.2. Slow Transfer Speeds

- Ensure you are using a USB 3.2 Gen 1 (or higher) compatible port on your device for optimal speeds. Older USB 2.0 ports will result in significantly slower transfers.
- Close any unnecessary applications running in the background that might be consuming system resources.
- Avoid transferring many small files simultaneously; compressing them into a single archive can sometimes improve speed.

6.3. Data Corruption or Loss

- Always perform a safe ejection of the drive before physically removing it.

- If data appears corrupted, try running a disk check utility on your operating system (e.g., 'Error Checking' on Windows, 'Disk Utility' on macOS).

7. SPECIFICATIONS

Attribute	Detail
Brand	SanDisk
Model Name	SanDisk Ultra Luxe
Item Model Number	SDCZ75-256G-G46
Memory Storage Capacity	256 GB
Hardware Interface	USB Type C
Connectivity Technology	USB
Read Speed	Up to 400 Megabytes Per Second
Write Speed	Up to 400 MB/s
Color	Silver
Product Dimensions (LxWxH)	1.8 x 0.63 x 0.47 inches
Item Weight	0.368 ounces
Special Feature	Fast Data Transfer
UPC	619659203511

8. OFFICIAL PRODUCT VIDEOS

Your browser does not support the video tag.

SanDisk Ultra Luxe USB Type C: An official overview video demonstrating the features and usage of the SanDisk Ultra Luxe USB Type-C Flash Drive. This video highlights its design, connectivity, and performance.

9. WARRANTY & SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official SanDisk website. Keep your purchase receipt as proof of purchase for any warranty claims.

Online Support: www.sandisk.com/support