

[Manuals.plus](#) /

> [ROMP](#) /

> ROMP Join Couples Vibrator Instruction Manual

ROMP Join

ROMP Join Couples Vibrator Instruction Manual

Model: Join

INTRODUCTION

The ROMP Join Couples Vibrator is designed for shared pleasure, offering dual stimulation with a flexible, c-shaped design. It features multiple intensity levels and vibration patterns, is waterproof, and made from body-safe silicone. This manual provides essential information for safe and effective use, care, and maintenance of your device.

SAFETY INFORMATION

- **Material Safety:** The ROMP Join is made from body-safe silicone. Ensure the device is clean before and after each use.
- **Lubricant Compatibility:** Always use water-based lubricants with this device. Oil-based lubricants can damage silicone.
- **Health Precautions:** If you experience any discomfort, irritation, or unusual symptoms during or after use, discontinue use immediately and consult a healthcare professional.
- **Charging Safety:** Use only the provided charging cable. Do not use the device while it is charging. Keep away from water during charging.
- **Storage:** Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. Keep out of reach of children.

PACKAGE CONTENTS

Your ROMP Join Couples Vibrator package should include:

- 1 x ROMP Join Couples Vibrator
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Image: The ROMP Join Couples Vibrator in its retail packaging.

CHARGING INSTRUCTIONS

1. Locate the charging port on your ROMP Join device. It is typically a small circular port.
2. Insert the small pin end of the provided USB charging cable into the charging port of the device.
3. Connect the USB-A end of the cable to a standard USB power adapter (not included) or a computer's USB port.
4. The device's indicator light will illuminate or flash to indicate charging. Refer to the device for specific light behavior.
5. A full charge typically takes approximately 30 minutes. The indicator light will change or turn off when charging is complete.
6. Disconnect the charging cable once fully charged. Ensure the charging port is dry before and after charging.



Image: The ROMP Join device shown with its magnetic USB charging cable.

OPERATION

Power On/Off

- To turn the ROMP Join on, press and hold the power button (usually marked with an icon) for approximately 1

second.

- To turn the ROMP Join off, press and hold the power button for approximately 1 second.

Adjusting Intensity and Patterns

- Once powered on, press the power button repeatedly to cycle through the 2 intensity levels and 5 vibration patterns.
- Experiment with different settings to find what is most pleasurable.

 
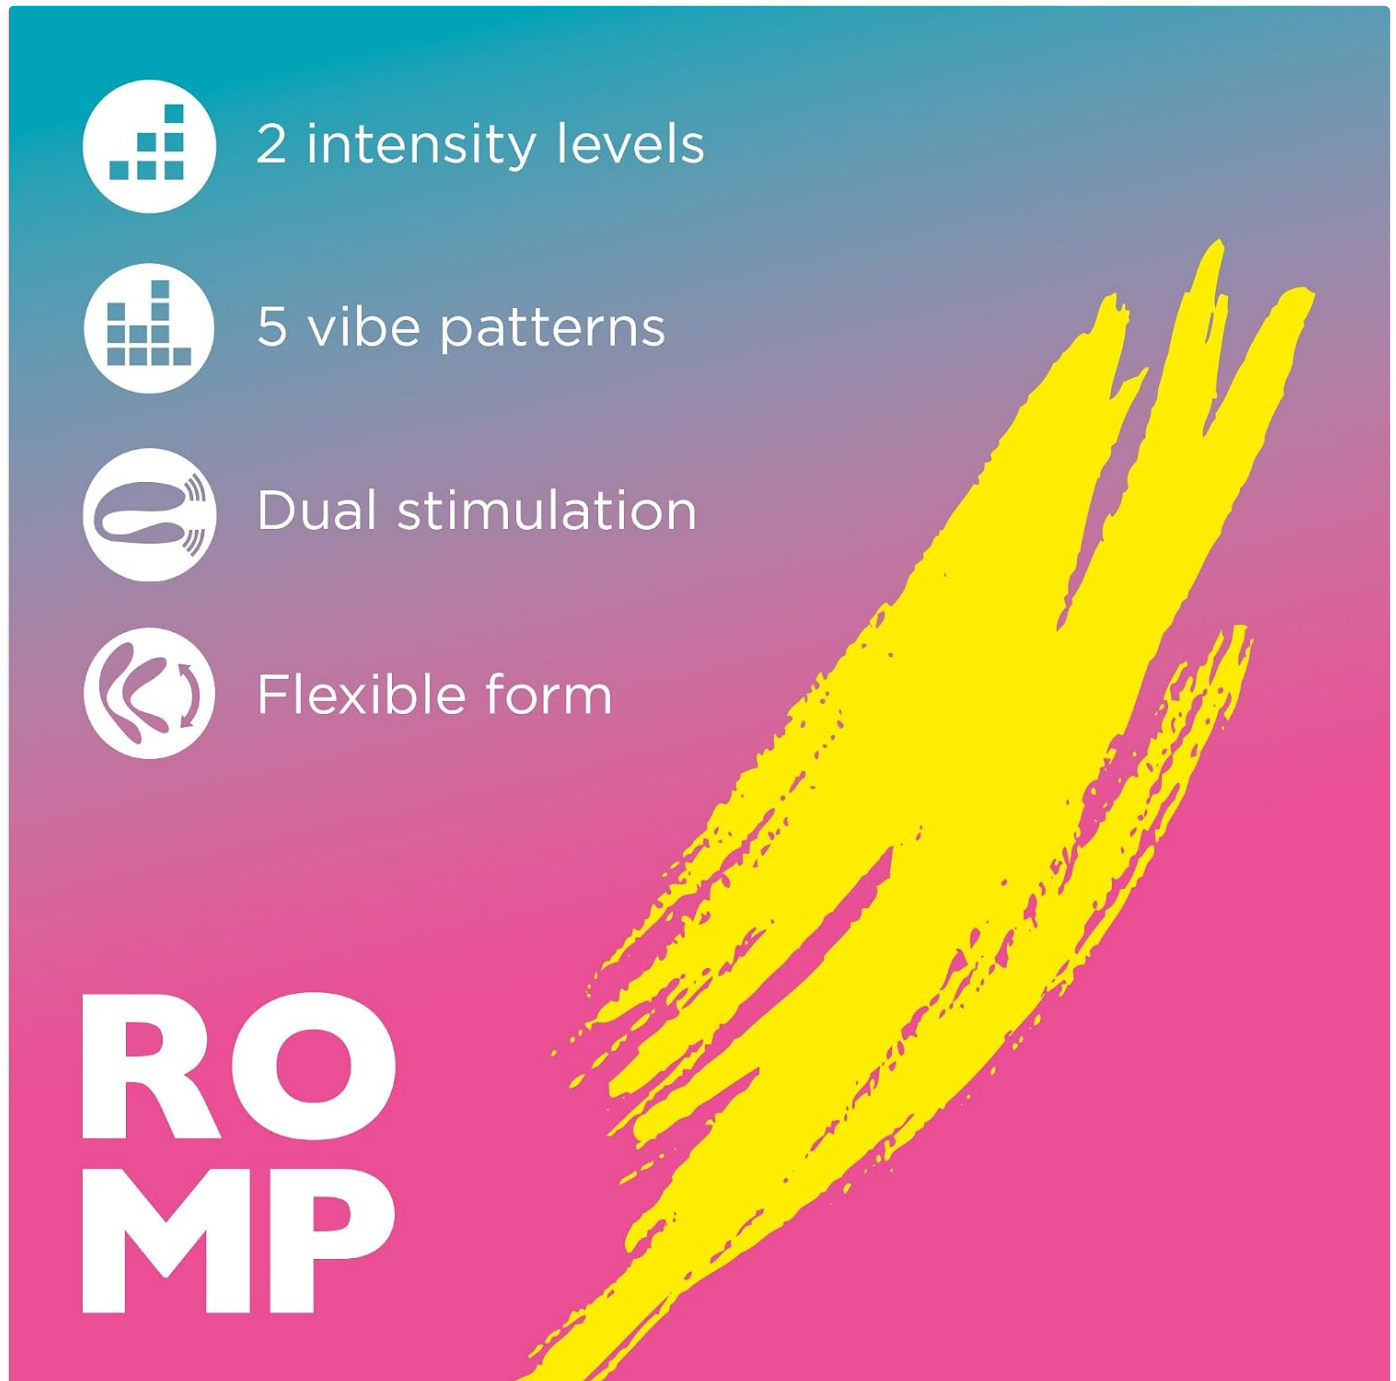 


Image: Visual representation of ROMP Join's features including 2 intensity levels and 5 vibration patterns.

Usage and Placement

- Apply a generous amount of water-based lubricant to the device and desired areas of the body.
- The ROMP Join features a flexible, c-shaped design with two stimulating ends. Carefully insert the internal stimulator into the vagina and position the external stimulator against the clitoris.
- Adjust the device to fit your body comfortably, finding the position that provides the most sensation.
- The flexible design allows for various positions and can be used to stimulate other erogenous zones such as nipples

or inner thighs.

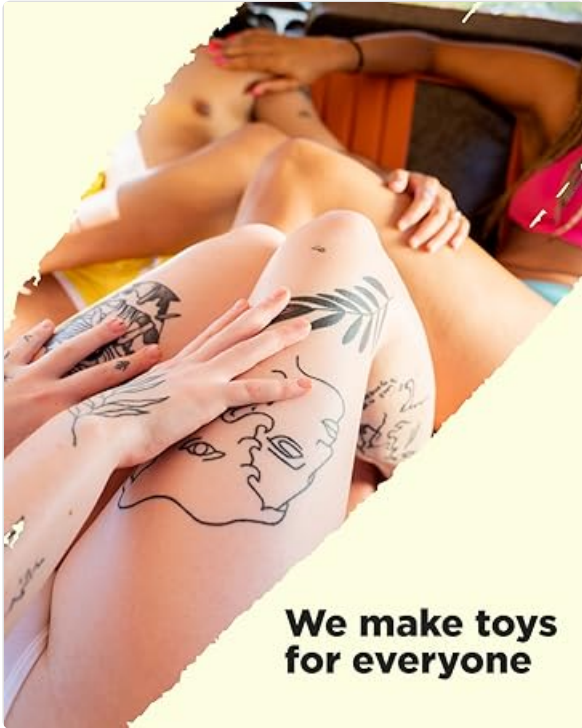

Images: Visual guides for applying lubricant and positioning the ROMP Join for use.



Images: Examples of clitoral and nipple stimulation using the ROMP Join.

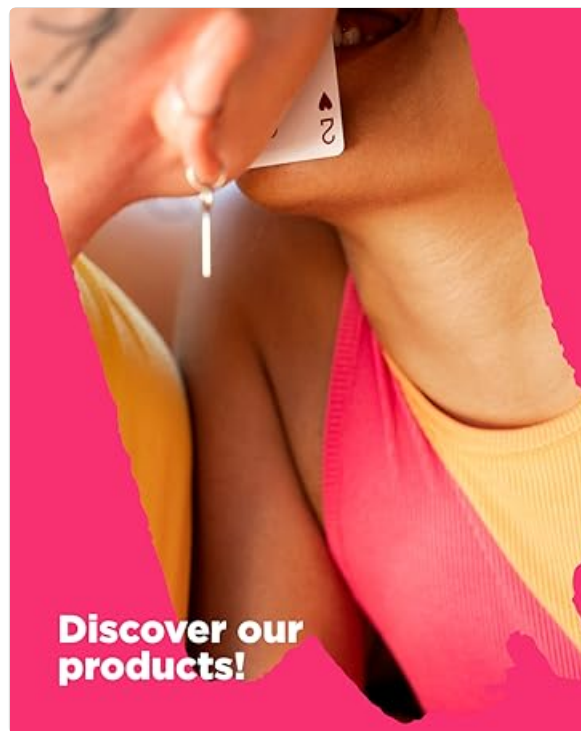 


Image: Example of inner thigh stimulation using the ROMP Join.

CLEANING AND CARE

- Clean the ROMP Join thoroughly before and after each use.
- Wash the device with warm water and a mild, toy-safe soap, or use a specialized toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely before storing.
- Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based products, as these can damage the silicone.



Image: The ROMP Join is IPX7 waterproof, suitable for use in water and easy cleaning.

STORAGE

Store your ROMP Join in a clean, dry, and dust-free environment. Keep it away from direct sunlight, extreme temperatures, and other toys made of different materials to prevent potential damage or reactions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.

Problem	Possible Cause	Solution
Vibrations are weak or inconsistent.	Low battery. Device needs charging.	Ensure the device is fully charged.
Device not charging.	Cable not properly connected or damaged. Power source issue.	Ensure the charging cable is securely connected to both the device and the power source. Try a different USB port or power adapter.
Device turns off unexpectedly.	Low battery.	Charge the device fully.

SPECIFICATIONS

- **Model:** Join
- **Material:** Body-safe Silicone
- **Color:** Teal
- **Dimensions (L x W x H):** 4.92 x 3.54 x 2.36 inches (12.5 x 9 x 6 cm)
- **Weight:** 3.88 ounces (110 grams)
- **Battery:** 1 Lithium Ion battery (included)
- **Waterproof Rating:** IPX7 (submersible up to 1 meter for 30 minutes)
- **Intensity Levels:** 2
- **Vibration Patterns:** 5

ROMP



Image: Detailed dimensions of the ROMP Join device.

WARRANTY AND SUPPORT

The ROMP Join Couples Vibrator comes with a 2-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or any other questions, please contact ROMP customer service through their official website or the retailer where you purchased the product.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An unboxing and overview of the ROMP Join Couples Vibrator, demonstrating its features and flexibility.

