

Replacement Remote Control for Blyss WAP-06EC35H WAP-12EA26 Mobile Air Conditioner

User Manual: Replacement Remote Control

For Blyss WAP-06EC35H & WAP-12EA26 Mobile Air Conditioners, and other compatible devices.

1. PRODUCT OVERVIEW

This document provides instructions for the replacement remote control designed for use with Blyss WAP-06EC35H and WAP-12EA26 Mobile Air Conditioners, as well as various other compatible devices such as Set Top Boxes, Stereo Systems, Televisions, DVD/Blu-ray Players, and Home Theater systems. This remote is a functional replacement and does not require programming or complex setup.



Figure 1: Front view of the replacement remote control. This image shows the remote's rectangular shape, black buttons, and clear labels for ON/OFF, TEMP/TIME, MODE, SPEED, and TIMER functions.

2. SAFETY INFORMATION

- **Battery Safety:** Always use the correct type of batteries as specified (typically AAA or AA, though not explicitly mentioned in input, common for remotes). Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Handling:** Avoid dropping the remote control or exposing it to extreme temperatures, humidity, or direct sunlight.
- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.

3. SETUP

This replacement remote control is designed for immediate use with compatible devices. No complex programming or setup procedures are required.

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert new batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Always insert new batteries to ensure optimal performance of the remote control.



Figure 2: Angled view of the replacement remote control. This image provides a perspective view, highlighting the ergonomic design and button layout from a slight angle.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver of your device (e.g., air conditioner, TV, etc.) for proper operation. Ensure there are no obstructions between the remote and the device.

4.1. Button Functions

Button	Function
ON/OFF	Powers the device on or off.
TEMP/TIME	Adjusts temperature settings or sets timer functions.
MODE	Cycles through operating modes (e.g., Cool, Fan, Dry for AC units).
SPEED	Adjusts fan speed or other speed-related settings.
TIMER	Activates or adjusts the timer function for delayed operation.

Important Note: As a replacement remote, some advanced or specific functions present on the original remote may not be fully supported. The primary functions listed above are generally compatible.

5. MAINTENANCE

5.1. Cleaning the Remote

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use harsh chemicals, abrasive cleaners, or allow any liquids to enter the remote.

5.2. Battery Replacement

Replace batteries when the remote's range decreases or it stops responding. Follow the battery installation steps in Section 3.1. Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and device; Remote not pointed directly at device.	Replace batteries. Remove any obstructions. Ensure direct line of sight to the device's IR receiver.
Certain functions do not work.	This is a replacement remote; some specific functions of the original remote may not be supported.	Verify if the function is a basic operation. If it's an advanced or unique feature, it might not be compatible. The remote is designed for core functionalities.

7. SPECIFICATIONS

Feature	Detail
Product Type	Replacement Remote Control
Brand	Generic

Feature	Detail
Compatible Devices	Blyss WAP-06EC35H, WAP-12EA26 Mobile Air Conditioners, Set Top Box, Stereo System, Television, DVD/Blu-ray Player, Home Theater
Max Number of Supported Devices	2 (referring to the remote's capability to control multiple types of devices, not simultaneously)
Special Feature	Ergonomic design
Color	Black or white (as per product listing)
Package Contents	1 x remote control (Accessories not included)
Programming Required	No

8. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary. Please refer to the seller or retailer from whom you purchased this remote control for information regarding warranty coverage, returns, or technical support.

For further assistance, you may contact the seller directly through the platform where the purchase was made. Ensure you have your order details ready when seeking support.