

**Generic SSB10T323**

# Maze Speed Tablet User Manual

Model: SSB10T323

## INTRODUCTION

---

Thank you for choosing the Maze Speed Tablet. This 10.1-inch 4G LTE Android tablet is designed for versatile use, featuring a 2GHz Quad Core processor, 3GB RAM, and 32GB of internal storage, expandable up to 128GB. It comes equipped with an 8MP rear camera and a 5MP front camera, powered by a 5000mAh battery and running on Android 12. This manual provides essential information for setting up, operating, and maintaining your device.



Image: Front view of the Maze Speed Tablet, showcasing its display.

## WHAT'S IN THE BOX

---

Upon opening the package, please ensure all items are present and in good condition.

- Maze Speed Tablet
- Charging Cable (USB Type-C)
- Power Adapter
- User Manual (this document)

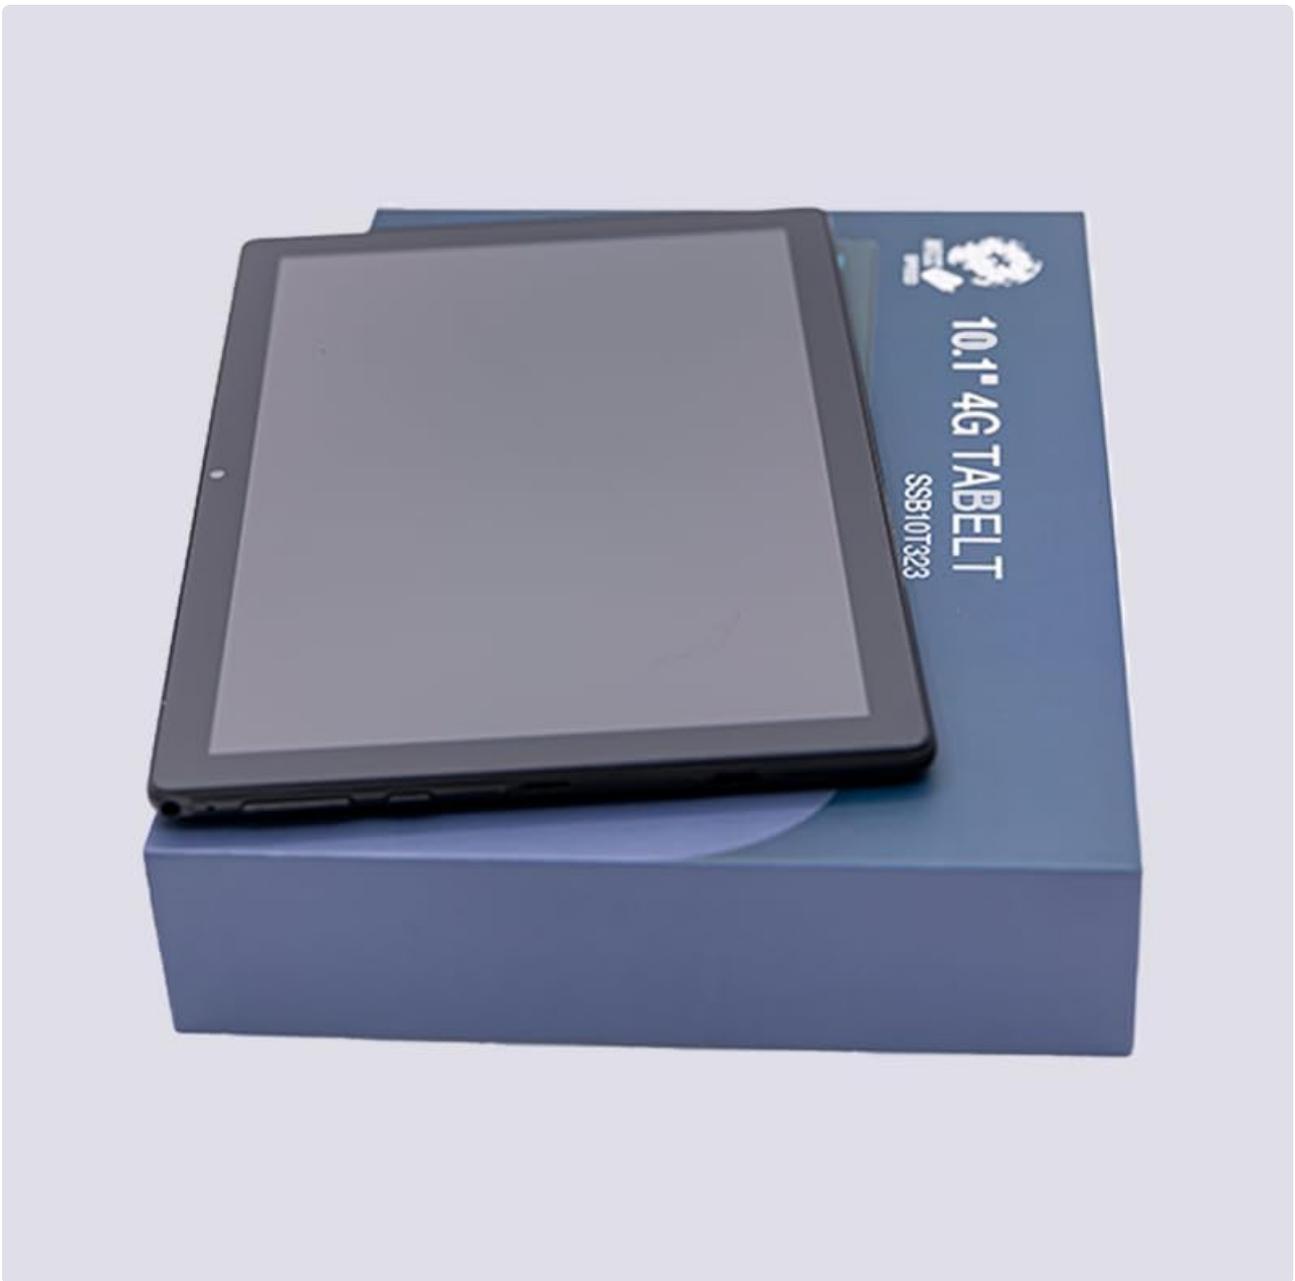


Image: The Maze Speed Tablet resting on its product packaging box.

## SETUP GUIDE

---

### 1. Charging the Tablet

Before first use, fully charge the tablet. Connect the provided USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging progress. A full charge for the 5000mAh battery may take several hours.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) until the screen lights up and the Maze Speed logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

### 3. Installing SIM Card and MicroSD Card

The tablet supports 4G LTE connectivity via a SIM card and storage expansion via a MicroSD card (up to 128GB).

1. Locate the SIM/MicroSD card tray on the side of the tablet.

2. Use the provided SIM ejector tool (if included) or a small paperclip to gently press into the small hole next to the tray to eject it.
3. Carefully place your Nano-SIM card and/or MicroSD card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.



Image: Rear view of the Maze Speed Tablet, highlighting the camera module and brand logo, indicating potential locations for card slots.

#### 4. Initial Setup (Android 12)

The first time you power on the tablet, you will be guided through the Android 12 setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password).
- Review and accept terms and conditions.

## OPERATING YOUR TABLET

---

### Basic Navigation

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, etc.).
- **Recent Apps:** Tap the square navigation button (or swipe up and hold from the bottom if using gesture navigation) to see recently opened applications.

## Camera Usage

Your tablet features an 8MP rear camera and a 5MP front camera.

1. Open the "Camera" application from your home screen or app drawer.
2. Tap the camera switch icon to toggle between the front and rear cameras.
3. Tap the shutter button to take a photo or the video icon to record a video.
4. Access settings within the camera app for options like flash, timer, and different modes.

## Connectivity

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* to connect to available Wi-Fi networks.
- **Bluetooth:** Go to *Settings > Connected devices > Bluetooth* to pair with Bluetooth devices like headphones or speakers.
- **Mobile Network (4G LTE):** If a SIM card is installed, go to *Settings > Network & internet > Mobile network* to manage your cellular data connection.
- **USB Type-C:** Use the USB Type-C port for charging, data transfer, and connecting to other compatible devices.

## MAINTENANCE

---

### Cleaning Your Tablet

To clean the screen and body of your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture.

### Software Updates

Regularly check for software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to *Settings > System > System update* to check for and install available updates. Ensure your tablet is connected to Wi-Fi and has sufficient battery life before starting an update.

### Battery Care

To prolong the life of your 5000mAh Lithium Ion battery:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original charger or a certified compatible charger.
- If storing the tablet for a long period, charge it to about 50% before turning it off.

## TROUBLESHOOTING

---

Problem	Possible Solution
Tablet won't turn on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again. If it still doesn't turn on, perform a forced restart by holding the power button for 10-15 seconds.

Problem	Possible Solution
Wi-Fi connection issues.	Check if Wi-Fi is enabled in Quick Settings or Settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps are crashing or freezing.	Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Update the app from the Google Play Store. If the issue persists, uninstall and reinstall the app.
Slow performance.	Close unused apps. Clear cache for frequently used apps. Free up storage space by deleting unnecessary files or apps. Restart the tablet regularly.
Tablet not charging.	Check the charging cable and adapter for damage. Try a different outlet. Ensure the charging port on the tablet is clean and free of debris.

## SPECIFICATIONS

Below are the key technical specifications for the Maze Speed Tablet (Model: SSB10T323).

Feature	Detail
Model Name	SSB10T323
Display Size	10.1 Inches
Screen Resolution	1280 x 800 pixels
Processor	2 GHz Quad Core (ARM)
RAM	3 GB
Internal Storage	32 GB (expandable up to 128 GB via MicroSD)
Operating System	Android 12
Rear Camera	8 MP
Front Camera	5 MP
Battery	5000 mAh Lithium Ion
Connectivity	4G LTE, Wi-Fi (802.11ac), Bluetooth 5.0
Ports	USB Type-C, Headphone Jack
Dimensions (LxWxH)	10.1 x 5 x 0.4 inches
Item Weight	1.94 pounds
Color	Black



Image: The product packaging box displaying key features and specifications of the Maze Speed Tablet.

## WARRANTY INFORMATION

---

This Maze Speed Tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

## SUPPORT

---

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the manufacturer's customer service. Contact details are typically provided on the product packaging or on the manufacturer's official website.