

[Manuals.plus](#) /

› [Smad](#) /

› Smad 21 cu.ft Upright Convertible Freezer Instruction Manual

Smad FBA-DSD-772WMU

Smad 21 cu.ft Upright Convertible Freezer Instruction Manual

MODEL: FBA-DSD-772WMU

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Smad 21 cu.ft Upright Convertible Freezer. This appliance features a spacious 21 cubic feet capacity, frost-free technology, an LED display with external controls, and the ability to convert between freezer and refrigerator modes. Please read these instructions thoroughly before using the appliance and retain them for future reference.





Front view of the Smad 21 cu.ft Upright Convertible Freezer, highlighting its sleek design and external LED display.

Important Safety Information

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Ensure the appliance is properly grounded.
- Unplug the appliance before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Setup and Installation

1. Unpacking

Carefully remove all packaging materials, including tape and protective films. Dispose of packaging responsibly. Inspect the appliance for any shipping damage.

2. Placement

Place the freezer on a flat, stable surface. The freestanding design includes 2 rollers and 2 adjustable front leveling legs for stability on uneven floors. Ensure adequate clearance around the appliance for proper ventilation. This unit is suitable for homes, kitchens, apartments, or garages.

3. Leveling

Adjust the front leveling legs to ensure the appliance is level. A level appliance operates more efficiently and prevents door alignment issues.

4. Power Connection

Connect the appliance to a dedicated, grounded 110V AC electrical outlet. Do not use extension cords or adapter plugs. Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

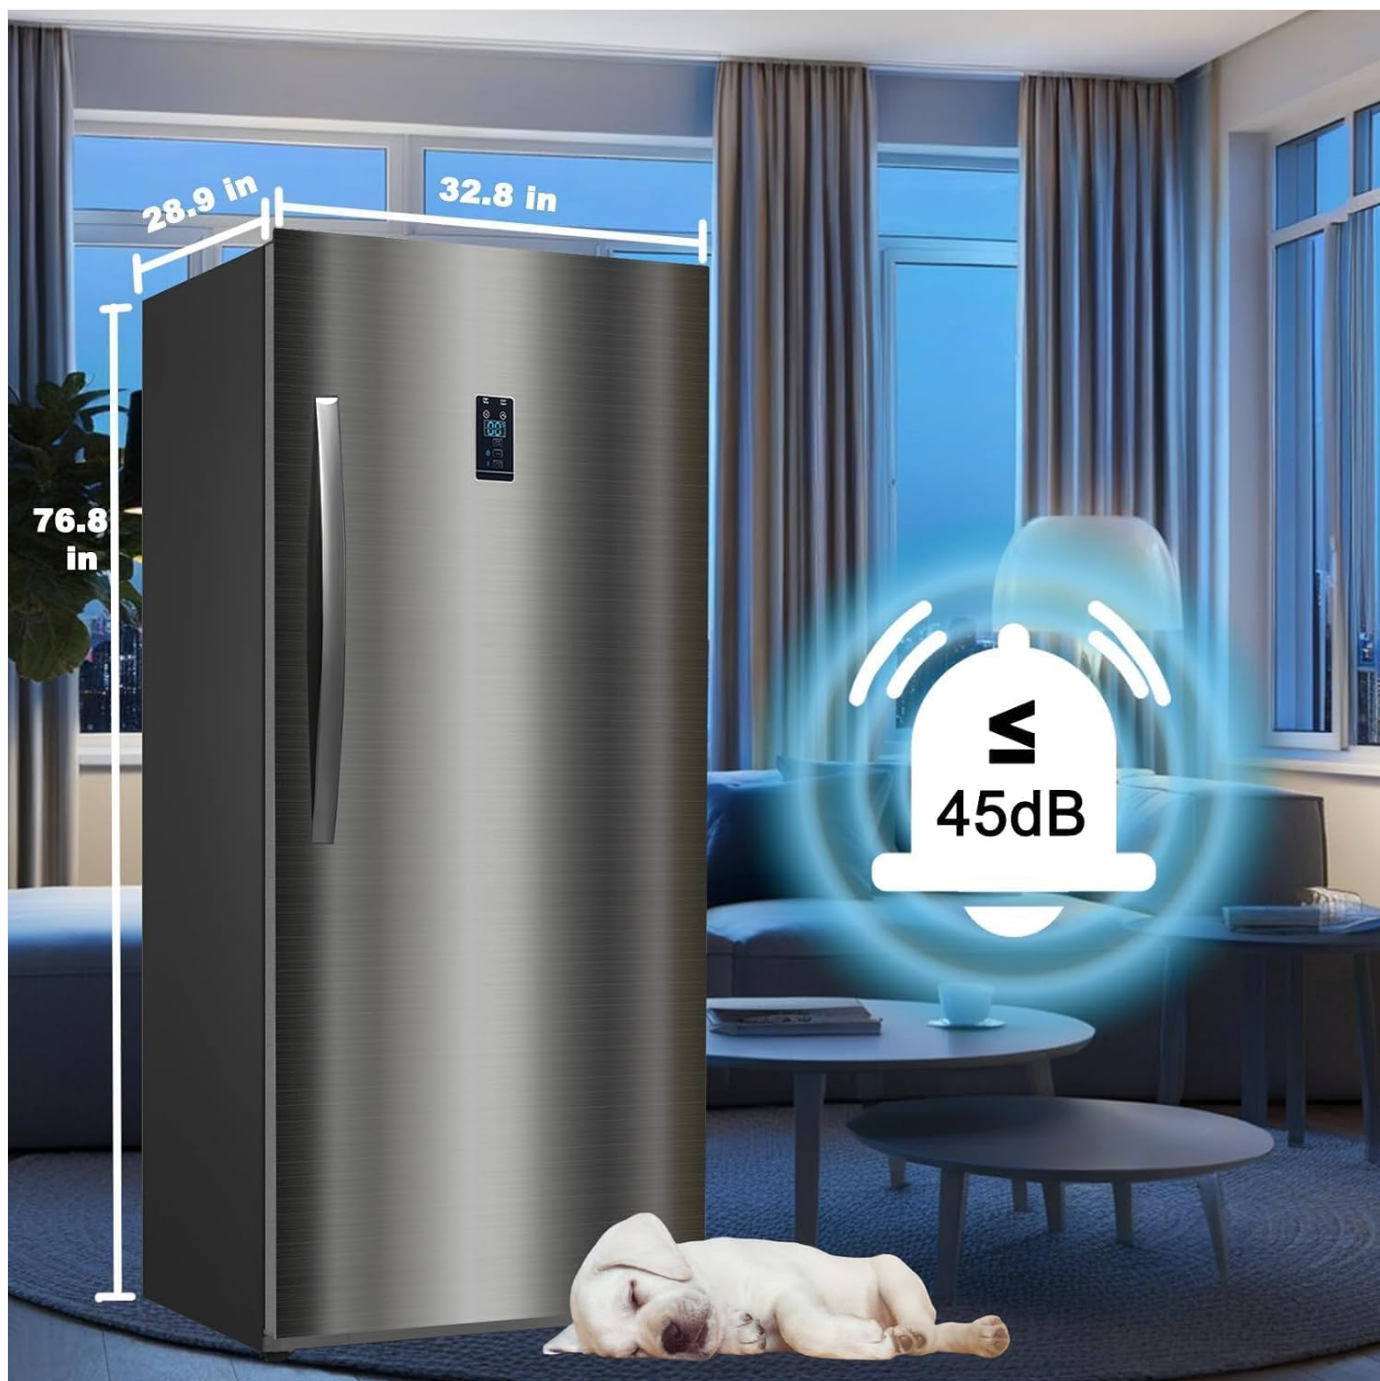


Image illustrating the dimensions of the freezer (28.9 x 32.8 x 76.8 inches) and its quiet operation at less than 45dB.

Operating Instructions

1. Control Panel Overview

Your freezer is equipped with an external LED display control panel for easy temperature management and function selection.



Detailed view of the LED control panel, showing buttons for temperature adjustment, Quick Freeze, Lock/Unlock, and mode selection (Freezer/Fridge).

1. **High Temperature Alert:** Indicates if the internal temperature is too high.
2. **Door Open Alarm:** Alerts if the door is left ajar.
3. **Lower Temperature:** Decreases the set temperature.
4. **Raise Temperature:** Increases the set temperature.
5. **Temperature Indicator:** Displays the current or set temperature.
6. **Quick Freeze:** Activates the rapid freezing function.
7. **Lock/Unlock:** Locks or unlocks the control panel to prevent accidental changes.
8. **Freezer/Fridge Mode:** Toggles between freezer and refrigerator operation.

2. Temperature Settings

Use the 'Lower Temperature' and 'Raise Temperature' buttons to set your desired temperature. The temperature range for freezer mode is -11°F to 10°F (-24°C to -12°C). For refrigerator mode, the range is 35°F to 46°F (2°C to 8°C).



Illustration of the convertible function, allowing the unit to operate as either a freezer (left, showing frozen foods) or a refrigerator (right, showing fresh produce).

3. Quick Freeze Function

Activate the 'Quick Freeze' function after a large grocery trip to rapidly freeze new items. This helps to preserve food quality and freshness by quickly lowering the internal temperature.

Quick Freeze

Rapid Freshness Lock

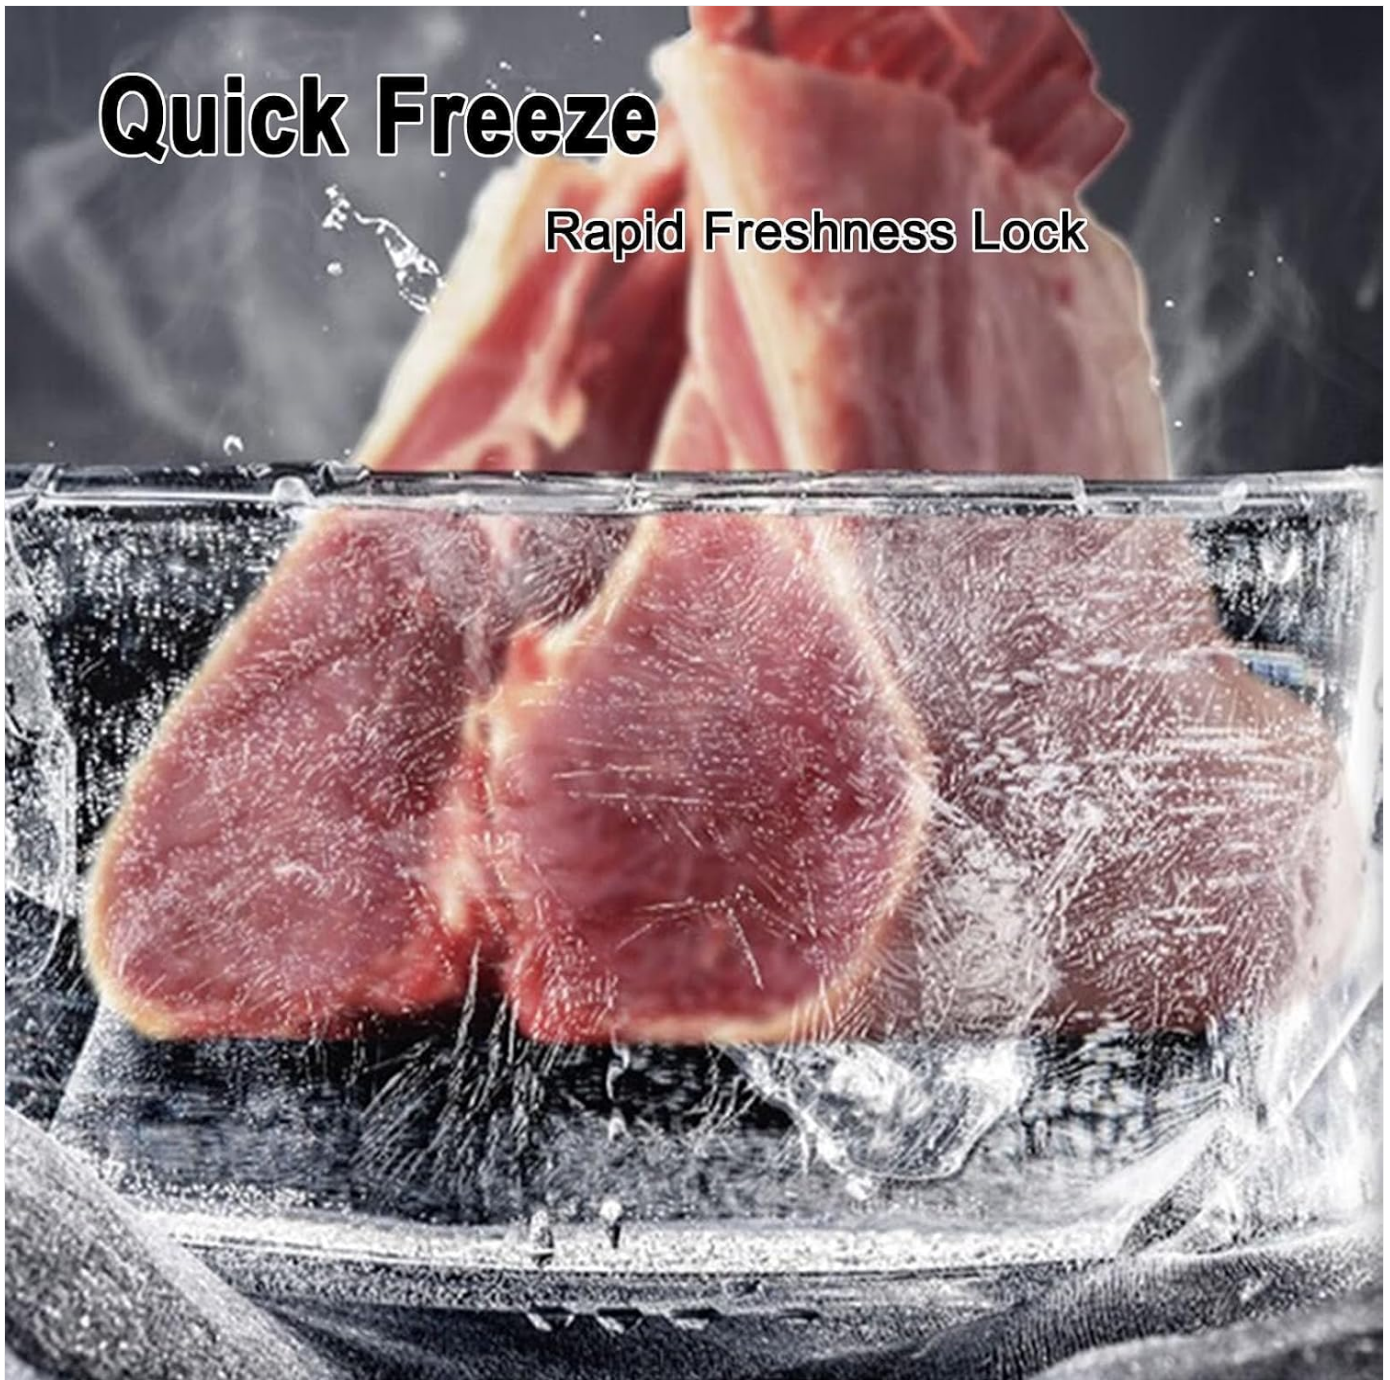


Image demonstrating the Quick Freeze feature, designed for rapid freshness lock of food items like meat.

4. Door Open Alarm

The appliance features an alarm that sounds if the door is left open for an extended period or if the internal temperature becomes abnormal. Close the door firmly to silence the alarm.

Care and Maintenance

1. Cleaning

The stainless steel finish is designed for wear resistance and easy cleaning. For exterior cleaning, wipe surfaces with a soft cloth dampened with mild soap and water. For interior cleaning, unplug the appliance, remove all contents, and wipe with a solution of baking soda and water. Rinse and dry thoroughly before restoring power.

2. Defrosting

This upright freezer features frost-free technology, which automatically prevents ice buildup. This minimizes the need for

manual defrosting and cleaning.



Air-cooled, Frost Free

Reducing the need for cleaning and defrosting

Interior view of the freezer, illustrating the air-cooled, frost-free system that reduces the need for cleaning and defrosting.

3. Interior Organization

The freezer is equipped with 4 shelves, 2 humidity-controlled crisper drawers, and 4 door bins to help organize your food items efficiently.



Interior layout showing spacious door bins, glass wire shelves, and humidity-controlled crisper drawers for organized storage.

4. Built-in Light

A powerful built-in LED light illuminates the interior, allowing clear visibility of contents.



Powerful Built-in Light

Allowing users to see the contents clearly

Close-up of the freezer interior, highlighting the powerful built-in light for enhanced visibility.

Troubleshooting Guide

Problem	Possible Cause	Solution
Appliance does not operate	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough	Temperature setting too high; door opened frequently; large amount of warm food added; poor ventilation.	Adjust temperature setting; minimize door openings; allow new food to cool before storing; ensure proper clearance around unit.
Excessive noise	Appliance not level; items vibrating inside; normal operating sounds.	Level the appliance using adjustable legs; rearrange items; some sounds (e.g., refrigerant flow) are normal.

Problem	Possible Cause	Solution
Door alarm sounds	Door left open; high temperature detected.	Close door firmly; check temperature setting and food load.

Product Specifications

Feature	Detail
Brand	Smad
Model Name	FBA-DSD-772WMU
Capacity	21 cu.ft (594 Liters)
Product Dimensions (DxWxH)	28.9 x 32.8 x 76.8 inches
Item Weight	201 pounds
Annual Energy Consumption	594 Kilowatt Hours Per Year
Noise Level	45 dB
Installation Type	Freestanding
Form Factor	Convertible (Freezer/Refrigerator)
Special Features	Adjustable Legs, Easy to Install, Frost Free, Quiet Operation, Wheels
Voltage	110 Volts (AC)
Wattage	594.00
Crispers/Drawers	2
Defrost Type	Automatic
Door Hinges	Right
Door Material Type	Stainless Steel
Shelves	4
Certification	Energy Star, UL
Included Components	LED Control Panel

Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or contact Smad customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Customer Support

If you have any questions, require technical assistance, or need to report an issue with your Smad 21 cu.ft Upright Convertible Freezer, please contact Smad customer support. You can find contact details on the official Smad website or

through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CP4VKPPP>

More documents and user manuals: <https://manuals.plus/>