

Bituman TV Stand

Bituman Farmhouse TV Cabinet (Espresso) Instruction Manual

BRAND: BITUMAN

Model: TV Stand

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Bituman Farmhouse TV Cabinet. Please read this manual thoroughly before beginning assembly and retain it for future reference.

The Bituman Farmhouse TV Cabinet is a modern entertainment console designed to accommodate televisions up to 65 inches. It features a classic American design with textured finishes, antique metal hardware, and glass doors, making it a versatile piece that can also function as a sideboard or console table.

Important Safety Information:

- Always follow assembly instructions carefully.
- Ensure all hardware is securely tightened before use.
- Do not exceed the maximum weight capacity of 70 lbs for the top surface.
- Keep small parts away from children during assembly.
- Use on a level surface to prevent tipping.

2. PACKAGE CONTENTS

Verify that all components are present before starting assembly. If any parts are missing or damaged, please contact customer support.

- 1 x TV Stand (unassembled components)
- Hardware pack (screws, dowels, cam locks, etc.)
- Assembly instructions sheet



Image: The Bituman Farmhouse TV Cabinet, espresso color, featuring glass doors and open shelving, displayed in a living room environment.

3. SETUP AND ASSEMBLY

Estimated Assembly Time: 2 hours

Suggested Number of People for Assembly: 2 adults

Additional Tools Required (Not Included): Screwdriver, Power Drill (recommended)

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Refer to the included parts list to identify each piece. Place them on a soft, clean surface to prevent scratches.
2. **Assemble Base Frame:** Attach the side panels to the bottom base using the provided hardware

(dowels and cam locks). Ensure all connections are secure.

3. **Install Center Support:** Secure the central vertical support and horizontal shelves within the main compartment.
4. **Attach Back Panel:** Fasten the back panel to the assembled frame. Ensure cable management cutouts are correctly oriented.
5. **Assemble Side Cabinets:** Construct the side cabinet frames, including the adjustable shelves.
6. **Install Glass Doors:** Attach the glass doors to the side cabinets using the hinges. Adjust hinges as needed for proper alignment.
7. **Attach Top Panel:** Secure the top panel to the main frame.
8. **Final Checks:** Ensure all screws and fasteners are tightened. Gently move the unit to its desired location.

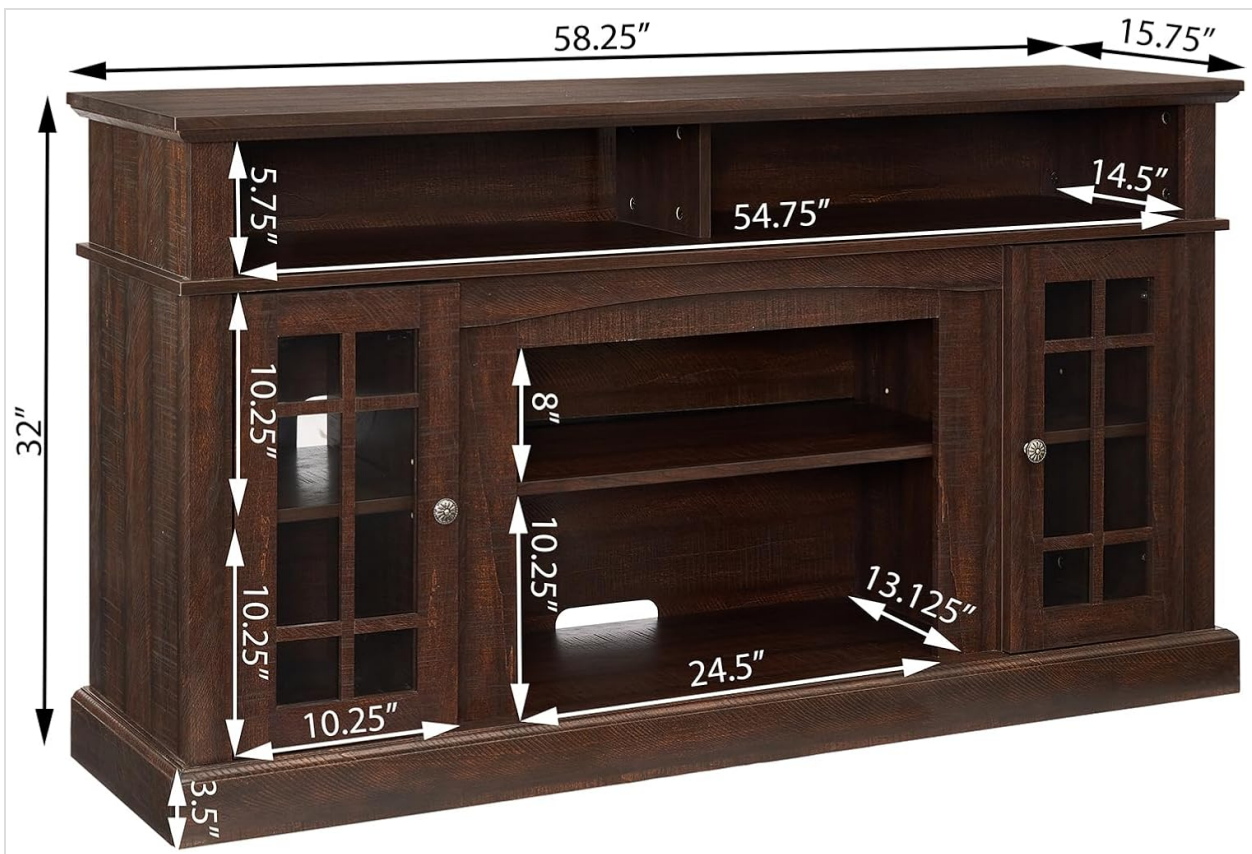


Image: Detailed dimensions of the TV cabinet, illustrating overall size and internal compartment measurements for planning and assembly.

4. OPERATING INSTRUCTIONS

Your Bituman Farmhouse TV Cabinet is designed to accommodate televisions up to 65 inches and provide organized storage for your media devices.

- **Placing Your TV:** Carefully place your television on the top surface of the cabinet. Ensure the TV base is centered and stable. The top surface has a weight capacity of 70 lbs.
- **Utilizing Storage:** The cabinet offers ample storage with large storage cabinets featuring glass doors and adjustable shelves. The open shelves are ideal for media players, gaming consoles, or soundbars.
- **Adjustable Shelves:** The side cabinets feature adjustable shelves. To adjust, remove the shelf, reposition the shelf pins to the desired height, and reinsert the shelf.
- **Cable Management:** The back panel includes four cable management cutouts. Route power cords and

signal cables through these openings to maintain a tidy appearance and prevent tangles.



Image: The TV cabinet in use, demonstrating how a television fits on the top surface and how media components can be organized within the open and glass-doored compartments.

5. MAINTENANCE

Proper care will help maintain the appearance and longevity of your TV cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.



Image: A detailed view of the cabinet's glass door and interior, highlighting the adjustable shelf and the quality of the finish.

6. TROUBLESHOOTING

If you encounter any issues with your TV cabinet, refer to the following common problems and solutions:

- **Issue:** The cabinet feels wobbly after assembly.
Solution: Ensure all cam locks and screws are fully tightened. Verify that the cabinet is placed on a flat, level surface. Adjust leg levelers if present.
- **Issue:** Doors do not align properly.
Solution: Adjust the hinges on the glass doors. Most hinges allow for minor adjustments in height, depth, and side-to-side movement using a screwdriver.
- **Issue:** Missing hardware or damaged parts.
Solution: Do not proceed with assembly. Contact customer support immediately for replacement parts.

7. SPECIFICATIONS

Feature	Detail
Product Name	TV Stand
Brand	Bituman
Color	Espresso
Overall Dimensions (W x D x H)	58.25" x 15.75" x 32"
Weight	100.31 lbs
Largest TV Size Supported	65 inches
Top Weight Capacity	70 lbs
Material	MDF + PB (Engineered Wood), Glass, Metal
Number of Adjustable Shelves	2 (within side cabinets)
Cable Management Cutouts	4
Assembly Required	Yes
Country of Origin	China

8. OPTIONAL PROTECTION PLANS

Extended protection plans are available for purchase to cover your product beyond the standard manufacturer's coverage. These plans offer additional peace of mind for potential future issues.

- **2-Year Protection Plan:** Provides coverage for 24 months.
- **3-Year Protection Plan:** Provides coverage for 36 months.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

For details on coverage, pricing, and terms, please refer to the specific protection plan documentation or contact the plan provider.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Bituman customer support through your retailer or the official Bituman website.

Please have your product model number (TV Stand) and ASIN (B0CP5DH5RH) ready when contacting support.

