

[manuals.plus](#) /› [Oneach](#) /› [Oneach 27-inch Modern Table Lamps \(Set of 2\) with USB A+C Charging Ports - Instruction Manual](#)**Oneach AMZ-T523**

Oneach 27-inch Modern Table Lamps (Set of 2)

Model: AMZ-T523 - Instruction Manual

1. PRODUCT OVERVIEW

Thank you for choosing the Oneach 27-inch Modern Table Lamps. This set of two elegant lamps features a brushed steel base, a fabric drum shade, and integrated USB A and USB C charging ports for convenience. Designed for versatility, these lamps are suitable for various rooms including living rooms, bedrooms, and offices.



Image 1: The Oneach 27-inch Modern Table Lamps (Set of 2) on a console table.

2. PACKAGE CONTENTS

- 2 x Lamp Bases with USB A+C Charging Ports
- 2 x Fabric Lamp Shades (unassembled)
- 2 x Harp and Finial Sets
- 1 x Instruction Manual

Note: Light bulbs are not included. These lamps require E26 base bulbs, up to 60W.

3. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in Section 2 are present.
2. **Assemble the Lamp Shade:** The fabric lamp shade comes unassembled. Connect the metal rings to the fabric shade using the clips provided. Ensure the shade is taut and evenly shaped.
3. **Attach the Harp:** Secure the harp (the U-shaped wire frame) to the saddle on the lamp base. Squeeze the two ends of the harp together to fit them into the saddle.

4. **Install the Bulb:** Screw an E26 base light bulb (not included, max 60W) into the lamp socket.
5. **Place the Shade:** Position the assembled lamp shade onto the harp. The top ring of the shade should rest on the harp.
6. **Secure with Finial:** Screw the finial (decorative cap) onto the threaded rod at the top of the harp to secure the lamp shade in place.
7. **Connect to Power:** Place the lamp on a stable, flat surface. Plug the power cord into a standard electrical outlet.



Image 2: Close-up of the lamp base with rotary switch and USB ports.

4. OPERATING INSTRUCTIONS

4.1 Turning the Lamp On/Off

To turn the lamp on or off, use the rotary switch located on the lamp base. Rotate the switch clockwise to turn the light on, and counter-clockwise to turn it off.

4.2 Using the USB Charging Ports

Each lamp base is equipped with one USB-A (5V/2A) and one USB-C (5V/2A) charging port. These ports allow you to charge your electronic devices, such as mobile phones, tablets, e-readers, and other USB-

powered gadgets, even when the lamp light is off.

- Connect your device's charging cable to the appropriate USB-A or USB-C port on the lamp base.
- Ensure the lamp is plugged into a live electrical outlet for the charging ports to function.



Phone



Pad



Laptop



Humidifier



Kindle



Speaker

Image 3: Lamp in use, charging a mobile device via its USB port.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the lamp from the power outlet before cleaning.
- For the lamp base, wipe with a soft, dry cloth. Avoid using abrasive cleaners or polishes that could damage the brushed steel finish.
- For the fabric shade, gently dust with a soft brush or a lint roller. Do not use wet cleaners on the fabric.

5.2 Bulb Replacement

- Ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it.
- Unscrew the old bulb from the E26 socket.

- Screw in a new E26 base bulb, ensuring it does not exceed 60W.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none"> ◦ Lamp not plugged in. ◦ Bulb is loose or burnt out. ◦ Power outlet is not functioning. 	<ul style="list-style-type: none"> ◦ Ensure the power cord is securely plugged into a live outlet. ◦ Tighten or replace the light bulb. ◦ Test the outlet with another device or try a different outlet.
USB charging ports are not working.	<ul style="list-style-type: none"> ◦ Lamp not plugged in. ◦ Device charging cable is faulty. ◦ Device is incompatible or requires more power. 	<ul style="list-style-type: none"> ◦ Ensure the lamp is plugged into a live electrical outlet. ◦ Try a different charging cable. ◦ Verify device compatibility and power requirements.
Lamp shade appears crooked or unstable.	<ul style="list-style-type: none"> ◦ Harp not properly seated. ◦ Finial is loose. ◦ Shade not assembled correctly. 	<ul style="list-style-type: none"> ◦ Re-seat the harp firmly into the saddle. ◦ Tighten the finial securely. ◦ Disassemble and reassemble the shade, ensuring all clips are engaged.

7. SPECIFICATIONS

Feature	Detail
Brand	Oneach
Model Number	AMZ-T523
Product Dimensions	13"D x 13"W x 27.75"H
Item Weight	8.23 pounds (per lamp)
Material	Metal (Base), Linen Fabric (Shade)
Finish Type	Brushed Steel
Shade Color	Beige
Bulb Base	E26
Max Wattage	60W (Bulb not included)
Switch Type	Rotary Switch
USB Ports	1 x USB-A (5V/2A), 1 x USB-C (5V/2A)
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor

8. WARRANTY AND SUPPORT

The Oneach 27-inch Modern Table Lamps come with a 1-year warranty from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any inquiries regarding your product, please contact Oneach customer service.

Please retain your proof of purchase for warranty validation.