

manuals.plus /

› [iClever](#) /

› [iClever MD360 Dual Mode Wireless Mouse User Manual](#)

## iClever MD360

# iClever MD360 Dual Mode Wireless Mouse User Manual

Model: MD360

## INTRODUCTION

Thank you for choosing the iClever MD360 Dual Mode Wireless Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your mouse to ensure optimal performance. The MD360 mouse offers versatile connectivity options, including 2.4GHz wireless and Bluetooth, allowing seamless switching between multiple devices. Its ergonomic design and advanced features are crafted for comfort and efficiency.

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your iClever MD360 mouse.

- **Left Button:** Standard click function.
- **Right Button:** Context menu function.
- **Scroll Wheel:** Scroll up/down, middle click.
- **DPI Button:** Adjusts cursor sensitivity.
- **Forward Button:** Navigates forward in browsers/applications.
- **Backward Button:** Navigates backward in browsers/applications.
- **Connection Mode Switch:** Located on the bottom, switches between 2.4GHz, Bluetooth 1, and Bluetooth 2 modes.
- **USB Receiver:** For 2.4GHz wireless connection.
- **USB-C Charging Port:** For recharging the internal battery.

# Kopplung mit bis zu 3 Geräten

USB 2.4G + Bluetooth Dual Verbindung



1 USB 2.4Ghz



2 Bluetooth 1



3 Bluetooth 2



  
Bluetooth



  
USB 2.4G

Image: The iClever MD360 mouse, highlighting its ergonomic shape and button layout, including the scroll wheel, DPI button, and side buttons.

## SETUP

### 1. Charging the Mouse

Before first use, or when the battery is low, charge the mouse using the provided USB-C cable.

1. Connect the USB-C end of the cable to the charging port on the front of the mouse.
2. Connect the USB-A end to a USB power adapter or a computer's USB port.
3. The indicator light will show charging status and turn off when fully charged.

# 4-stufig einstellbare DPI

Hochpräziser Sensor und höhere Produktivität



Image: The iClever MD360 mouse being charged via its USB-C port, illustrating the Type-C rechargeable design and built-in 300mAh lithium battery.

## 2. Connecting via 2.4GHz Wireless

This method uses the included USB receiver for a stable wireless connection.

1. Locate the USB receiver stored in the compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Switch the connection mode on the bottom of the mouse to the "2.4G" position.
4. The mouse will automatically connect to your computer. No drivers are required.

## 3. Connecting via Bluetooth

The mouse supports two separate Bluetooth connections (BT1 and BT2), allowing you to pair with up to two Bluetooth-enabled devices simultaneously.



## Maus-Jiggler-Funktion

Verhindern Sie, dass der Computer in den Ruhezustand geht, indem Sie die Mouse Jiggler-Funktion aktivieren

Image: Illustration of the mouse's multi-device pairing capability, connecting to one device via 2.4GHz USB and two devices via Bluetooth (BT1 and BT2).

### Pairing with BT1 or BT2:

1. Switch the connection mode on the bottom of the mouse to either "BT1" or "BT2".
2. Press and hold the connection mode switch for 3-5 seconds until the indicator light flashes rapidly, indicating pairing mode.
3. On your device (computer, tablet, smartphone), open Bluetooth settings.
4. Search for new devices and select "iClever Mouse" (or similar name) from the list.
5. Once paired, the indicator light on the mouse will stop flashing.

## OPERATING INSTRUCTIONS

### 1. Switching Between Connected Devices

To switch between your 2.4GHz connected device and your Bluetooth devices (BT1, BT2), simply move the connection

mode switch on the bottom of the mouse to the desired mode (2.4G, BT1, or BT2).

## 2. DPI Adjustment

The mouse offers four adjustable DPI (Dots Per Inch) levels to control cursor sensitivity. Press the DPI button located on the top of the mouse, behind the scroll wheel, to cycle through the settings.

- **800 DPI:** Slowest cursor speed, ideal for precise tasks.
- **1200 DPI:** Default setting, balanced speed and precision.
- **1600 DPI:** Faster cursor speed for general use.
- **2400 DPI:** Fastest cursor speed, suitable for quick movements.



**Leicht zu transportieren**  
Leichte kabellose Maus für einfachen Transport



**Gewicht**  
**92g**

11.3cm

7.2cm

4.3cm

USB-Empfänger

Image: The iClever MD360 mouse with an arrow pointing to the DPI button, illustrating the four adjustable DPI settings (800, 1200, 1600, 2400) for precise control.

## 3. Jiggler Function

The Jiggler function prevents your computer screen from locking or entering sleep mode. To activate or deactivate this

feature:

1. Press and hold the DPI button for 5 seconds.
2. The mouse will enter/exit Jiggler mode, keeping your computer active.

## Type-C wiederaufladbares Design

Eingebauter **300mAh** Lithium-Akku mit hoher Kapazität für mehr Komfort



Image: A laptop screen with a mouse cursor, demonstrating the Jiggler function which prevents the computer from going into sleep mode.

### 4. Forward/Backward Buttons

Use the side buttons for quick navigation in web browsers and certain applications. The top side button typically functions as "Forward," and the bottom side button as "Backward."

### 5. Silent Click Feature

The iClever MD360 mouse is designed with silent click buttons, minimizing noise during use. This feature allows for a quiet working environment, ideal for offices, libraries, or late-night use.

# Universelle Kompatibilität

Multisystem-Unterstützung Multi-Pairing



iOS



Android



Windows



Mac



Image: The iClever MD360 mouse with visual cues suggesting quiet operation, highlighting its silent click feature for a disturbance-free experience.

## MAINTENANCE

### 1. Cleaning

- Wipe the mouse surface with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners.
- Ensure no liquid enters the mouse's internal components.

### 2. Battery Care

- Charge the mouse regularly to maintain battery health.
- Avoid fully discharging the battery frequently.
- Store the mouse in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

Problem	Solution
Mouse not responding (2.4GHz)	<ul style="list-style-type: none"><li>• Ensure the USB receiver is securely plugged into a working USB port.</li><li>• Check if the mouse is switched to "2.4G" mode.</li><li>• Ensure the mouse is charged.</li><li>• Try a different USB port.</li></ul>
Mouse not responding (Bluetooth)	<ul style="list-style-type: none"><li>• Ensure the mouse is switched to the correct "BT1" or "BT2" mode.</li><li>• Verify Bluetooth is enabled on your device.</li><li>• Re-enter pairing mode on the mouse (hold mode switch for 3-5 seconds) and re-pair with your device.</li><li>• Ensure the mouse is charged.</li></ul>
Cursor movement is erratic or slow	<ul style="list-style-type: none"><li>• Adjust the DPI setting using the DPI button.</li><li>• Clean the optical sensor on the bottom of the mouse.</li><li>• Ensure you are using the mouse on a suitable surface (non-reflective, non-glass).</li></ul>
Jiggler function not working	<ul style="list-style-type: none"><li>• Ensure you are pressing and holding the DPI button for the full 5 seconds to activate/deactivate.</li><li>• Check if the mouse is charged and powered on.</li></ul>

## SPECIFICATIONS

<b>Brand</b>	iClever
<b>Model Name</b>	MD360
<b>Connectivity Technology</b>	Bluetooth, 2.4GHz Wireless (USB)
<b>Color</b>	Black
<b>Motion Detection Technology</b>	Optical
<b>Number of Buttons</b>	7
<b>DPI Levels</b>	800, 1200 (Default), 1600, 2400
<b>Battery Capacity</b>	300mAh Lithium Battery
<b>Charging Port</b>	USB-C
<b>Hand Orientation</b>	Right
<b>Compatible Operating Systems</b>	Windows, Android, iOS, macOS, iPad-OS, Chrome OS

<b>Compatible Devices</b>	MacBook, PC, Smartphone, Tablet, iPad
<b>Weight</b>	92g
<b>Dimensions (L x W x H)</b>	11.3cm x 7.2cm x 4.3cm



i C l e v e r



## Flüster-Klick

Keine Angst vor unangenehmen  
Klickgeräuschen

Image: The iClever MD360 mouse shown with its physical dimensions (11.3cm length, 7.2cm width, 4.3cm height) and weight (92g), emphasizing its portability.

## WARRANTY AND SUPPORT

The iClever MD360 Dual Mode Wireless Mouse comes with a **12-month free warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance.

For technical support, warranty claims, or any inquiries, please contact iClever customer service. Refer to the product packaging or the official iClever website for contact information.

*Please note:* The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.



© 2023 iClever. All rights reserved. Information in this manual is subject to change without notice.