

PEXMOR 21seat-HT2pcs

PEXMOR Heated Stadium Seats Instruction Manual

Model: 21seat-HT2pcs (Standard 21" W, 2-Pack)

Brand: PEXMOR

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your PEXMOR Heated Stadium Seats. These portable seats are designed to provide comfort and warmth during outdoor events, featuring adjustable heating, multiple reclining positions, and convenient storage options. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

- **Power Source:** The heating function requires a USB power bank (not included). Use only standard USB power banks. Ensure the power bank is fully charged before use.
- **Heat Levels:** The heating system offers three adjustable levels: High (131°F), Medium (113°F), and Low (108°F). Monitor heat levels to prevent discomfort or burns, especially for prolonged use or sensitive individuals.
- **Water Exposure:** The seat cover is water-resistant, but avoid submerging the seat or exposing the USB connections to excessive moisture.
- **Stability:** Always use the underneath straps to secure the seat to bleachers or benches to prevent tipping, especially when reclining.
- **Weight Capacity:** Do not exceed the maximum bearing capacity of 330 lbs.
- **Children:** Supervise children when using the heated seat.
- **Storage:** Store the seat in a dry place when not in use. Disconnect the power bank before storing.

3. PACKAGE CONTENTS

Your PEXMOR Heated Stadium Seats package includes:

- 2 x PEXMOR Heated Stadium Seats
- 2 x Carrying Bags

4. PRODUCT FEATURES

- **USB-Powered Heating:** Features a 3-level adjustable heating system for both back and bottom, powered by a standard USB power bank (not included).
- **5 Reclining Positions:** Adjust the backrest to five different angles for personalized comfort.
- **Portable Design:** Lightweight (7.3 lbs per seat) with a folding design, backpack straps, and a dedicated carrying bag for easy transport and storage.
- **Anti-Slip Base:** Water-resistant bottom with an anti-slip surface and underneath straps to secure the seat to bleachers.
- **Integrated Storage:** Includes oversized side pockets for drinks and snacks, a dedicated pocket for a power bank, a USB cable storage pocket, and a large backrest pocket for books or magazines.
- **Durable Construction:** Constructed with a steel frame and 420D water-resistant polyester seat cover.
- **Armrests:** Armrests can be unfolded to extend seating space if desired.

5. SETUP INSTRUCTIONS

1. **Unfold the Seat:** Place the folded seat on a flat surface. Gently pull the backrest upwards until it locks into the desired upright position.
2. **Adjust Recline (Initial):** The seat offers 5 reclining positions. Adjust the backrest by lifting it slightly and moving it forward or backward to engage a different notch.
3. **Secure to Bleachers:** When using on bleachers or benches, locate the adjustable straps underneath the seat. Wrap these straps around the bleacher and secure them with the buckle to prevent the seat from sliding or tipping.
4. **Prepare for Heating:** Locate the USB cable for the heating element. Insert your charged USB power bank (not included) into the designated power bank pocket. Connect the USB cable from the seat to the power bank.

ANTI-SLIP & SAFE

PEXMOR



Underneath Straps
Attach to Bleachers
and Hold Firmly



Anti-slip Bottom
Waterproof and
Prevent Slipping



Image: Securing the seat to bleachers using the underneath straps and highlighting the anti-slip base.

6. OPERATING INSTRUCTIONS

6.1. Adjusting Recline Positions

The seat features 5 adjustable reclining positions. To change the recline angle, slightly lift the backrest and move it to the desired position until it clicks into place. Ensure the seat is stable before use, especially when reclined.

5

ADJUSTABLE POSITION

Reclining for Ultimate Comfort



Bearing Capacity: 330 lbs

Image: Illustration of the five adjustable reclining positions for the stadium seat.

6.2. Using the Heating System

The heating system provides warmth to both the back and bottom of the seat.

1. **Connect Power:** Ensure a charged USB power bank is connected to the seat's USB cable.
2. **Power On:** Press the power button on the heat controller to turn on the heating.
3. **Adjust Heat Level:** Press the 'H/M/L' button to cycle through High (red light, 131°F), Medium (orange light, 113°F), and Low (green light, 108°F) heat settings.
4. **Set Timer:** Press the 'TIME' button to set a timer for 15, 30, or 60 minutes. The heating will automatically turn off after the selected duration.
5. **Power Off:** Press and hold the power button to turn off the heating system. Disconnect the power bank when not in use.

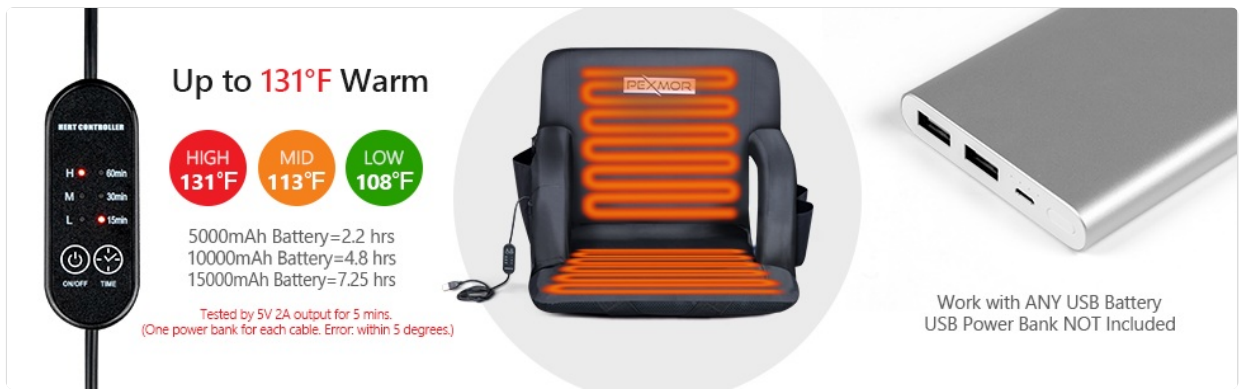


Image: Heat controller details, temperature settings, and estimated battery life with various power banks.

6.3. Utilizing Storage Pockets

The seat is equipped with multiple pockets for convenience:

- **Side Pockets:** Use the oversized side pockets for drinks, snacks, or small personal items. One pocket is removable via a zipper.
- **Power Bank Pocket:** A dedicated pocket is available to securely hold your USB power bank.
- **USB Cable Storage:** A small zippered pocket is provided for storing the USB heating cable when not in use.
- **Backrest Pocket:** A large pocket on the back of the seat can hold magazines, programs, or other larger items.



Drink Holder Side Pocket



Snacks/ Power Bank Pockets



USB Cable Storage Pocket



Large Backrest Pocket

Image: Detailed view of the integrated storage pockets for drinks, power bank, USB cable, and other items.

7. MAINTENANCE

- **Cleaning:** Wipe the seat cover with a damp cloth and mild soap. Do not machine wash or tumble dry. Ensure the seat is completely dry before folding and storing.
- **Storage:** Fold the seat flat and place it in the provided carrying bag. Store in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the seat for any signs of wear or damage, especially to the fabric, frame, and USB cable. Do not use if damaged.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heating system not working.	USB power bank not connected or discharged. USB cable damaged.	Ensure power bank is connected and charged. Try a different USB power bank. Inspect USB cable for damage.

Problem	Possible Cause	Solution
Seat feels unstable or tips.	Not properly secured to bleacher. Recline position too far back without support.	Use the underneath straps to secure the seat. Adjust to a less reclined position if on an unstable surface.
Difficulty folding/unfolding.	Mechanism stuck or obstructed.	Ensure no fabric or objects are obstructing the folding mechanism. Apply gentle, even pressure.

9. SPECIFICATIONS

Feature	Detail
Model Number	21seat-HT2pcs
Product Dimensions	15.8 x 20.5 x 16 inches (L x W x H)
Seat Width	21 inches (Standard)
Item Weight	7.3 pounds (per seat)
Bearing Capacity	330 lbs
Heating Levels	3 Levels (131°F, 113°F, 108°F)
Reclining Positions	5 Positions
Material	Steel frame, 420D water-resistant polyester seat cover
Power Source	USB (Power bank not included)



Image: Product dimensions and weight capacity.

10. WARRANTY AND SUPPORT

For warranty information or customer support regarding your PEXMOR Heated Stadium Seats, please refer to the documentation provided at the time of purchase or contact the seller directly. The seller for this product is Kirmex. For general inquiries or to explore other PEXMOR products, you may visit the official PEXMOR store on Amazon: [PEXMOR Store](#)

