

- Manuals.plus /
- › CROWN SHADES /
- › CROWN SHADES 10x15 Heavy Duty Pop Up Canopy Tent Instruction Manual (Model M150B-S4)

CROWN SHADES M150B-S4

CROWN SHADES 10x15 Heavy Duty Pop Up Canopy Tent

Model: M150B-S4 | Brand: CROWN SHADES

INTRODUCTION

This instruction manual provides essential information for the safe and effective setup, operation, and maintenance of your CROWN SHADES 10x15 Heavy Duty Pop Up Canopy Tent. Please read all instructions carefully before assembly and use to ensure proper functionality and longevity of your product.



Image: The CROWN SHADES 10x15 Heavy Duty Pop Up Canopy Tent, fully set up in a white color, providing shade at an outdoor market.

SAFETY INFORMATION

This product is a portable, freestanding shelter designed for temporary outdoor use. It must be set up, used, and dismantled strictly according to the instructions provided in this manual. Proper anchoring is crucial for stability. Always utilize the included stakes, ropes, and sandbags. Exercise extreme caution in high wind conditions and direct sunlight, as these factors can affect the canopy's stability and material integrity. Always check local regulations regarding temporary shelter usage. Never leave the shelter unattended when in use.

COMPONENTS INCLUDED

Please verify that all components listed below are present before beginning assembly:

- 1x Steel Frame
- 1x Canopy Top (400D Oxford fabric)
- 4x Canopy Sidewalls
- 1x Cover Bag with 4-inch wheels
- 4x Empty Sandbags
- 8x Spikes (Stakes)
- 4x Guy Ropes
- 2x Nuts
- 2x Screw Sleeves
- 2x 4" PU Wheels (for roller bag)
- 8x Utility Hooks
- 2x Hexagon Spanners
- 1x Repair Patch

ACCESSORIES INCLUDED



2x Nut



2x Screw Sleeve



2x 4"PU Wheel



8x Utility Hooks



2x Hexagon
Spanner



1x Steel Frame



1x Cover Bag



4x Empty Sandbags



8x Spikes



4x Guy Ropes



1x Canopy Top



Canopy Sidewall



1x Repair Patch

Image: A visual representation of all accessories included with your canopy tent, such as the frame, canopy top, sidewalls, roller bag, sandbags, stakes, ropes, and tools.

SETUP INSTRUCTIONS

The CROWN SHADES pop-up canopy is designed for quick and easy installation, typically taking under five minutes with two people. Follow these steps for proper assembly:

1. Step 1: Unfold the Frame

Place the folded frame in the desired location. With a person on each side, gently pull the outer legs outwards, allowing the frame to begin expanding. Do not force the frame.

2. Step 2: Install the Canopy Top

Once the frame is partially open, drape the canopy top over the frame. Secure the corners of the canopy top to the

frame's corners. Ensure the fabric is evenly distributed.

3. Step 3: Fully Extend the Frame

Continue pulling the outer legs until the frame is fully extended and the central locking mechanism engages. The pinch-free design allows for safe operation.

4. Step 4: Adjust Height

Locate the height adjustment buttons on each leg. Press the button and slide the inner leg upwards to your desired height. The canopy offers three different height levels. Ensure all four legs are set to the same height.

5. Step 5: Attach Sidewalls (Optional)

If using the sidewalls, attach them to the canopy frame using the provided fasteners (e.g., Velcro straps or zippers).

6. Step 6: Secure the Canopy

For optimal stability, especially in outdoor conditions, use the provided stakes to anchor the legs to the ground. Attach the guy ropes to the canopy frame and stake them securely into the ground at an angle. Fill the sandbags with sand and attach them to the canopy legs for additional weight and stability.

QUICK & EASY INSTALLATION



◀ STEP 1

Unfold the frame

STEP 2 ▶

Install the canopy top



◀ STEP 3

Four-level height adjustment and connect the four sidewalls

Image: A visual guide illustrating the three main steps for quick and easy canopy installation: unfolding the frame, installing the canopy top, and adjusting height with sidewalls.



4 level height
adjustment

Multiple rods hold up
the frame for sturdy
construction

4 inches removable PU
wheels facilitate
easy movement

Enhanced auto-lock
button for quick and easy

OUR PRODUCTS FEATURES

Image: Detailed views of key product features, including the height adjustment mechanism, frame construction, roller bag wheels, and the auto-lock button for secure setup.

OPERATING INSTRUCTIONS

Once assembled, your CROWN SHADES canopy tent is ready for use. The primary operational feature is the height adjustment:

Height Adjustment

To adjust the height of the canopy, locate the pinch-free buttons on each leg. Press the button and carefully slide the inner leg up or down to one of the three available height settings. Ensure all four legs are adjusted to the same level for a stable and even canopy. Always adjust height with at least two people to prevent accidental collapse or injury.

Dismantling and Storage

To dismantle, reverse the setup process. Release the height adjustment buttons and lower the legs. Disengage the

central locking mechanism and gently push the frame inwards until it is fully collapsed. Remove the canopy top and sidewalls. Store all components in the provided roller bag for protection and easy transport.



Image: A close-up shot demonstrating the pinch-free height adjustment button on the canopy leg, allowing for easy and safe height changes.

MAINTENANCE

Proper maintenance will extend the life of your CROWN SHADES canopy tent:

- **Cleaning the Canopy Fabric:** The 400D Oxford fabric is waterproof and UV-protective. Clean the canopy top and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as this can damage the fabric's protective coatings. Allow all fabric components to dry completely before folding and storing to prevent mildew.
- **Frame Care:** The thickened powder-coated steel frame is designed for durability. Inspect the frame regularly for any signs of damage, rust, or loose connections. Clean any dirt or debris from the frame using a damp cloth. Lubricate moving parts periodically if they become stiff.
- **Storage:** Always store the canopy tent in its roller bag in a cool, dry place away from direct sunlight when not in use. Ensure all components are clean and dry before storage.
- **Repair Patch:** Use the included repair patch for minor tears or punctures in the canopy fabric. Follow the instructions provided with the patch for application.



Image: A visual demonstration of the canopy's 400D fabric, highlighting its water-resistant and UV protection (UPF50+) capabilities.



Image: A detailed view of the thickened powder-coated steel tubes, emphasizing the robust construction of the canopy frame.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Canopy is unstable or sways in wind.	Insufficient anchoring; strong winds.	Ensure all legs are staked to the ground. Use guy ropes and sandbags for additional stability. Do not use in severe weather conditions.
Difficulty extending/collapsing frame.	Frame components are stiff or misaligned.	Ensure two people are assisting. Check for any obstructions. Apply a silicone-based lubricant to moving joints if necessary.
Water pooling on canopy top.	Canopy not fully taut or uneven ground.	Ensure the canopy top is stretched tightly over the frame. Adjust leg heights to create a slight slope for water runoff if possible.
Sidewall zippers not functioning correctly.	Zipper teeth are misaligned or damaged.	Carefully realign zipper teeth. Avoid excessive force when zipping. If damaged, consider using the repair patch or contacting customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	CROWN SHADES
Model Number	M150B-S4
Size	10x15 Heavy Duty
Product Dimensions (L x W x H)	120"L x 120"W x 112"H (Note: 10x15 implies 180"L, but product dimensions state 120"L. This may refer to the base footprint or a specific configuration. Please refer to the product packaging for exact dimensions.)
Material	Metal (Frame), 400D Oxford Fabric (Canopy)
Frame Material	Thickened Powder-Coated Steel, Alloy Steel (Poles)
Color	White
Ultraviolet Light Protection	UPF50+
Water Resistance Level	Water Resistant
Number of Guylines	4
Required Assembly	Yes

Feature	Detail
Special Features	Pinch-free design, 4-inch wheels on roller bag, 4 removable sidewalls, utility hooks

OUR PRODUCTS SIZE



Image: A detailed diagram outlining the dimensions (height, length, width) and packed weight of the canopy tent.

WARRANTY AND SUPPORT

2-Year Parts Replacement Warranty

Your CROWN SHADES 10x15 Heavy Duty Pop Up Canopy Tent is backed by a 2-year parts replacement warranty. This warranty covers manufacturer defects. Should any component included with your product not function as intended due to a manufacturing defect, our support team will provide the necessary replacement part along with clear instructions for installation.

Customer Support

For warranty claims, technical assistance, or any questions regarding your product, please contact CROWN SHADES customer support. Refer to your purchase documentation or the official CROWN SHADES website for current contact information.

© 2026 CROWN SHADES. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CP5WSNBB>

More documents and user manuals: <https://manuals.plus/>