

JvKzaen F94

JvKzaen Stylus Pen F94 User Manual

Model: F94

INTRODUCTION

This manual provides instructions for the JvKzaen Stylus Pen F94, an active stylus designed for use with Microsoft Surface devices. It features 1024 levels of pressure sensitivity, palm rejection technology, and customizable buttons for an enhanced digital writing and drawing experience.

PACKAGE CONTENTS

- 1x JvKzaen Stylus Pen F94 (with one tip installed)
- 2x Replacement Tips
- 1x AAAA Battery (pre-installed or included separately)
- 1x User Manual (this document)

SETUP

1. Battery Installation

The JvKzaen Stylus Pen F94 operates on a single AAAA battery. The battery may be pre-installed or included separately in the package.

1. Gently twist the top cap of the pen counter-clockwise to open the battery compartment.
2. Insert the AAAA battery with the positive (+) end facing towards the pen tip.
3. Replace the top cap by twisting it clockwise until secure.

Note: Ensure the battery is inserted correctly to avoid damage to the pen.

Delete and Edit Quickly

Rub away your mistakes and edit easily with eraser and right-click button.

High Precision & Perfect response

HB Tips are more precise and smooth.

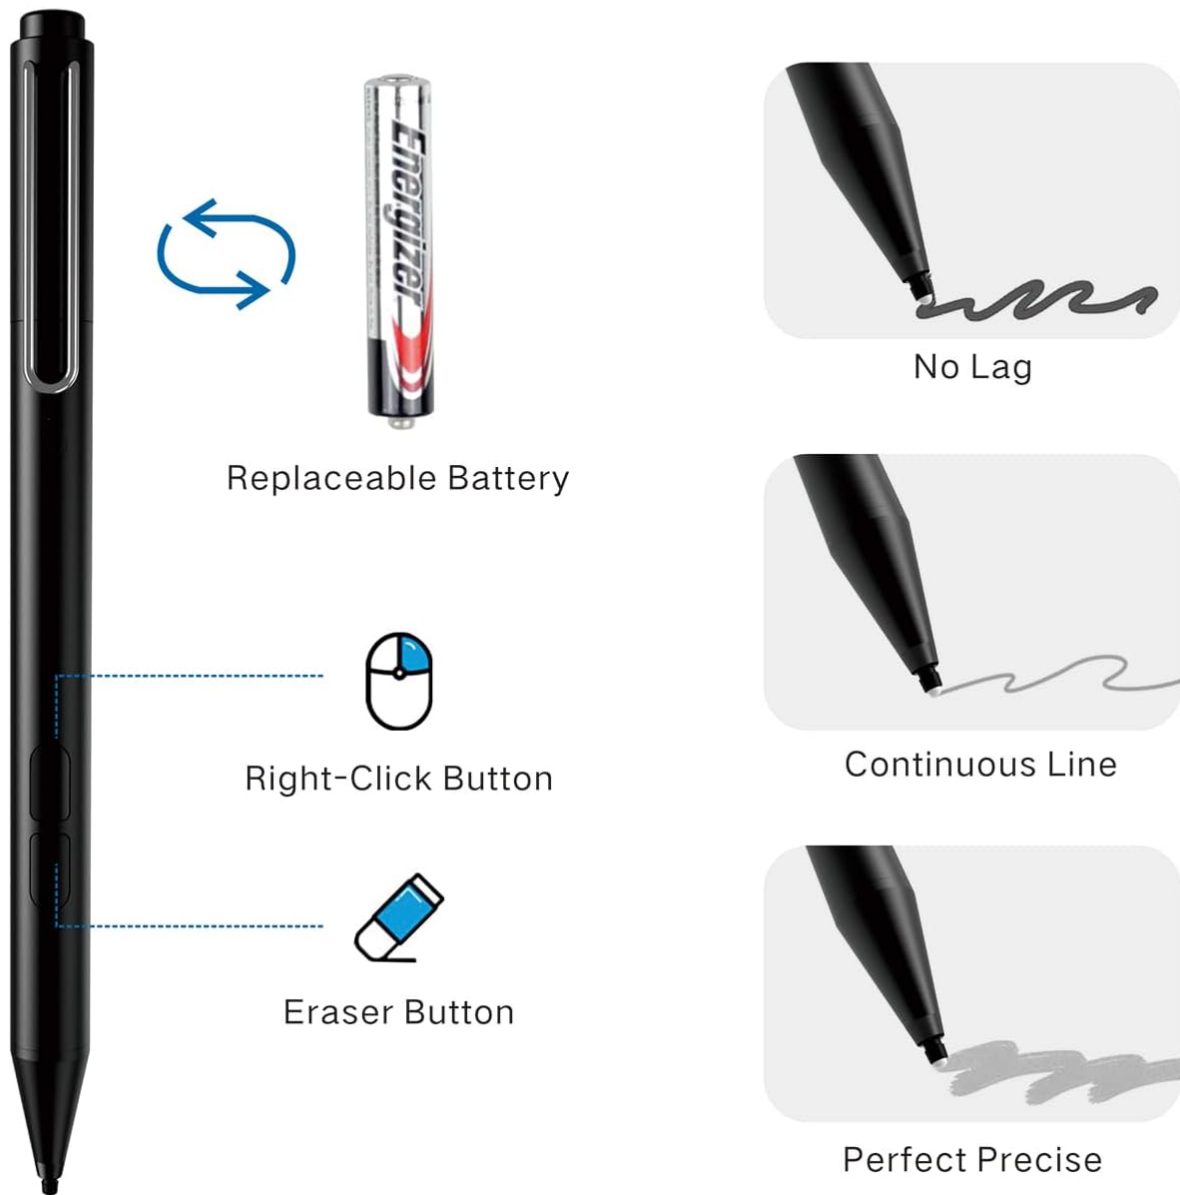


Image: Diagram illustrating the internal battery compartment and external buttons of the stylus pen.

2. Initial Connection (Pairing)

The JvKzaen Stylus Pen F94 utilizes Microsoft Pen Protocol (MPP) technology, which typically allows for automatic connection with compatible Surface devices. No manual Bluetooth pairing is usually required.

1. Ensure your Surface device is powered on and updated to the latest operating system.
2. Simply touch the pen tip to the screen of your compatible Surface device. The pen should be recognized automatically.
3. If the pen does not respond, try restarting your Surface device or replacing the AAAA battery.


3. Replacing Pen Tips (Nibs)

The pen comes with replaceable tips to ensure continuous smooth writing and drawing.

1. Grip the existing pen tip firmly and pull it straight out from the pen body.
2. Select a new replacement tip.
3. Insert the new tip straight into the pen body until it clicks securely into place.

Original Quality Replaceable Nibs

Include a soft and 2 hard nibs, same quality as Microsoft

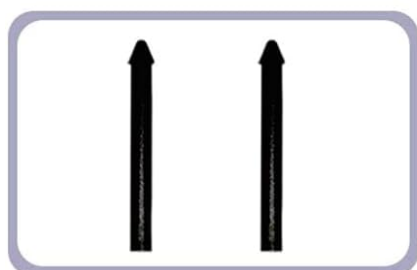

Two Replaceable Nibs

Hot Keys

Replaceable Nib

4.44inch

Image: Diagram detailing the pen's dimensions and showing the included replaceable nibs.

OPERATING INSTRUCTIONS

1. Basic Usage

The JvKzaen Stylus Pen F94 allows for natural writing and drawing on your compatible Surface device. Simply touch the pen tip to the screen to begin interacting with applications.

Super Long Battery Life

1500 hours working time, provides a non-stop using experience



1500 hours
working time



Auto Sleep
for Power Saving



Replaceable Nib



Image: The stylus pen in use with a Microsoft Surface tablet, highlighting its extended battery life.

2. Pressure Sensitivity

The pen supports 1024 levels of pressure sensitivity, allowing for varied line thickness and shading based on the pressure applied to the screen. This feature is ideal for artistic applications and detailed note-taking.

1024 Level Pressure Sensitivity

The thickness of the line is controlled by your strength.

High accuracy, No latency

helps you to write and draw with any details.



1024 Pressure



Stylus Pen

No Pressure



Stylus Pen

Image: Visual representation of how 1024 pressure levels affect line thickness when writing with the stylus.

3. Palm Rejection

The integrated palm rejection technology allows you to rest your hand comfortably on the screen while writing or drawing, preventing unintended marks or interactions. This mimics the natural experience of writing on paper.

Palm Rejection

No gloves! Feel free to rest your hand on the screen.
Just like writing on paper



Image: A person using the stylus pen on a tablet with their palm resting on the screen, showcasing the palm rejection feature.

4. Button Functions

The stylus pen features two side buttons for quick access to common functions:

- **Lower Button:** Functions as an *Eraser*. Press and hold this button while moving the pen over content to erase it.
- **Upper Button:** Functions as a *Right-Click*. Press this button to activate right-click menus or contextual options, similar to a mouse.

One Action Button for Two Hotkeys

Write and draw as you wish without the hassle of deleting.



Right-click Button



Eraser Button



Image: Illustration of the stylus pen's two hotkeys and their respective functions: right-click and erase.

5. Tilt Function

The pen supports tilt functionality, allowing for dynamic shading effects by tilting the pen, similar to using a pencil. This feature provides precise control over shadow and line thickness variation in compatible applications.

Tilt Function

Tilt to get precise control, variation of shadow and line thickness, draw wonderful moments.



Image: Visual guide demonstrating how the tilt function of the stylus pen creates varied line effects based on the angle of use.

COMPATIBILITY

The JvKzaen Stylus Pen F94 is compatible with a wide range of Microsoft Surface devices and other MPP-enabled devices. Please refer to the list below for specific models:

Compatible Models

Microsoft ● Surface Surface 3 ● Surface Pro 3/4/5/6/7/7+/8/9/X/11/12 ● Surface Go Surface Go / Surface Go 2 / Surface Go 3 ● Surface Laptop Laptop / Laptop 2 / Laptop 3 / Laptop 4/ Laptop 5 Surface Laptop Studio ● Surface Book Surface Book / Surface Book 2 / Surface Book 3 ● Surface Studio Surface Studio / Surface Studio 2 / Surface Studio 2+ ● Surface Duo Surface Duo / Surface Duo 2	hp ● HP ENVY 17-ae0xxx / x2 12-e0xxx / x2 12-g0xxx / x360 13z-ag0xxx x360 13m-bd0xxx / x360 15-ar0xxx / x360 15-bp0xxx x36015-bq0xxx / x360 15-bp152nr / x360 15-cn0xxx x36015-cp0xxx / x360 15-dr0xxx / x360 15-ds0xxx x360 15-ds1xxx / x360 15-bp1xx / x360 15m-bp1xx x360 15m-bq021dx / x360 15-ey0000 / x360 15-ey0013dx ● HP Spectre x360 13-ac0xxx / x360 13-ae0xxx / x360 13-ap0xxx x360 15-dq0xxx / x36015-bb0xx / x360 15-ch0xx x360 15-df0xx / x360 16-f1002ns / Folio 13-ak0xxx x2 12-c0xx ● HP Pavilion x360 11-ap0xxx / x360 11m-ad0xx / x36011-ad0xx x360 14-dh0xxx / x360 14-dy0002na / x360 14-dy0034na x360 14-ek0033dx / x36014m-ba0xx / x360 14-ba0xx x360 14m-cd0xx / x360 15-br0xx / x360 15-cr0xx x360 16-f1002ns OTHERS ● OTHERS SONY VAIO Z Flip(VJZ13BX0211B) MSI Summit E13 Flip Evo-A12M	ASUS ● ASUS Vivobook Flip 12 R211NA / 14 R211NA 14 TP420UA / 14 TM420UA 14 TP412FA / TN3402QA / TP470EA TP510UA / TP510UQ / TP203NA TP401NA / TP401CA / TP410UA ● ASUS ZenBook Flip UX560UA / UX560UQ / UX560UX UX561UA / UX561UN / UX561UD 13 UX363J / 13 UX363EA / 14 UX461F 15 UX563 / 15 UX562UG ● ASUS Transformer 3 Pro T303UA / 3 T305CA / Mini T102HA/ Mini T103HA ● ASUS ZenBook UX370UA / UX461UA UX550VE/ UX550VD ● ASUS Notebook Q405UA/ Q325UA ● ASUS Transformer Pro T304UA ● ASUS ROG Flow X13/ Z13 ● ASUS Vivobook Pro X580VD	DELL ● Inspiron 7600 / 7591/ 7590 / 7586 / 7573 / 7506 / 7500 7405 / 7415 / 7391 / 7390/ 7386 / 7373 / 7306 7300/ 5591 / 5582 / 5491 / 5490 / 5485 / 5482 5400*/ 5406* / 7370* / 7570* / 5000** (Configurations with HD displays do not support active pen.) 5378# / 5379# / 5578# / 5579# / 7378# / 7579# (# Only models that have the label "Support Active Pen" will support the stylus.) ● Latitude 3390 / 3190 / 3120
---	---	--	---

Image: Comprehensive table detailing compatible device models for the JvKzaen Stylus Pen F94.

Note: Not compatible with Surface Laptop Go, Surface Laptop Go 2, and other touch screen computers not listed as compatible. Configurations with HD displays do not support active pen. Only models that have the label "Support Active Pen" will support the stylus.

MAINTENANCE

1. Battery Replacement

When the pen's performance degrades or it stops responding, it may be time to replace the AAAA battery. Follow the steps outlined in the 'Battery Installation' section under Setup.

2. Nib Replacement

If the pen tip becomes worn or damaged, replace it using the spare tips provided. Refer to the 'Replacing Pen Tips (Nibs)' section under Setup for detailed instructions.

3. Cleaning

To clean the pen, gently wipe the body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, which could damage the finish or internal components.

4. Storage

Store the pen in a safe place when not in use to prevent damage. The pen's design includes a clip for convenient portability and secure attachment to notebooks or pockets.

TROUBLESHOOTING

- **Pen not responding:**
 - Ensure the AAAA battery is correctly installed and has sufficient charge. Replace if necessary.
 - Restart your Surface device.
 - Verify that your device is listed in the 'Compatibility' section.
- **Lag or Inaccuracy:**
 - Check for any physical damage to the pen tip. Replace if worn.
 - Ensure your Surface device's drivers are up to date.
 - Close any demanding applications running in the background.

- **Buttons not working:**
 - Confirm the battery is functional.
 - Test the buttons in different applications to rule out software-specific issues.
- **Accidental marks with palm:**
 - Ensure the application you are using supports palm rejection. Most modern drawing/note-taking apps do.
 - Verify your device's settings for pen input are correctly configured.

SPECIFICATIONS

Feature	Detail
Model Number	F94
Dimensions (L x W x H)	5.66 x 0.29 x 0.05 inches
Item Weight	0.741 ounces (21 Grams)
Material	Aluminum
Battery Type	1 x AAAA Battery (included)
Battery Life (Standby)	Up to 240 days
Pressure Sensitivity	1024 Levels
Technology	Microsoft Pen Protocol (MPP)
Features	Palm Rejection, Eraser Button, Right-Click Button, Replaceable Nibs

WARRANTY AND SUPPORT

JvKzaen provides a worry-free 12-month warranty for this product. For any inquiries or support needs, please contact customer service. Quick replies are typically provided within 12 hours.

For further assistance, please refer to the contact information provided with your purchase or visit the official JvKzaen support channels.

© 2023 JvKzaen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question