

TEMKIN 124511425

TEMKIN 8L Air Fryer User Manual

MODEL: 124511425

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe operation and prevent injury or damage. Keep this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the main unit, cord, or plug in water or any other liquid to prevent electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always place the appliance on a stable, heat-resistant surface.
- Ensure there is adequate ventilation around the appliance during use. Maintain a minimum distance of 10 cm (4 inches) from walls and other appliances.
- Hot air is released through the air outlet vent at the back of the appliance. Keep a safe distance from this vent.
- Do not cover the air inlet or air outlet vents while the appliance is operating.
- The basket and accessories become hot during use. Always use oven mitts or a heat-resistant mat when handling hot components.
- Do not overfill the basket.
- This appliance is for household use only. Do not use outdoors.

2. PRODUCT OVERVIEW

The TEMKIN 8L Air Fryer utilizes 360° rapid air circulation technology to cook food with significantly less oil, offering a healthier alternative to traditional frying. It features a user-friendly touch screen interface with preset cooking options.

Key Features:

- **High-Speed Air Circulation:** Ensures even cooking and crispy results with up to 80% less fat.
- **Digital Touch Screen:** Intuitive LED display for easy operation.
- **Adjustable Temperature & Timer:** Temperature range of 60-200°C (140-400°F) and timer from 1-60 minutes.
- **6 Preset Cooking Options:** Dedicated settings for French fries, baking, chicken wings, shrimp, fish, and steak.
- **Non-Stick Basket:** Easy to clean and dishwasher safe.
- **Over-Heat Protection:** Automatic shut-off for enhanced safety.
- **Large Capacity:** 6.5L tray capacity, suitable for 4-8 people.

Product Components:



Image: Front view of the TEMKIN 8L Air Fryer, highlighting the sleek design and the digital touch control panel at the top.



Image: Diagram illustrating the six preset cooking functions available on the air fryer, including French fries, chicken wings, steak, whole chicken, chicken legs, and pizza, along with suggested serving sizes.

3. SETUP

- Unpack:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
- Clean:** Before first use, clean the basket and tray with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Refer to the 'Cleaning and Maintenance' section for detailed instructions.
- Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper air circulation. Do not place it directly under cabinets or near flammable materials.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

- Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to allow for

proper air circulation.

2. **Insert Basket:** Slide the basket firmly back into the air fryer until it clicks into place.
3. **Power On:** Plug in the air fryer. The digital display will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature (60-200°C).
 - Use the timer control buttons (usually '+' and '-') to set the desired cooking time (1-60 minutes).
5. **Start Cooking:** Press the start/pause button to begin the cooking cycle. The air fryer will automatically preheat if necessary and then start cooking.
6. **Shake/Flip (Optional):** For some foods, it is recommended to shake or flip the contents of the basket halfway through the cooking time to ensure even browning. Carefully pull out the basket, shake or flip the food, and then reinsert the basket. The air fryer will resume cooking automatically.
7. **End of Cooking:** The air fryer will beep when the cooking time is complete. Carefully pull out the basket and transfer the cooked food to a plate.

4.2 Using Presets

The air fryer comes with 6 preset cooking options for common dishes. These presets automatically set an optimal temperature and time for specific foods.

One Touch Operate with 6 Presets

Temp/ time can be adjusted, easily make your favorite food by our air fryer



Image: Close-up of the air fryer's touch control panel, showing the icons for the six preset functions: French fries, potato, chestnut, baking, chicken wings, shrimp, fish, and steak. Below, examples of these foods are displayed.

1. **Select Preset:** After placing food in the basket and powering on the unit, press the desired preset icon on the touch screen. The display will show the pre-programmed temperature and time for that selection.
2. **Adjust (Optional):** You can adjust the temperature and time of a preset using the '+' and '-' buttons if you prefer different settings.
3. **Start Cooking:** Press the start/pause button to begin cooking.



Image: The TEMKIN 8L Air Fryer in operation, showing a whole chicken being cooked inside the basket with visual indicators of 360° hot air circulation.

5. CLEANING AND MAINTENANCE

Regular cleaning of your air fryer will ensure optimal performance and extend its lifespan.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Tray:** The non-stick basket and tray are dishwasher safe. Alternatively, wash them with warm water, a mild dish soap, and a non-abrasive sponge. Rinse thoroughly and dry

completely before reassembling.



Image: A hand holding the air fryer basket under running water, demonstrating the ease of cleaning the non-stick surface.

- 3. **Clean Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a mild dish soap and a soft brush. Do not use abrasive cleaners or metal scouring pads.
- 4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- 5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled. Food was not shaken/flipped.	Do not overfill the basket; cook in smaller batches if necessary. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use. High fat content food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
Food is not crispy.	Temperature too low or time too short. Too much moisture in food.	Increase temperature or cooking time. Pat food dry before air frying. Lightly brush with oil for extra crispiness.

7. SPECIFICATIONS

Feature	Detail
Model Number	124511425
Brand	TEMKIN
Capacity (Tray)	6.5 Liters
Rated Power	1400W
Rated Frequency	50HZ
Temperature Range	60-200°C (140-400°F)
Timer Range	1-60 minutes
Control Method	Touch Screen
Material	Healthy PP Material with Food-Grade 304 + Plastic
Product Dimensions	25 x 26 x 30 cm (approximately 9.8"D x 10.2"W x 11.8"H)
Item Weight	4 Kg (approximately 8.8 lbs)
Non-stick Coating	Yes
Dishwasher Safe Parts	Basket and Tray

8. WARRANTY AND CUSTOMER SUPPORT

TEMKIN is committed to providing quality products and friendly customer service. If you have any questions about the product, before, during, or after the sale, please contact us promptly. We aim to provide a satisfactory response within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official TEMKIN website.

