

[Manuals.plus](#) /

› [iClever](#) /

› iClever MD360 Ergonomic Bluetooth Mouse User Manual

iClever MD360

iClever MD360 Ergonomic Bluetooth Mouse User Manual

Model: MD360 | Brand: iClever

1. INTRODUCTION

Thank you for choosing the iClever MD360 Ergonomic Bluetooth Mouse. This wireless mouse is designed for enhanced productivity and comfort, featuring multi-device connectivity, adjustable DPI settings, and an integrated mouse jigglers function. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x Dual Mode Mouse
- 1 x USB Receiver (stored inside the mouse)
- 1 x USB-A to USB-C Cable

3. PRODUCT OVERVIEW

Familiarize yourself with the various components of your iClever MD360 mouse:



Detailed view of the iClever MD360 mouse, highlighting its buttons and features including Silent Click, DPI adjustment, connection button, forward/backward buttons, power switch, and the USB receiver compartment.

Silent Click Buttons: Left and right mouse buttons designed for quiet operation.

DPI Button: Adjusts cursor sensitivity (800/1200/1600/2400 DPI).

Scroll Wheel: For vertical scrolling.

Forward/Backward Buttons: For navigation in web browsers or file explorers.

Connect Button: Used for pairing in Bluetooth mode.

Power Switch: ON/OFF switch for the mouse.

2.4G USB Receiver: Stored in a compartment on the bottom of the mouse.

USB-C Charging Port: For recharging the internal battery.

4. SETUP

4.1 Charging the Mouse

Before first use, it is recommended to fully charge the mouse. The mouse features a built-in 300mAh high-capacity lithium battery.

- Connect the provided USB-A to USB-C cable to the mouse's USB-C charging port and a USB power source (e.g., computer USB port, wall adapter).
- A full charge takes approximately 2 hours and provides up to 3 months of use.
- The mouse has an auto-sleep function to conserve power during inactivity.

USB-C Rechargeable Design

Built-in **300mAh** high-capacity lithium battery provide more convenient



The iClever MD360 mouse being charged via its USB-C port.

4.2 Connecting the Mouse

The iClever MD360 supports dual-mode wireless connection (2.4G USB and Bluetooth) and can connect to up to 3 devices.

Pair up to 3 Devices

USB 2.4G + Bluetooth Dual Connection



The iClever MD360 mouse offers versatile connectivity options for multiple devices.

2.4G USB Connection:

1. Locate the USB receiver in the compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on the bottom.
4. The mouse should automatically connect to your computer.

Bluetooth Connection (BT1/BT2):

The mouse supports two Bluetooth channels (BT1 and BT2) for connecting to different devices.

1. Turn on the mouse using the power switch on the bottom.
2. Press the 'Connect' button on the bottom of the mouse to switch to either BT1 or BT2 mode. The indicator light will flash slowly.
3. On your device (computer, tablet, smartphone), go to Bluetooth settings and enable Bluetooth.
4. Search for new devices. The mouse will appear as "iClever MD360".

5. Select "iClever MD360" to pair. Once connected, the indicator light will stop flashing.
6. Repeat these steps for the second Bluetooth channel (BT2) if connecting another device.

Universal Compatibility

Multi-system support Multi-pairing



iOS



Android



Windows



Mac



The iClever MD360 mouse offers universal compatibility across multiple platforms and devices.

5. OPERATING THE MOUSE

5.1 DPI Adjustment

The mouse features 4 adjustable DPI levels (800/1200/1600/2400) to suit your precision needs. Press the DPI button located behind the scroll wheel to cycle through the settings.

4-Level Adjustable DPI

High-precision sensor and high productivity



Adjust the mouse sensitivity with the 4-level adjustable DPI settings.

5.2 Mouse Jiggler Function

The integrated mouse jiggler function prevents your computer from entering sleep mode or screen lock, keeping your status active during breaks.



Mouse Jiggler Function

Prevent the computer to sleep mode by activating Mouse Jiggler function

The mouse jiggler function keeps your computer active by simulating mouse movement.

Activating/Deactivating Jiggler Mode:

1. To activate, hold the DPI button for 5 seconds. The indicator light on the mouse will turn red, and the cursor will begin to move irregularly on screen.
2. To deactivate, hold the DPI button for another 5 seconds. The red indicator light will turn off, and the mouse will return to normal operation.

Your browser does not support the video tag.

Video demonstrating how to activate and deactivate the mouse jiggler function on the iClever MD360 mouse.

5.3 Multi-Device Switching

To switch between connected devices (2.4G USB, BT1, BT2), simply press the 'Connect' button on the bottom of the mouse. The mouse will cycle through the connected channels.

5.4 Silent Click

The iClever MD360 features silent click buttons, providing a quiet working environment without disruptive clicking sounds.



i C l e v e r



Whisper-Click

No worry to make
nosiy cliking sound

The iClever MD360 mouse is designed for quiet operation with 'whisper-click' buttons.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the mouse frequently. Recharge when the battery indicator is low.
- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery. Store in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Solution
Mouse not responding (2.4G)	Ensure the USB receiver is securely plugged in. Try a different USB port. Ensure the mouse is turned ON. Recharge the mouse.
Mouse not responding (Bluetooth)	Ensure Bluetooth is enabled on your device. Ensure the mouse is in BT pairing mode (indicator flashing). Forget the device in your Bluetooth settings and re-pair. Recharge the mouse.
Cursor movement is erratic or slow	Check the DPI setting and adjust if necessary. Ensure the mouse sensor is clean. Use the mouse on a suitable surface.
Mouse Jiggler not working	Ensure you hold the DPI button for 5 seconds until the red indicator light appears.
Cannot switch between devices	Ensure all devices are properly paired to their respective channels (2.4G, BT1, BT2). Press the 'Connect' button firmly.

8. SPECIFICATIONS

Feature	Detail
Model	MD360
Connectivity Technology	Bluetooth, 2.4G USB Receiver, Dual Mode Wireless Connection
DPI Levels	800 / 1200 / 1600 / 2400
Special Features	Mouse Jiggler, Pair up to 3 Devices, USB-C Charge, Silent Click
Movement Detection	Optical
Battery	Built-in 300mAh Rechargeable Lithium Battery
Charging Port	USB-C
Product Dimensions	4.45 x 2.83 x 0.1 inches (11.3 x 7.2 x 0.25 cm)
Item Weight	3.25 ounces (92 grams)
Compatibility	Windows, Mac, iOS, Android, ChromeOS

9. WARRANTY AND SUPPORT

iClever products come with a standard warranty. For detailed warranty information, technical support, or customer service inquiries, please refer to the warranty card included with your product or visit the official iClever website. Do not attempt to disassemble or repair the device yourself, as this may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question