

Pomya Pomyavcxo8su94w-12

Pomya Digital Camera HD 1080P 44M Instruction Manual

Model: Pomyavcxo8su94w-12

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Pomya Digital Camera HD 1080P 44M. Please read this manual thoroughly before operating the camera and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Digital Camera (Model: Pomyavcxo8su94w-12)
- Lithium-Ion Battery (NP-6L, 700mAh)
- USB Charging Cable
- Charging Plug (US Plug 100-240V)
- Wrist Strap
- Storage Bag
- Cleaning Cloth
- Instruction Manual



Image: Pomya Digital Camera and its accessories, including the camera, battery, charging cable, power adapter, wrist strap, storage bag, and cleaning cloth.

Your browser does not support the video tag.

Video: An overview of the Pomya Digital Camera package contents and initial setup steps, including battery and memory card insertion.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the NP-6L Lithium-Ion battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.

3.2 Charging the Battery

1. Connect the USB charging cable to the camera's Type-C charging interface.
2. Connect the other end of the USB cable to the provided charging plug or a compatible 5V 1A USB

power source.

3. The charging indicator light will illuminate during charging and turn off when the battery is fully charged.
4. A full charge provides approximately 150 minutes of photography or 60 minutes of video recording.

3.3 Memory Card Installation

The camera supports up to a 32GB memory card (not included).

1. Locate the memory card slot, usually adjacent to the battery compartment.
2. Insert the SD memory card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently press the card until it springs out.

3.4 Turning the Camera On/Off

1. To turn on, press and hold the Power button (ON/OFF) located on the top of the camera.
2. To turn off, press and hold the Power button again.



Image: Labeled diagram showing the camera's controls and their respective functions for easy operation.

4. BASIC OPERATION

4.1 Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.4-inch IPS display.
3. Press the Shutter button halfway down to allow the camera to autofocus.
4. Press the Shutter button fully to capture the photo.

4.2 Recording Videos

1. Turn on the camera.
2. Press the Mode button to switch to video recording mode.
3. Press the Shutter button to start recording. Press it again to stop.

4.3 Using Digital Zoom

The camera features 16X digital zoom.

1. While in photo or video mode, press the 'W' button to zoom out or the 'T' button to zoom in.



Image: Demonstration of the camera's 16X digital zoom, showing varying levels of magnification on a subject.

4.4 Special Features

- **Smile Face Catch:** Automatically detects and captures a photo when a smile is detected.
- **Automatic Beauty:** Enhances facial features for improved portrait shots.
- **Multi Color Filter:** Apply various color effects to your photos.
- **Electronic Anti-Shake:** Helps reduce blur caused by camera movement.
- **Time-lapse:** Capture a series of images over time to create a time-lapse video.
- **Continuous Shooting:** Take multiple photos in quick succession.



Image: Visual representation of continuous shooting, time-lapse settings, and face/smile detection features.

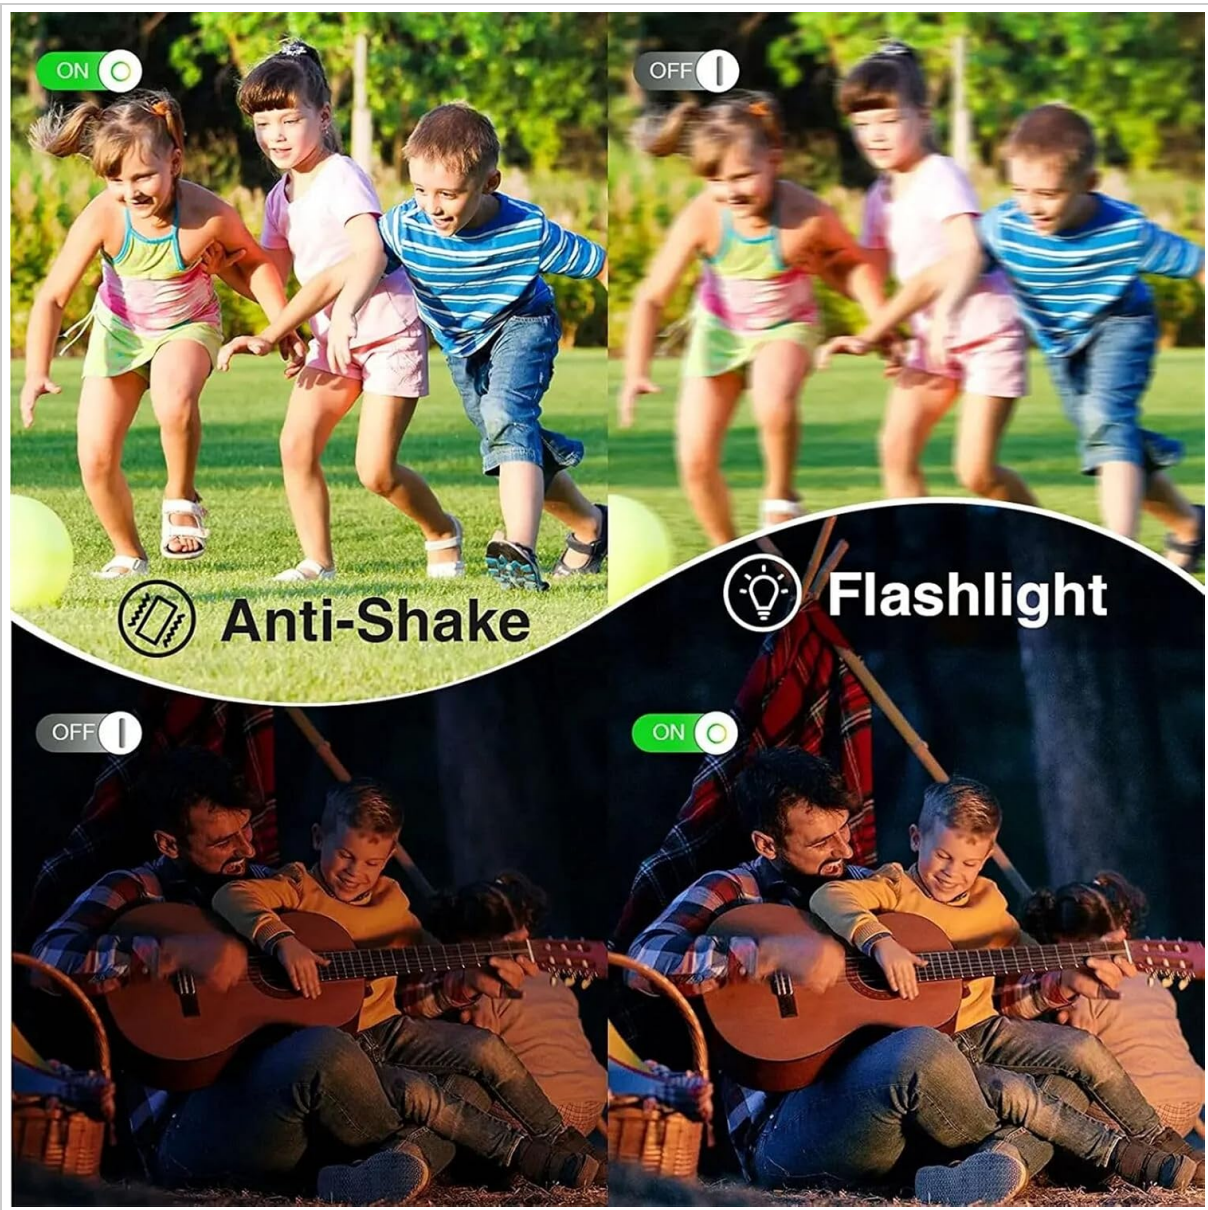


Image: Comparison shots illustrating the effectiveness of the Anti-Shake function and the use of the built-in flashlight.

your browser does not support the video tag.

Video: A demonstration of the camera's various features, including its 1080P video capability and 16X digital zoom.

5. MAINTENANCE

5.1 Cleaning the Camera

- Use the provided cleaning cloth to gently wipe the camera body and screen.
- For stubborn smudges, slightly dampen the cloth with water or a lens cleaning solution (do not spray directly on the camera).
- Avoid using abrasive materials or harsh chemicals.

5.2 Battery Care

- Charge the battery fully before first use.
- Do not expose the battery to extreme temperatures.
- If storing the camera for an extended period, remove the battery.

5.3 Storage

- Store the camera in the provided storage bag to protect it from dust and scratches.
- Keep the camera in a cool, dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Solution
Camera does not turn on.	Ensure the battery is correctly inserted and fully charged.
Cannot take photos/videos.	Check if a memory card is inserted and has sufficient free space. Ensure the battery has enough charge.
Images are blurry.	Ensure the lens is clean. Use the electronic anti-shake feature. Hold the camera steady.
Screen is blank or frozen.	Turn the camera off and then on again. If unresponsive, remove and reinsert the battery.

7. SPECIFICATIONS

Feature	Detail
Model Name	Pomyavcxo8su94w-12
Photo Sensor Resolution	44 MP
Video Resolution	1080p
Digital Zoom	16x
Screen Size	2.4 Inches (IPS Display)
Image Stabilization	Digital
Autofocus	Yes
Battery Type	Lithium Ion (NP-6L)
Battery Capacity	700 mAh
Charging Interface	Type-C
Storage Support	Up to 32GB Memory Card (SD)
File Format (Image)	JPEG
File Format (Video)	AVI
Special Features	Automatic Beauty, Smile Face Catch, Multi Color Filter
Auto Power Off	3 Minutes, 5 Minutes, 10 Minutes

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries, please reach out to the seller or manufacturer directly.