

[manuals.plus](#) /

› [Greluma](#) /

› [Greluma W3230 Digital Temperature Control User Manual](#)

Greluma W3230

Greluma W3230 Digital Temperature Control User Manual

Model: W3230 | Brand: Greluma

1. INTRODUCTION

This manual provides detailed instructions for the Greluma W3230 DC 12V Digital Temperature Control module. This device is designed for precise temperature regulation, offering both heating and cooling control capabilities. It features an LED display for real-time temperature monitoring and easy parameter adjustment.



Image 1.1: Two Greluma W3230 Digital Temperature Controllers. Each unit features a digital display, control buttons, and an attached NTC 10K sensor probe.

2. PRODUCT OVERVIEW

The W3230 temperature controller features a clear LED display and intuitive controls for setting and monitoring temperature. The top digital tube displays the actual measured temperature (PV), while the bottom digital tube shows the preset temperature (SV).



W3230 Temperature controller instruction manual
 Temperature control range: -55° C~120° C
 Temperature control accuracy: 0.1 ° C
 Display color: red - blue
 Working power supply: **DC12V**
 Sensor: NTC 10K 1 meter (with probe)
 Product Size: 79.2mm×41.9mm×26.3mm
 Hole Size: 72.1mm×39.2mm
 product weight: 52g (12V/24V) , 59g (110V~220V)
 Operation and display panel



Code	Function	Set range	Default
P0	Heat/Cool	H/C	C
P1	Backlash	0.1°C~30°C	0.1°C
P2	Set upper limit	-55°C~120°C	120°C
P3	Set lower limit	-55°C~120°C	120°C
P4	Calibration	-10°C~10°C	0°C
P5	Delayed start	0~10min	0
P6	Alarm temperature	-55°C~120°C	120°C
P7	Data lock	ON/OFF	OFF
P8	Factory reset	ON/OFF	OFF

Warning code

Code	Reason for error	Solution
HHH	Temperature exceeds alarm temperature	The temperature drops below the alarm temperature and returns to normal.
LLL	No temperature sensor detected	Replacement reconnect temperature sensor

Operation guide

- Short press "SET" small digital tube to flash, press "△" or "▽" to set the target temperature, press "Standby" button or no operation to save the setting within 3 seconds.
- Press and hold "SET" to enter the code setting mode, press "△" or "▽" to switch the code. After selecting, press "SET" to enter the code setting. After setting, press "Standby" button or no operation to save the setting within 3 seconds.
- The last parameter setting is saved by default after shutdown.
- restore the factory settings: press and hold "SET" to power on.
- When the module is powered on, it will start directly. After power-on, press and hold the "standby" button, the module will enter "sleep" or "wake up"; in case of power failure, the module will run automatically after power recovery, no need to start manually.

****The working power supply voltage must be connected according to the standard voltage of the label, otherwise the module will be damaged easily.**

Image 2.1: Front panel of the W3230 controller. Key components include the "PV" (Process Value) display for actual temperature, "SV" (Set Value) display for target temperature, "SET" button, Up/Down arrow buttons, and a "Restart" button. An "OUT" indicator light signifies relay status.

2.1. Components and Display

- Digital Tube (Top - PV):** Displays the actual measured temperature value.
- Digital Tube (Bottom - SV):** Displays the preset target temperature.
- Indicator Light (OUT):**
 - Off:** The relay is disconnected.
 - On:** The relay is closed.
- NTC 10K Sensor Probe:** Used for accurate temperature measurement.

2.2. Key Functions

- SET Button:** Used to enter and confirm parameter settings.
- Up (▲) Button:** Increases values or navigates through settings.
- Down (▽) Button:** Decreases values or navigates through settings.
- Restart Button:** Resets the device.

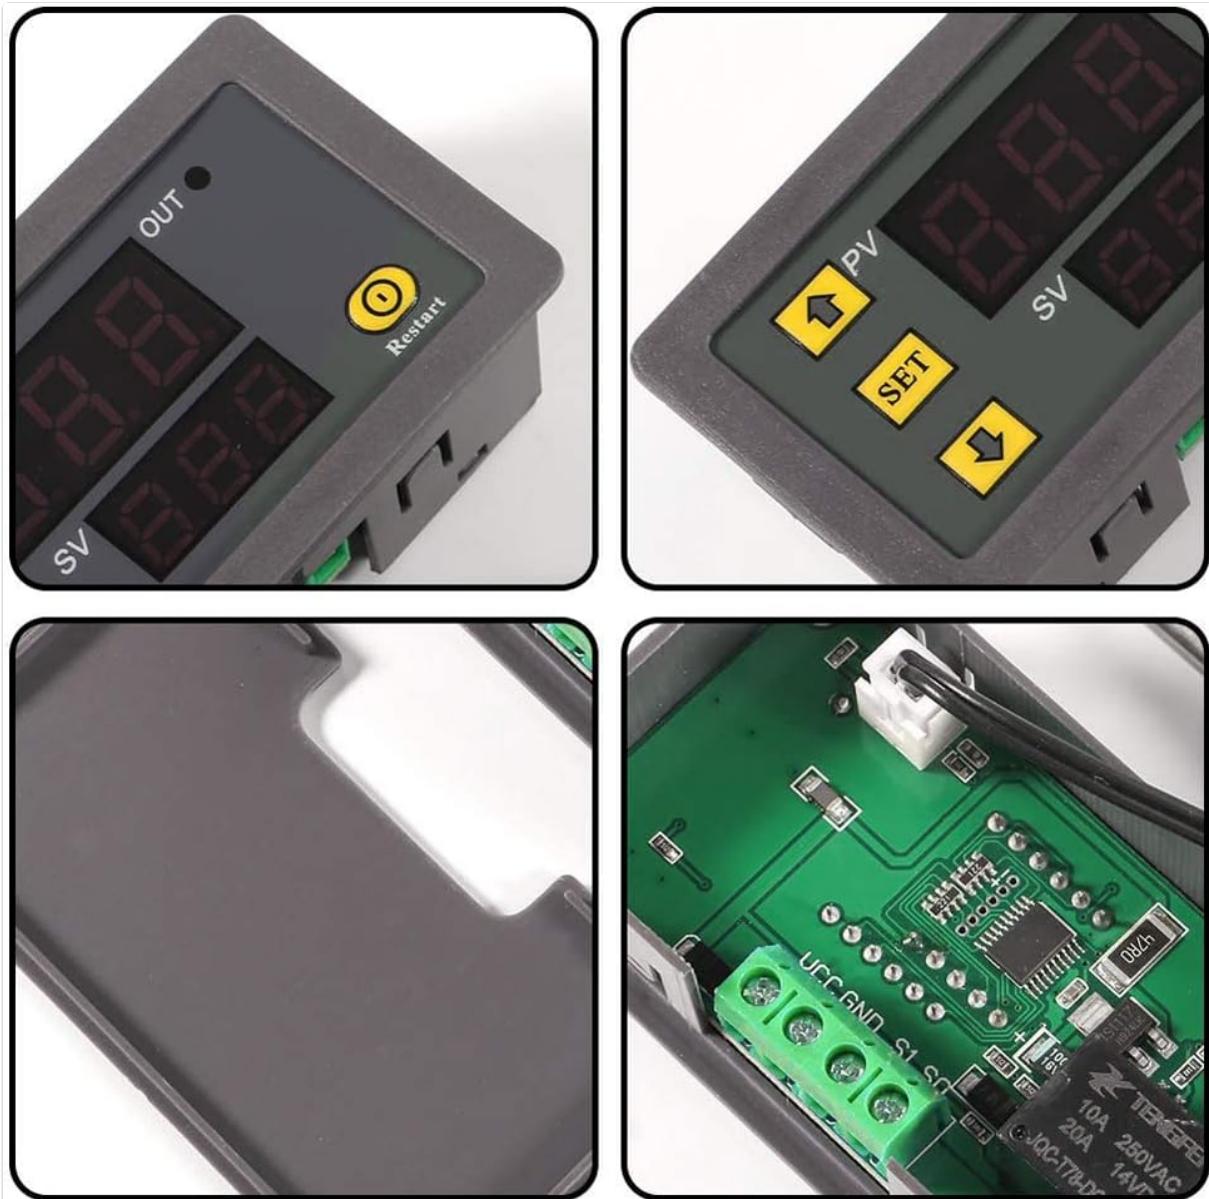


Image 2.2: Detailed views of the W3230. Shows the digital display, control buttons, the rear casing, and the internal circuit board with wiring terminals.

3. SPECIFICATIONS

Parameter	Value
Model	W3230
Input Power	DC 12V
Output	Relay Plug Capacity 20A 12V
Temperature Control Range	-50°C to 110°C
Control Accuracy	0.1°C
Measurement Input	NTC 10K Sensor Probe
Display Type	LED Digital Display
Environmental Requirements	-10 ~ 60°C, humidity 20% ~ 85% RH

Parameter	Value
Dimensions (approx.)	79mm x 43mm x 26mm (3.11" x 1.69" x 1.02")



Code table		
Function	Set range	Default
Heating/Cooling:	H/C	C
Return Difference:	0.1-15	2
Setting limits to the maximum:	110	110
Setting limits to the minimum:	-50	-50
Temp. Correction:	-7.0~7.0	0
Delay Start:	0-10min	0

Image 3.1: W3230 specifications including control accuracy, measurement input, resolution, temperature control range, output capacity, and environmental requirements. Also includes a code table for various functions.

4. SETUP AND INSTALLATION

Proper circuit connection is crucial for the safe and correct operation of the W3230 temperature controller. Always ensure the power supply and load are connected according to the diagram.

4.1. Wiring Diagram

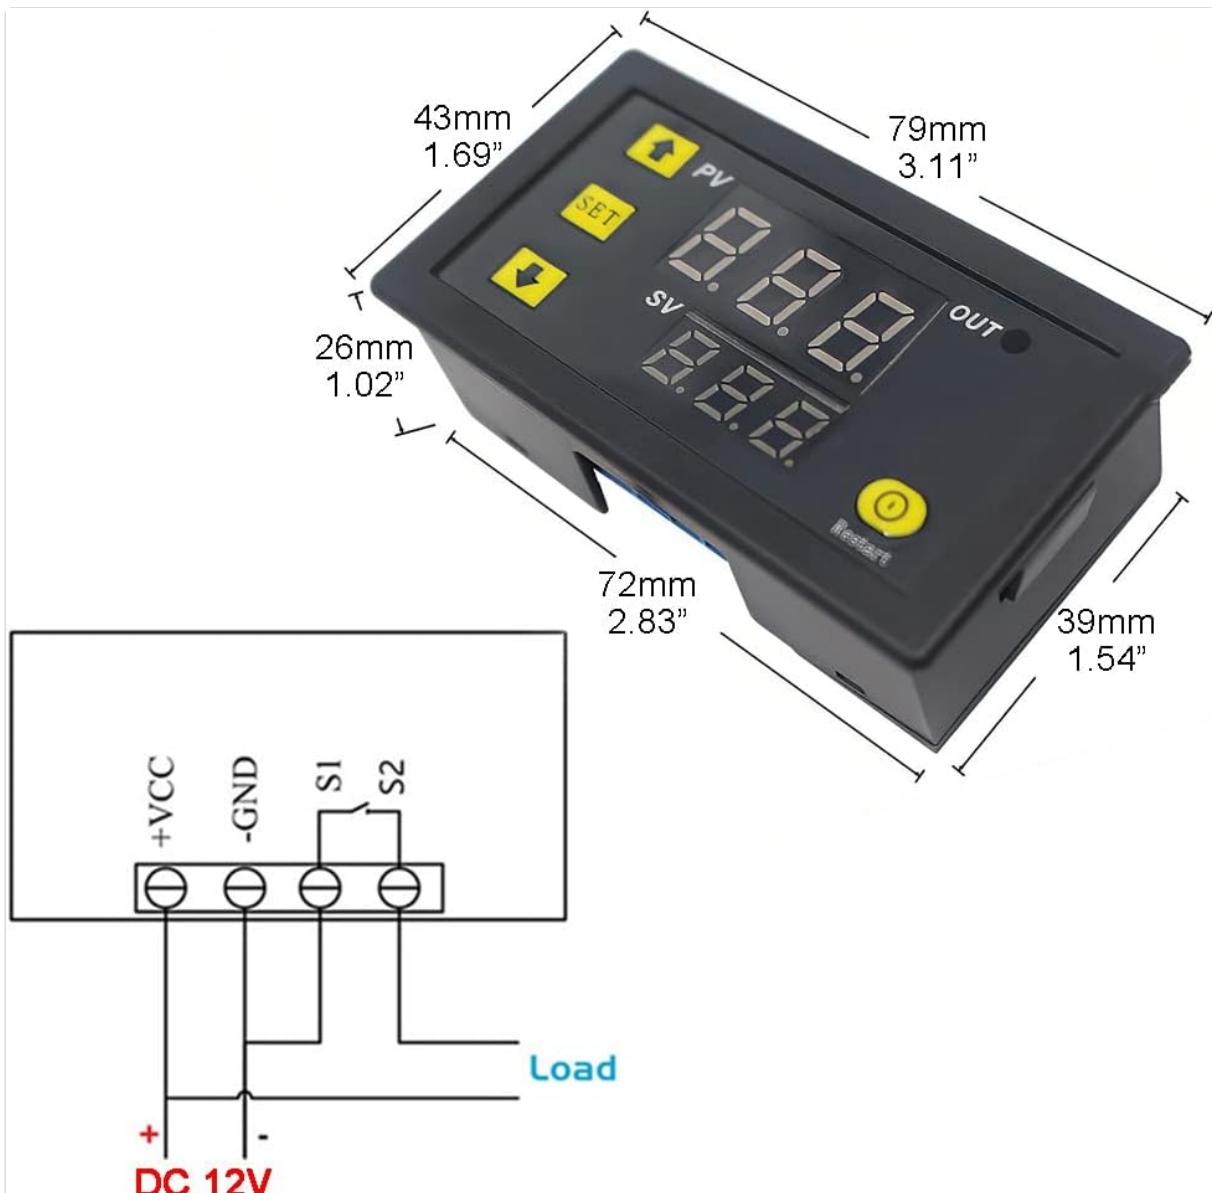


Image 4.1: Wiring diagram for the W3230. Connect DC 12V to +VCC and -GND terminals. The load is connected to S1 and S2 terminals, which are the relay output.

Connection Steps:

1. Connect the DC 12V power supply to the **+VCC** and **-GND** terminals. Ensure correct polarity.
2. Connect your load (e.g., heating element, cooling fan) to the **S1** and **S2** terminals. These are the relay output contacts.
3. Ensure the NTC 10K sensor probe is securely connected to the designated sensor input.

Important: The working power supply voltage must be connected according to the standard voltage of the label (DC 12V). Otherwise, the module may be damaged.

5. OPERATION

The W3230 controller allows for easy setting of target temperatures and various operational parameters.

5.1. Setting Target Temperature (SV)

1. Press the **SET** button briefly. The bottom digital tube (SV) will flash.
2. Use the **Up (▲)** and **Down (▼)** buttons to adjust the desired target temperature.
3. Press the **SET** button again to confirm and save the setting, or wait 3 seconds for it to save

automatically.

5.2. Parameter Settings (P0-P8)

To access advanced settings, press and hold the **SET** button for 5 seconds until the display shows "P0". Use the Up/Down buttons to navigate through the parameters (P0-P8). Press **SET** to enter a parameter's setting, adjust with Up/Down, and press **SET** again to save.

Code	Function	Set Range	Default
P0	Heat/Cool Mode	H/C	C (Cooling)
P1	Return Difference (Hysteresis)	0.1°C - 30°C	0.1°C
P2	Set Upper Limit	-55°C - 120°C	120°C
P3	Set Lower Limit	-55°C - 120°C	-55°C
P4	Calibration	-10°C - 10°C	0°C
P5	Delayed Start	0 - 10 min	0 min
P6	Alarm Temperature	-55°C - 120°C	120°C
P7	Data Lock	ON/OFF	OFF
P8	Factory Reset	ON/OFF	OFF

Note: The last parameter setting is saved by default after shutdown. To restore factory settings, press and hold "SET" to power on.

6. TROUBLESHOOTING

6.1. Digital Tube Display Issues

- If the digital tube displays "----":
 - Check if the temperature sensor is missing or damaged. Reconnect or replace the sensor if necessary.
- If the digital tube displays "HHH":
 - Indicates high temperature protection in heat mode. The temperature exceeds the alarm temperature. The relay in protection mode is automatically disconnected. The temperature should drop below the alarm temperature to return to normal.
- If the digital tube displays "LLL":
 - Indicates low temperature protection in cooling mode. The relay in protection mode is automatically disconnected. The temperature should rise above the alarm temperature to return to normal.

6.2. General Issues

- **No Power:** Check the DC 12V power supply connection and ensure it is providing the correct voltage.
- **Incorrect Temperature Reading:** Ensure the sensor probe is correctly placed and not damaged. Consider using the P4 Calibration function if a slight offset is observed.

- **Relay Not Activating:** Verify the P0 setting (Heat/Cool mode) and P1 (Hysteresis) are configured correctly for your application. Check the load connection.

7. APPLICATIONS

The Greluma W3230 Digital Temperature Control is versatile and suitable for a wide range of applications requiring precise temperature management.



Image 7.1: Examples of W3230 applications. Suitable for environments such as greenhouses, warehouses, sanitizing equipment, and agricultural settings like farms.

- **HVAC Systems:** For controlling compressors in air conditioners and refrigeration units.
- **Freezers & Refrigerators:** Maintaining specific temperatures in cold storage.
- **Fermentation Chambers:** Ensuring stable temperatures for brewing or culturing.
- **Water Coolers:** Regulating water temperature.
- **Aquariums:** Maintaining optimal water temperature for aquatic life.
- **Greenhouses:** Controlling environmental temperature for plant growth.
- **Industrial & Scientific Applications:** General temperature control in various equipment.

8. SAFETY INFORMATION

- Always ensure the power supply matches the specified voltage (DC 12V). Incorrect voltage can damage the device.
- Do not expose the device to excessive moisture or extreme temperatures outside its operating range.
- Ensure all wiring connections are secure and insulated to prevent short circuits.
- Do not attempt to disassemble or modify the device beyond what is described in this manual.
- Keep out of reach of children.

9. MAINTENANCE

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning.
- Regularly check wiring connections for looseness or corrosion.
- Ensure the sensor probe is clean and free from debris that could affect its accuracy.


10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact Greluma customer service through the retailer where the product was purchased. Please have your product model number (W3230) and purchase details ready when contacting support.

For further assistance, you may also visit the official Greluma website or contact their authorized distributors.

© 2024 Greluma. All rights reserved.

Related Documents - W3230

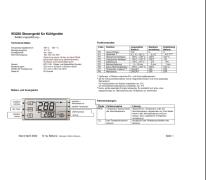	<p>W3230 Refrigeration Control Unit User Manual</p> <p>User manual for the W3230 refrigeration control unit, detailing technical specifications, operating instructions, function codes, and error messages. Learn how to optimize temperature control for various refrigeration units, including those used in RVs and boats.</p>
	<p>Icstation DC 12V Programmable Temperature Controller - Specifications & Instructions</p> <p>Detailed specifications, operating instructions, and wiring diagrams for the Icstation DC 12V Programmable Temperature Controller. Features a waterproof NTC sensor, 3-digit LED display, and relay control for DIY, smart home, and industrial applications.</p>

<p>Specifications:</p> <p>Power Supply: 100-240 VAC, 50/60 Hz, 1000W Temperature Range: -50°C to 500°C Accuracy: ±0.5°C Resolution: 0.1°C Control Modes: Heating, Cooling, Bimodal Control Logic: PID Digital I/O: 4x Input, 2x Output Analog I/O: 2x Input, 1x Output Communication: RS-485, Modbus RTU Dimensions: 482x230x100 mm Weight: 5 kg</p> <p>Function description:</p> <ul style="list-style-type: none">On/Off controlHeating controlCooling controlBimodal controlSetpoint adjustmentTemperature monitoringRS-485 communication <p>Step to use:</p> <p>Step 1: Connect the power supply and the control unit to the system. Make sure the power supply is connected to the correct voltage and frequency.</p> <p>Step 2: Connect the temperature sensors and the control unit. Make sure the sensors are correctly connected to the input terminals.</p> <p>Step 3: Set the desired temperature and control mode (Heating, Cooling, Bimodal) using the control panel or the RS-485 communication.</p> <p>Step 4: Monitor the temperature and control status using the control panel or the RS-485 communication.</p>	<h2><u>Microcomputer Temperature Controller User Manual and Specifications</u></h2> <p>Detailed specifications, function descriptions, operating instructions, and wiring diagrams for the Microcomputer Temperature Controller. Covers temperature control ranges, accuracy, power supply options, and parameter settings for refrigeration and heating modes.</p>
--	---