

[Manuals.plus](#) /

› [CYBORIS](#) /

› CYBORIS Portable Bluetooth Speaker S8-N User Manual

CYBORIS S8-N

CYBORIS Portable Bluetooth Speaker S8-N User Manual

Model: S8-N

1. INTRODUCTION

Thank you for choosing the CYBORIS Portable Bluetooth Speaker S8-N. This manual provides essential information for the safe and efficient use of your speaker. Please read it thoroughly before operation and retain it for future reference.

1.1 Package Contents

- CYBORIS Portable Bluetooth Speaker S8-N
- Micro USB charging cable
- 3.5mm audio cable
- Instruction manual

1.2 Product Overview

Familiarize yourself with the speaker's components and controls.



Image: Front and side view of the CYBORIS S8-N Portable Bluetooth Speaker, showcasing its cylindrical design, speaker grilles, control buttons, and integrated LED light bar.

MULTIPLE MUSIC PLAYBACK MODES

In addition to wireless mode, it also supports TF card playback, AUX wired input playback and supports APE, FL AC, WAV, MP3 and other music file formats for lossless playback



Image: Close-up view of the CYBORIS S8-N speaker's side panel, highlighting the control buttons (power, play/pause, volume up/next track, volume down/previous track, mode) and input ports (Micro USB charging, AUX-in, TF card slot).

Key Components:

- **Power Button:** Turns the speaker on/off.
- **Play/Pause Button:** Controls music playback and answers/ends calls.
- **Volume Up / Next Track Button:** Increases volume or skips to the next song.
- **Volume Down / Previous Track Button:** Decreases volume or goes to the previous song.
- **Mode Button:** Switches between Bluetooth, TF card, and AUX modes.
- **LED Light Bar:** Provides visual effects.
- **Micro USB Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **TF Card Slot:** For playing music directly from a memory card.
- **Integrated Handle:** For portability.

2. SETUP

2.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Micro USB cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

2.2 Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt, and the LED lights will activate.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt, and the LED lights will turn off.

2.3 Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected. The LED indicator will flash, indicating it's ready to pair.

1. Ensure the speaker is powered on and in Bluetooth pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "CYBORIS S8-N" from the list.
4. Once connected, you will hear a confirmation sound, and the LED indicator will stop flashing.

The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

2.4 True Wireless Stereo (TWS) Pairing

You can pair two CYBORIS S8-N speakers together for a stereo sound experience.

TRUE WIRELESS STEREO

Two speakers paired, double stereo.

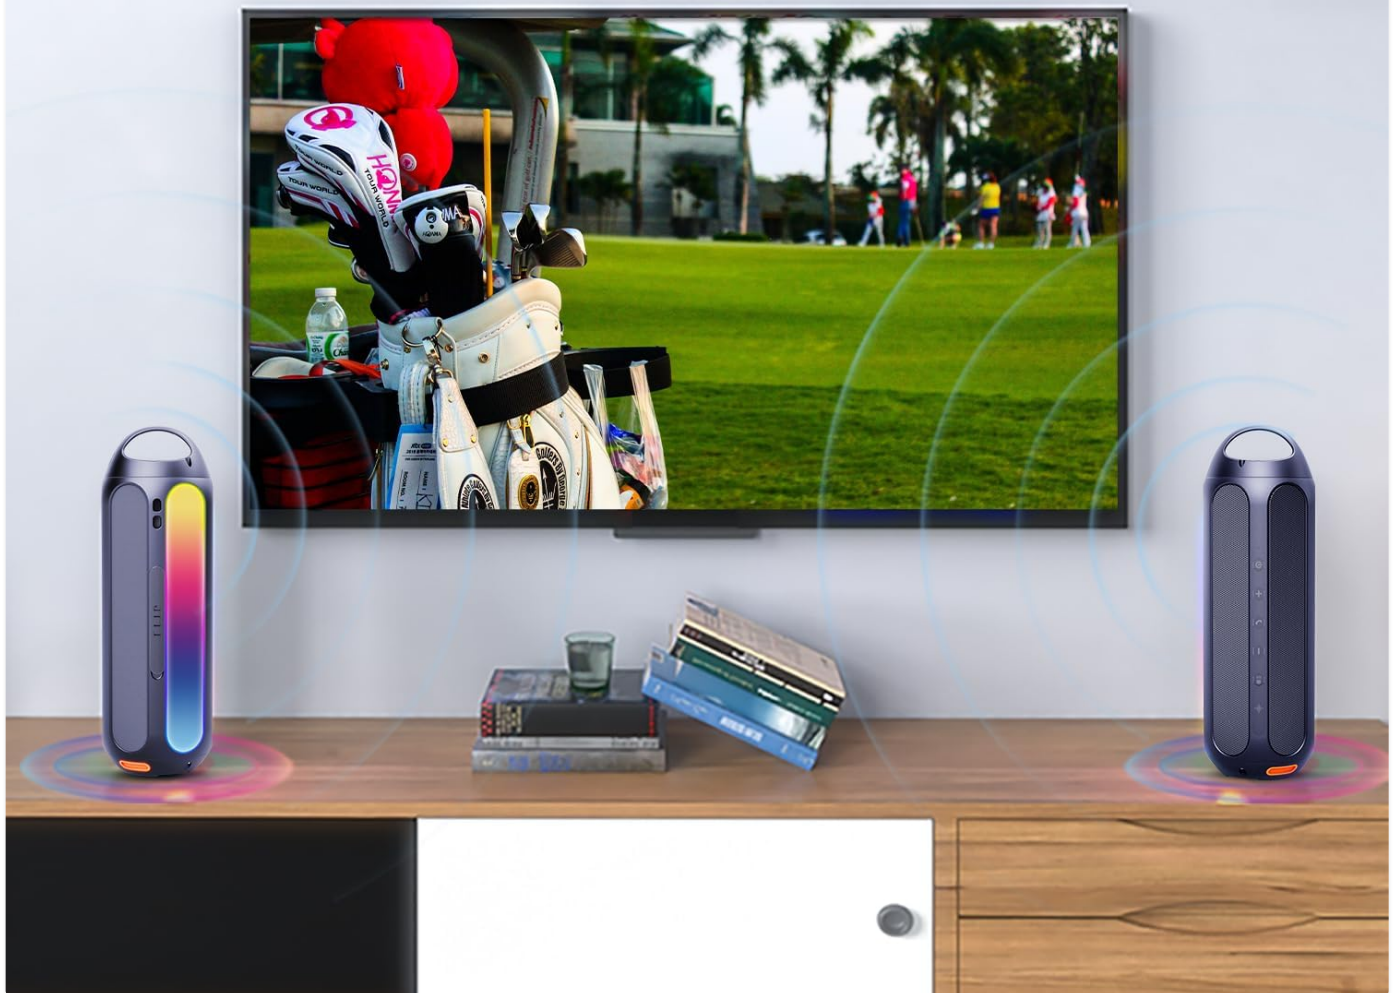


Image: Illustration showing two CYBORIS S8-N speakers wirelessly paired, positioned on either side of a television, demonstrating a True Wireless Stereo setup for enhanced audio.

1. Ensure both speakers are powered off.
2. Power on both speakers. They will enter Bluetooth pairing mode.
3. On one of the speakers (this will be the primary speaker), double-press the Play/Pause button. The speakers will attempt to connect to each other.
4. Once successfully paired, you will hear a confirmation sound. The LED indicator on the primary speaker will flash, while the secondary speaker's LED will remain solid.
5. Now, connect your device to the primary speaker via Bluetooth as described in Section 2.3.

After TWS pairing, both speakers will play audio simultaneously, creating a wider soundstage.

3. OPERATING INSTRUCTIONS

3.1 Music Playback

The speaker supports Bluetooth, TF card, and AUX input for music playback.

MULTIPLE MUSIC PLAYBACK MODES

In addition to wireless mode, it also supports TF card playback, AUX wired input playback and supports APE, FL AC, WAV, MP3 and other music file formats for lossless playback



Image: Close-up of the speaker's side panel, illustrating the various input options including the TF card slot and AUX port, indicating support for multiple music playback modes.

- **Bluetooth Mode:** After successful pairing, play music from your connected device.
- **TF Card Mode:** Insert a TF (Micro SD) card with MP3, APE, FLAC, WAV, or WMA audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.
- **AUX Mode:** Connect your audio device to the speaker's AUX-in port using the provided 3.5mm audio cable. Press the Mode button to switch to AUX mode.

Controls:

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Short press the Volume Up button.
- **Previous Track:** Short press the Volume Down button.
- **Volume Up:** Long press the Volume Up button.

- **Volume Down:** Long press the Volume Down button.

3.2 LED Light Modes

The speaker features an integrated LED light bar with various modes.



Image: The CYBORIS S8-N speaker displaying dynamic, colorful LED light effects that synchronize with music, creating an engaging visual experience.

To cycle through the LED light modes or turn them off, press the dedicated Light button (refer to Product Overview for location). Available modes include various color patterns, flashing, and SOS.

3.3 Hands-free Calling

When connected via Bluetooth, the speaker's built-in microphone allows for hands-free calls.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.

- **Reject Call:** Long press the Play/Pause button.

4. MAINTENANCE

4.1 Waterproofing (IPX6)



Image: The CYBORIS S8-N speaker being splashed with water, demonstrating its IPX6 waterproof rating, suitable for outdoor use and resistance to strong jets of water.

The CYBORIS S8-N speaker is rated IPX6 waterproof, meaning it is protected against strong jets of water from any direction. This makes it suitable for outdoor use, near pools, or in rainy conditions. However, it is **not designed for submersion** in water. Ensure all port covers are securely closed before exposing the speaker to water.

4.2 Cleaning and Storage

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

- If not used for extended periods, charge the speaker every 3 months to maintain battery health.

5. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source and try again.
Cannot pair via Bluetooth.	• Ensure the speaker is in pairing mode (LED flashing). • Ensure your device's Bluetooth is enabled and within range (up to 100 feet). • Forget "CYBORIS S8-N" from your device's Bluetooth list and try pairing again. • Restart both the speaker and your device.
No sound or low volume.	• Increase the volume on both the speaker and your connected device. • Ensure the speaker is correctly connected (Bluetooth, AUX, or TF card). • If using AUX, ensure the cable is fully inserted and not damaged.
TWS pairing fails.	• Ensure both speakers are the same model (S8-N). • Make sure both speakers are not connected to any other Bluetooth device before attempting TWS pairing. • Repeat the TWS pairing steps carefully.

6. SPECIFICATIONS

Feature	Detail
Model Name	S8-N
Brand	CYBORIS
Speaker Type	Outdoor
Connectivity Technology	Bluetooth V5.3
Wireless Range	100 feet (30 meters)
Speaker Output Power	30 Watts
Audio Output Mode	Stereo
Battery Capacity	5200 mAh (2 Lithium Ion batteries included)
Playtime	Up to 30 hours
Water Resistance Level	IPX6 Waterproof
Product Dimensions	2.95"D x 2.95"W x 8.58"H (7.5cm D x 7.5cm W x 21.8cm H)

Feature	Detail
Item Weight	1.39 pounds (0.63 Kilograms)
Control Method	Touch
Audio Driver Type	Dynamic Driver
Frequency Response	20.2 Hz (Lower limit, typical range not specified)
Mounting Type	Magnetic Adhesive
Included Components	Instruction manual, Micro USB charging cable, 3.5mm audio cable

7. WARRANTY AND SUPPORT

The CYBORIS S8-N Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or customer service inquiries, please contact your retailer or visit the official CYBORIS website.

Manufacturer: CYBORIS

© 2025 CYBORIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

