

ARCORA AR7107400C

ARCORA Deck Mount Pot Filler Faucet User Manual

Model: AR7107400C

Brand: ARCORA

INTRODUCTION

Thank you for choosing the ARCORA Deck Mount Pot Filler Faucet. This modern chrome kitchen faucet is designed for convenience and efficiency, featuring a stretchable double joint swing arm that extends up to 22 inches, allowing you to easily fill large pots directly on your stovetop. Crafted from high-quality solid brass, this faucet ensures durability and a leak-free experience. This manual provides essential information for the proper installation, operation, and maintenance of your new pot filler faucet.



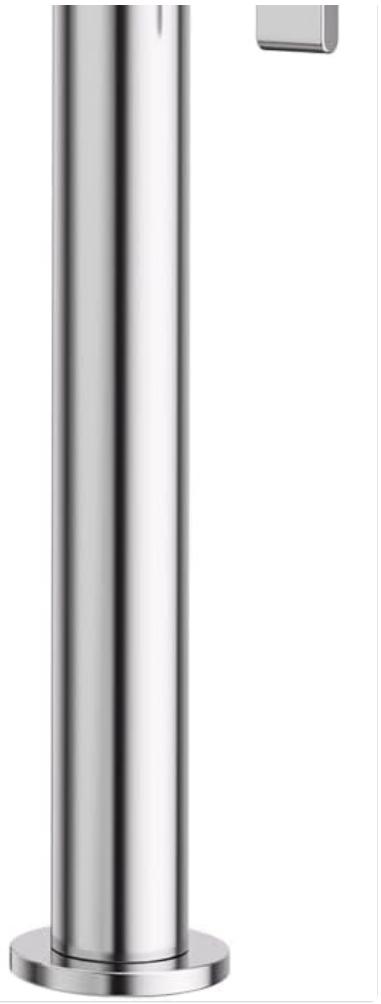


Image: The ARCORA Deck Mount Pot Filler Faucet in a sleek chrome finish, showcasing its extended position.

SAFETY INFORMATION

- **Cold Water Only:** This pot filler faucet is designed exclusively for cold water supply. Do not connect it to a hot water line.
- **Professional Installation Recommended:** If you are not familiar with plumbing installations, it is highly recommended to seek assistance from a qualified professional.
- **Water Supply Shut-off:** Always turn off the main water supply before beginning any installation or maintenance work.
- **Leak Prevention:** Ensure all connections are tightened properly to prevent leaks. Periodically check for any signs of water leakage around the faucet base and connections.
- **Handle Operation:** Always shut off both handles when the faucet is not in use or left unattended to prevent accidental water flow.

PACKAGE CONTENTS

Please verify that all components listed below are included in your package before proceeding with installation.

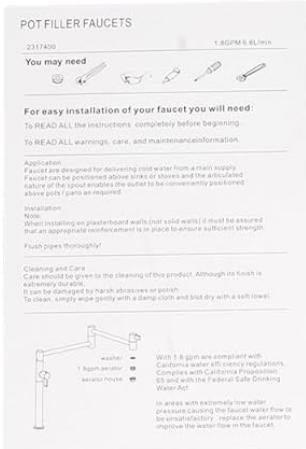
8**1** Pot Filler**4** Lock Nut**7** 24" Supply Lines**2** Washer**5** Teflon Tape**8** Installation Guide**3** 4 GPM Aerator**6** Triangle Fastener**9** A pair of gloves

Image: A visual representation of all items included in the product packaging, numbered for easy identification.


1. Pot Filler Faucet
2. Washers (various sizes)
3. 4 GPM Aerator (spare)
4. Lock Nut
5. Teflon Tape
6. Triangle Fastener
7. 24" Supply Hose
8. Installation Instruction Manual

9. A pair of gloves
10. Additional Installation Accessories

SPECIFICATIONS

Feature	Detail
Brand	ARCORA
Model Name	Pot Filler Deck Mount (AR7107400C)
Mounting Type	Deck Mount
Finish Type	Chrome
Material	Solid Brass
Number of Handles	2 (Dual Handles)
Spout Reach	Up to 22 Inches
Special Feature	360° Swivel, Folding Arm
Hole Count	1
Recommended Mounting Hole Size	1 - 1.4 inches
Aerator Flow Rate	1.8 GPM (standard), 3.5 GPM (spare)
Product Dimensions (Approx.)	22"D x 9"W x 16.4"H
Item Weight	4.34 pounds

Product Dimension

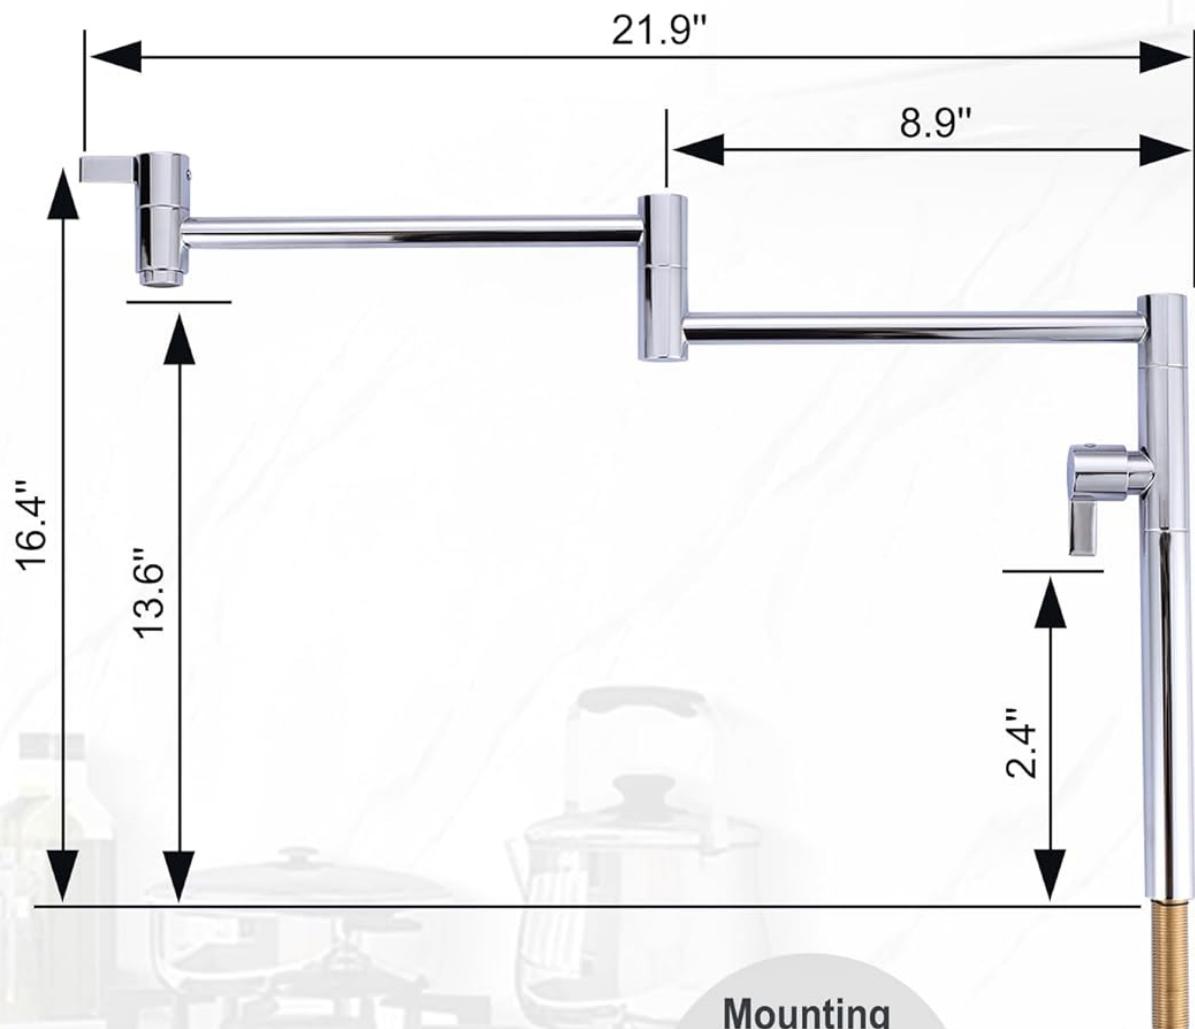

Mounting
Hole Size

1-1.4"

Image: Technical drawing illustrating the key dimensions of the pot filler faucet, including the recommended mounting hole size.

SETUP AND INSTALLATION

Before you begin, ensure you have all necessary tools and components. Refer to the included "Installation Instruction Manual" (Item 8 in Package Contents) for detailed, step-by-step diagrams and instructions specific to your model. The following is a general overview:

- 1. Prepare the Installation Area:** Turn off the main water supply. Clear the countertop area where the faucet will be installed. Ensure the mounting hole is within the recommended size of 1 to 1.4 inches.
- 2. Assemble Faucet Components:** Attach the supply hose to the faucet base as per the instruction manual. Apply Teflon tape to threaded connections to ensure a watertight seal.
- 3. Mount the Faucet:** Insert the faucet base into the prepared hole on your countertop. From underneath the countertop, secure the faucet using the lock nut and triangle fastener, ensuring it is stable and upright.
- 4. Connect Water Supply:** Connect the other end of the supply hose to your cold water line. Ensure all connections are tight but do not overtighten.
- 5. Test for Leaks:** Slowly turn on the main water supply. Check all connections for any signs of leaks. Operate the faucet handles to ensure proper water flow and shut-off.

OPERATING INSTRUCTIONS

The ARCORA Pot Filler Faucet is designed for ease of use and maximum convenience in your kitchen.

- Extending the Faucet:** Gently pull the faucet arm away from its resting position. The double joint design allows it to extend up to 22 inches, reaching over multiple burners.
- 360° Swivel:** Both joints of the faucet arm feature a 360° swivel capability, providing flexibility to position the spout precisely where needed.
- Water Flow Control:** The faucet features dual handles. Turn either handle to initiate water flow. Turn them back to the closed position to stop the flow. For optimal performance and to prevent drips, ensure both handles are fully closed when not in use.
- Retracting for Storage:** When not in use, gently fold the faucet arm back towards the wall or its original position to save space.



Retracts when not in use, space saving solution for every kitchen

Image: The pot filler faucet in its retracted position, illustrating how it saves space when not actively filling pots.

Extend Up to 22"

This flexibility allows you to fill pots of varying sizes and shapes without having to move the pot itself



Image: The pot filler faucet fully extended, demonstrating its impressive reach of up to 22 inches for convenient pot filling.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your ARCORA Pot Filler Faucet.

- **Cleaning the Finish:** Clean the chrome finish regularly with a soft, damp cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish. Rinse thoroughly and dry with a soft

cloth to prevent water spots.

- Aerator Maintenance:** If water flow becomes weak or irregular, the aerator may be clogged. Unscrew the aerator from the spout, clean any debris or mineral deposits, and rinse under running water. Reinstall the aerator. A spare 3.5 GPM aerator is included for faster filling if desired.
- Checking for Leaks:** Periodically inspect all connections for any signs of leaks. Tighten connections if necessary, but do not overtighten.

Image: Detailed view of internal components, including the durable brass cartridge, solid brass construction, and the Neoperl aerator, highlighting the quality materials used.

TROUBLESHOOTING

If you encounter any issues with your faucet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Water leaks from faucet base or connections.	Loose connections; worn washers; improper installation.	Ensure water supply is off. Tighten all connections. Check washers for damage and replace if necessary. Re-read installation instructions carefully.
Low water flow or irregular spray.	Clogged aerator; low water pressure.	Unscrew and clean the aerator. Check your home's water pressure.
Faucet handles are stiff or difficult to turn.	Mineral buildup; internal cartridge issue.	Operate handles frequently to prevent stiffness. If problem persists, contact customer support.
Faucet arm does not extend or retract smoothly.	Debris in joints; lack of lubrication.	Clean around the joints. Avoid forcing the arm.

WARRANTY AND SUPPORT

Your ARCORA Deck Mount Pot Filler Faucet comes with a limited warranty. For specific details regarding warranty coverage, please refer to the documentation included with your purchase or contact ARCORA customer service.


If you have any questions, require technical assistance, or need to report an issue with your product, please do not hesitate to contact us. Your suggestions are valuable and help us continuously improve the quality of our products and services.

Contact Information:

Email: Please refer to the contact details provided in your product packaging or on the official ARCORA website.

Online Support: Visit the [ARCORA Store on Amazon](#) for more information and support resources.

Related Documents

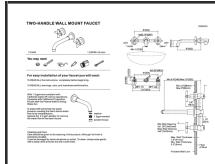

[Arcora Two-Handle Wall Mount Faucet Installation Guide](#)

Comprehensive installation guide for the Arcora two-handle wall mount faucet, including parts list, safety information, and cleaning instructions.