

PRUNUS J-170

PRUNUS J-170 Vintage AM/FM/SW Portable Rechargeable Radio User Manual

Model: J-170 | Brand: PRUNUS

1. INTRODUCTION

Thank you for choosing the PRUNUS J-170 Vintage AM/FM/SW Portable Rechargeable Radio. This manual provides detailed instructions for the safe and efficient operation of your new radio. Please read it thoroughly before use and keep it for future reference.

2. PRODUCT OVERVIEW

The PRUNUS J-170 is a versatile and stylish vintage-inspired radio that combines classic aesthetics with modern functionality. It features AM/FM/SW radio reception, Bluetooth connectivity, and support for USB and TF card playback, all powered by a long-lasting rechargeable battery.

Key Features

- **World Receiver Radio with Excellent Reception:** Not just a retro Bluetooth speaker, but also a portable SW/AM/FM radio. Multiple bands allow the portable retro radio to receive more stations in your area.
- **Multifunctional Wireless Speaker:** Offers 3 music playback options: Bluetooth 5.0 wireless connection, TF card, and USB drive.
- **Loud Stereo Sound & TWS Pairing:** Equipped with a powerful 7-watt speaker for loud and crystal-clear sound with powerful bass. Connect two speakers wirelessly for a 360° immersive surround stereo sound experience.
- **1800 mAh Rechargeable Battery:** Provides hours of music enjoyment without frequent recharging.
- **Vintage Design and Portable Size:** Elegant and vintage look, compact size (203 x 106 x 136 mm, 925 g) with a handle for easy portability.

Product Appearance



Front view of the PRUNUS J-170 Vintage AM/FM/SW Portable Rechargeable Radio, showcasing its classic design with a gold-colored speaker grille and control knobs.

Portable Speaker Bluetooth Radio

Lightweight with a handle, free to carry around



The PRUNUS J-170 radio being carried by its handle, demonstrating its portability and compact size.

Package Contents



The package includes the PRUNUS J-170 radio unit, a user manual, and a USB charging cable.


Please check that all items are present and in good condition upon unpacking.

3. CONTROLS AND COMPONENTS

Familiarize yourself with the various controls and ports on your PRUNUS J-170 radio.



Detailed view of the radio's front panel, showing the volume and tuning knobs, and the mode switch.

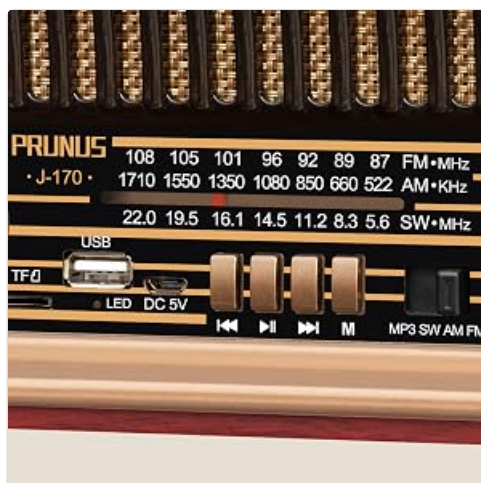

Close-up of the USB port, TF card slot, LED indicator, DC 5V charging port, and media playback buttons.

- **VOLUME Knob:** Rotate to adjust the sound volume.
- **TUNING Knob:** Rotate to tune into radio stations.
- **USB Port:** Insert a USB flash drive for MP3 playback.
- **TF Card Slot:** Insert a TF (Micro SD) card for MP3 playback.
- **LED Indicator:** Indicates charging status and mode.
- **DC 5V Port:** Connect the USB charging cable to power the unit or charge the internal battery.
- **Playback Buttons:** Play/Pause, Previous Track, Next Track.
- **M (Mode) Switch:** Toggle between MP3 (USB/TF), SW, AM, and FM radio modes.
- **Telescopic Antenna:** Extend for improved radio reception.
- **Handle:** For easy carrying.

4. INITIAL SETUP

Charging the Battery

The PRUNUS J-170 comes with a built-in 1800mAh rechargeable lithium-ion battery. Before first use, it is recommended to fully charge the battery.

1. Connect the provided USB charging cable to the DC 5V port on the radio.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.

Rechargeable Speaker

1800mAh Rechargeable Battery



The radio's charging port (DC 5V) and LED indicator, highlighted for easy identification during charging.

Antenna Adjustment

For optimal radio reception, extend the telescopic antenna fully. Adjust its direction for the best signal clarity.

5. OPERATING INSTRUCTIONS

Power On/Off

Rotate the VOLUME knob clockwise to turn the radio on. Rotate it counter-clockwise until it clicks to turn the radio off.

Radio Mode (AM/FM/SW)

To listen to radio broadcasts:

1. Switch the M (Mode) switch to FM, AM, or SW as desired.
2. Extend the telescopic antenna and adjust its position for optimal reception.
3. Rotate the TUNING knob to scan for and select your desired radio station.

Excellent Reception *- FM AM SW*

*Easily pick up enough
stations around*



The radio's ability to pick up various stations across FM, AM, and SW bands, indicating strong reception capabilities.

Bluetooth Mode

To connect your device via Bluetooth:

1. Switch the M (Mode) switch to the Bluetooth position. The radio will emit an audible prompt indicating it's in pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "PRUNUS J-170" in your device's Bluetooth list and select it to pair.

4. Once paired, you can play audio from your device through the radio.

TWS (True Wireless Stereo) Pairing

If you have two PRUNUS J-170 radios, you can pair them together for a true wireless stereo experience:

1. Ensure both radios are powered on and in Bluetooth mode.
2. On one of the radios (this will be the primary unit), double-press the Play/Pause button. It will search for the second unit.
3. Once connected, both radios will play audio in stereo.
4. Connect your Bluetooth device to the primary unit as described above.

Bluetooth Connection - TWS

True wireless stereo perfect music experience



Bass Speaker



Bluetooth



TWS



USB Disk



TF Card

The radio highlighting its Bluetooth connectivity and TWS (True Wireless Stereo) capabilities, allowing two units to pair for enhanced sound.



An illustration showing two PRUNUS J-170 radios wirelessly connected via TWS, creating a stereo sound experience from a single audio source.

USB/TF Card Playback

To play music from a USB flash drive or TF card:

1. Insert a USB flash drive into the USB port or a TF card into the TF card slot.
2. Switch the M (Mode) switch to the MP3 position. The radio will automatically detect and begin playing audio files (MP3 format recommended).
3. Use the Play/Pause, Previous Track, and Next Track buttons to control playback.

6. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the radio regularly, even if not in use.
- **Water Exposure:** This radio is not waterproof. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the radio using the provided USB cable.
Poor radio reception	Antenna not extended or positioned correctly; weak signal area.	Fully extend the telescopic antenna and adjust its direction. Try moving the radio to a different location.
Bluetooth not connecting	Radio not in Bluetooth mode; device not in pairing mode; radio already connected to another device.	Ensure the mode switch is on Bluetooth. Make sure your device's Bluetooth is on and searching. Disconnect from other devices if necessary.
USB/TF card not playing	Incorrect mode; unsupported file format; corrupted media.	Switch to MP3 mode. Ensure files are in MP3 format. Try a different USB drive or TF card.
Sound distortion	Volume too high; weak signal (radio mode).	Lower the volume. For radio, adjust antenna or location for better signal.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	PRUNUS
Model	J-170
Tuner Technology	AM, FM, SW
Hardware Interface	Bluetooth 5.0
Compatible Devices	Smartphone, Tablet
Special Features	TWS (True Wireless Stereo)
Max Speaker Output Power	7 Watts
Power Source	Battery-Powered
Battery Type	1800mAh Lithium-ion (included)
Frequency	Up to 108 MHz (FM)
Connectivity Technology	Bluetooth
Supported Radio Bands	3-bands
Material Type	Wood or Wood Material
Product Dimensions (L x W x H)	20 x 10.2 x 14.5 cm (7.87 x 4.02 x 5.71 inches)

Feature	Specification
Weight	925 g (2.04 lbs)

9. WARRANTY AND SUPPORT

PRUNUS products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official PRUNUS website. If you encounter any issues or require technical assistance, please contact PRUNUS customer support through the contact information provided on their official website or through your retailer.

Please retain your proof of purchase for warranty claims.

© 2023 PRUNUS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question