

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [surmen](#) /
- › [surmen G1000 Backlit White Quiet Office Keyboard Instruction Manual](#)

surmen G1000

surmen G1000 Backlit White Quiet Office Keyboard

INSTRUCTION MANUAL

1. Setup

1.1 Unpacking

Carefully remove the surmen G1000 keyboard from its packaging. Ensure all components are present: the keyboard unit and its integrated USB cable.



Image: The surmen G1000 keyboard, showcasing its full 104-key layout and white finish with blue backlighting.

1.2 Connecting the Keyboard

The surmen G1000 is a wired USB keyboard. To connect it, simply plug the USB-A connector of the keyboard's cable into an available USB port on your computer (PC, Desktop, Laptop).

1.3 Initial Setup (Plug and Play)

This keyboard is designed for plug-and-play functionality. No additional drivers are required for basic operation. Your operating system (Windows 2000 / 10 / 8 / 7 / ME / XP / VISTA) should automatically detect and configure the keyboard upon connection.

2. Operating Instructions

2.1 Basic Operation

The surmen G1000 features a full-size 104-key layout, including a numeric keypad, providing a complete typing experience for various tasks.

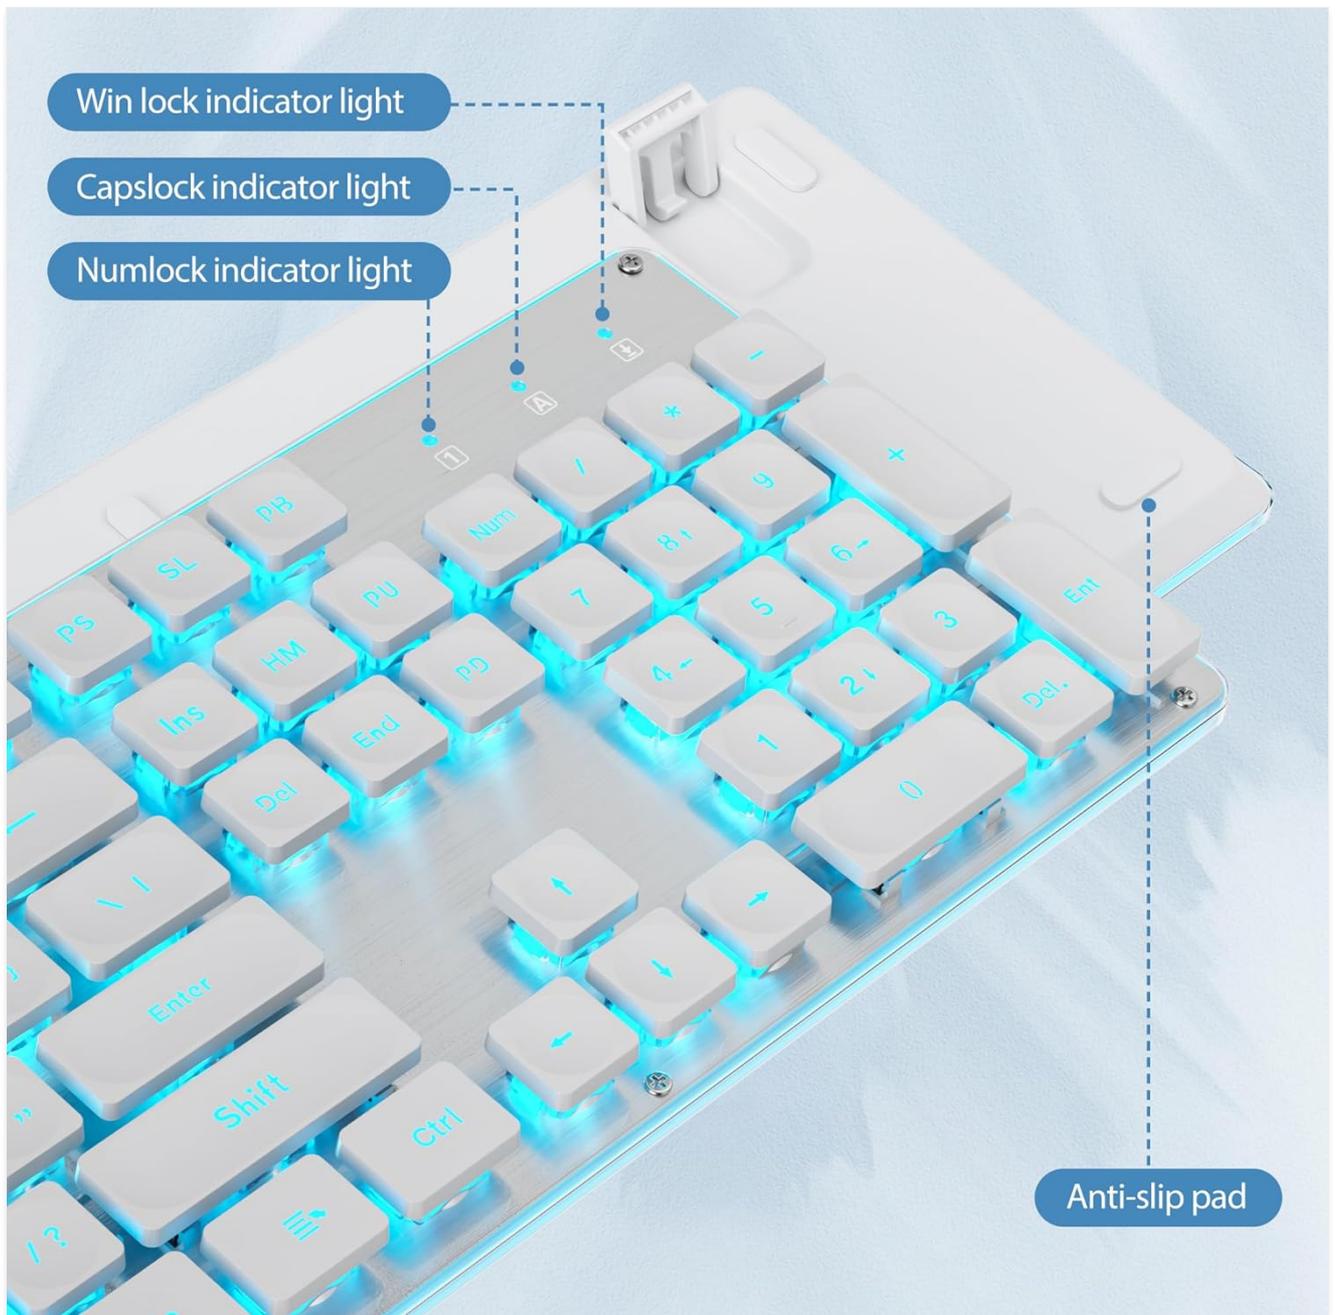


Image: A user's hands positioned over the surmen G1000 keyboard, demonstrating its ergonomic design for typing. The keyboard utilizes silent membrane switches, offering a quieter typing experience compared to mechanical keyboards, suitable for office environments or shared spaces.



Silent Membrane Switches

Better tactile response and quieter typing

Image: A close-up view of the keyboard keys, highlighting the silent membrane switch design for quiet and responsive typing.

2.2 Backlighting Control

The surmen G1000 features stunning blue backlighting. You can control the backlighting modes and brightness using specific key combinations.



Image: A visual guide illustrating how to toggle the keyboard backlight ON/OFF using the FN + SL key combination. To turn the backlight ON or OFF, press **FN + SL**. The keyboard supports static and breathing backlight modes. Refer to the keyboard's physical markings or included quick start guide for specific brightness and mode adjustments, typically involving the FN key combined with arrow keys or other function keys.



Image: The surmen G1000 keyboard illuminated with blue backlighting, positioned on a desk next to a computer monitor.

2.3 Multimedia Hotkeys

The keyboard includes 12 multimedia hotkeys, accessible by pressing the **FN** key in combination with the **F1-F12** keys. These shortcuts allow quick access to various functions without interrupting your workflow.

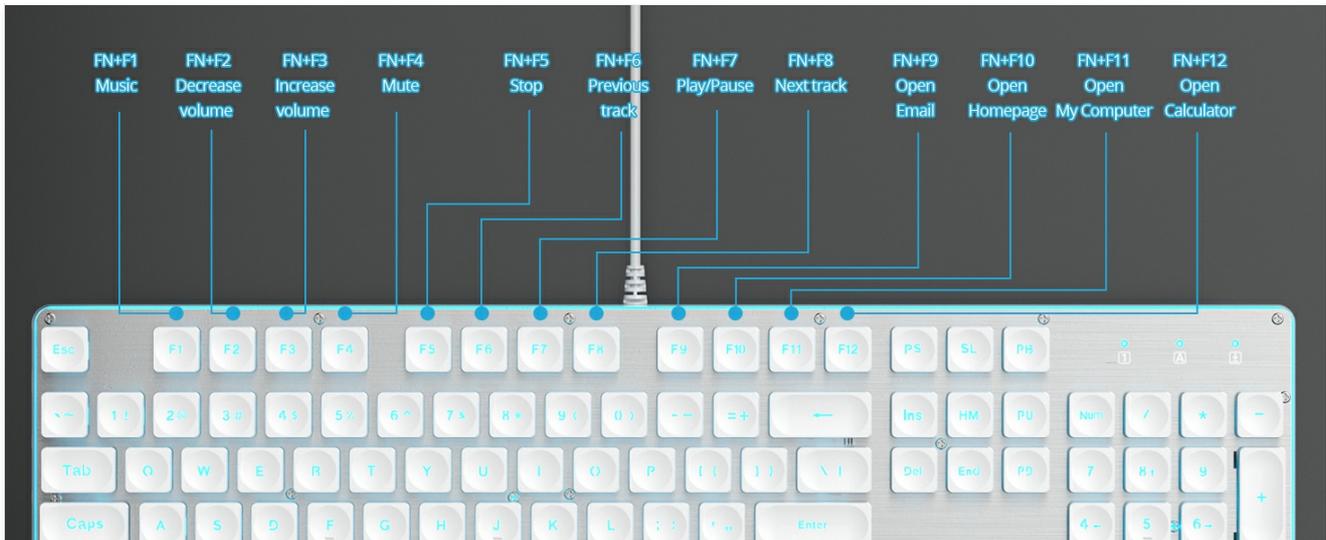


Image: A detailed diagram illustrating the location and function of the 12 multimedia hotkeys (FN+F1 to FN+F12) on the surmen G1000 keyboard.

- **FN + F1:** Music Player
- **FN + F2:** Decrease Volume
- **FN + F3:** Increase Volume
- **FN + F4:** Mute
- **FN + F5:** Stop Playback
- **FN + F6:** Previous Track
- **FN + F7:** Play/Pause
- **FN + F8:** Next Track
- **FN + F9:** Open Email
- **FN + F10:** Open Homepage
- **FN + F11:** Open My Computer
- **FN + F12:** Calculator

2.4 Anti-Ghosting and Win Lock Function

The keyboard features 26-key anti-ghosting, ensuring that multiple simultaneous key presses are registered accurately, which is beneficial for fast typing and gaming. It also includes a Win Lock function to prevent accidental presses of the Windows key during intense activities.

MULTIMEDIA SHORTCUTS

26 KEYS ANTI-GHOSTING



Image: The surmen G1000 keyboard with a visual overlay indicating the 26-key anti-ghosting capability.



Image: A detailed view of the top right section of the keyboard, showing the Win Lock, Caps Lock, and Num Lock indicator lights, along with the anti-slip pad on the underside.

3. Maintenance

3.1 Cleaning

To maintain the keyboard's appearance and functionality, regularly clean its surface. Use a soft, dry cloth to wipe away dust and debris. For stubborn marks, a slightly damp cloth can be used. Avoid excessive moisture.

The keyboard features a water-resistant design, which helps protect against accidental spills. However, it is not fully waterproof. In case of liquid spills, immediately unplug the keyboard and allow it to dry completely before reconnecting.



Image: A close-up of the keyboard keys with water droplets, illustrating its water-resistant capability.

3.2 Storage

When not in use for extended periods, store the keyboard in a clean, dry environment away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the keyboard to prevent damage to the keys or internal components.

4. Troubleshooting

4.1 Common Issues and Solutions

- **Keyboard not responding:**

- Ensure the USB cable is securely plugged into both the keyboard and the computer.
- Try plugging the keyboard into a different USB port on your computer.
- Restart your computer.

- **Backlight not working or stuck:**

- Press **FN + SL** to toggle the backlight on/off.
- Unplug the keyboard, wait a few seconds, and then plug it back in to reset the backlight.
- Ensure your computer's USB ports are providing sufficient power.

- **Certain keys not registering:**

- Check for any debris or foreign objects lodged under the keycap.
- Gently press the key multiple times to dislodge any dust.

- If the issue persists, contact customer support.

Your browser does not support the video tag.

Video: A demonstration of the surmen G1000 keyboard, highlighting its quiet operation and soft-touch keys during use.

5. Specifications

Feature	Detail
Model	G1000
Brand	surmen
Color	White
Keyboard Type	Membrane
Number of Keys	104
Connectivity	USB-A Wired
Backlighting	Blue, Single Color (Static/Breathing modes)
Anti-Ghosting	26 Keys
Special Features	Metal Panel, Quiet Operation, Water-Resistant, Multimedia Hotkeys, Win Lock Function
Product Dimensions	17.1 x 5.2 x 1.2 inches
Item Weight	1.54 pounds
Compatible OS	Windows 2000 / 10 / 8 / 7 / ME / XP / VISTA

Keyboard Size

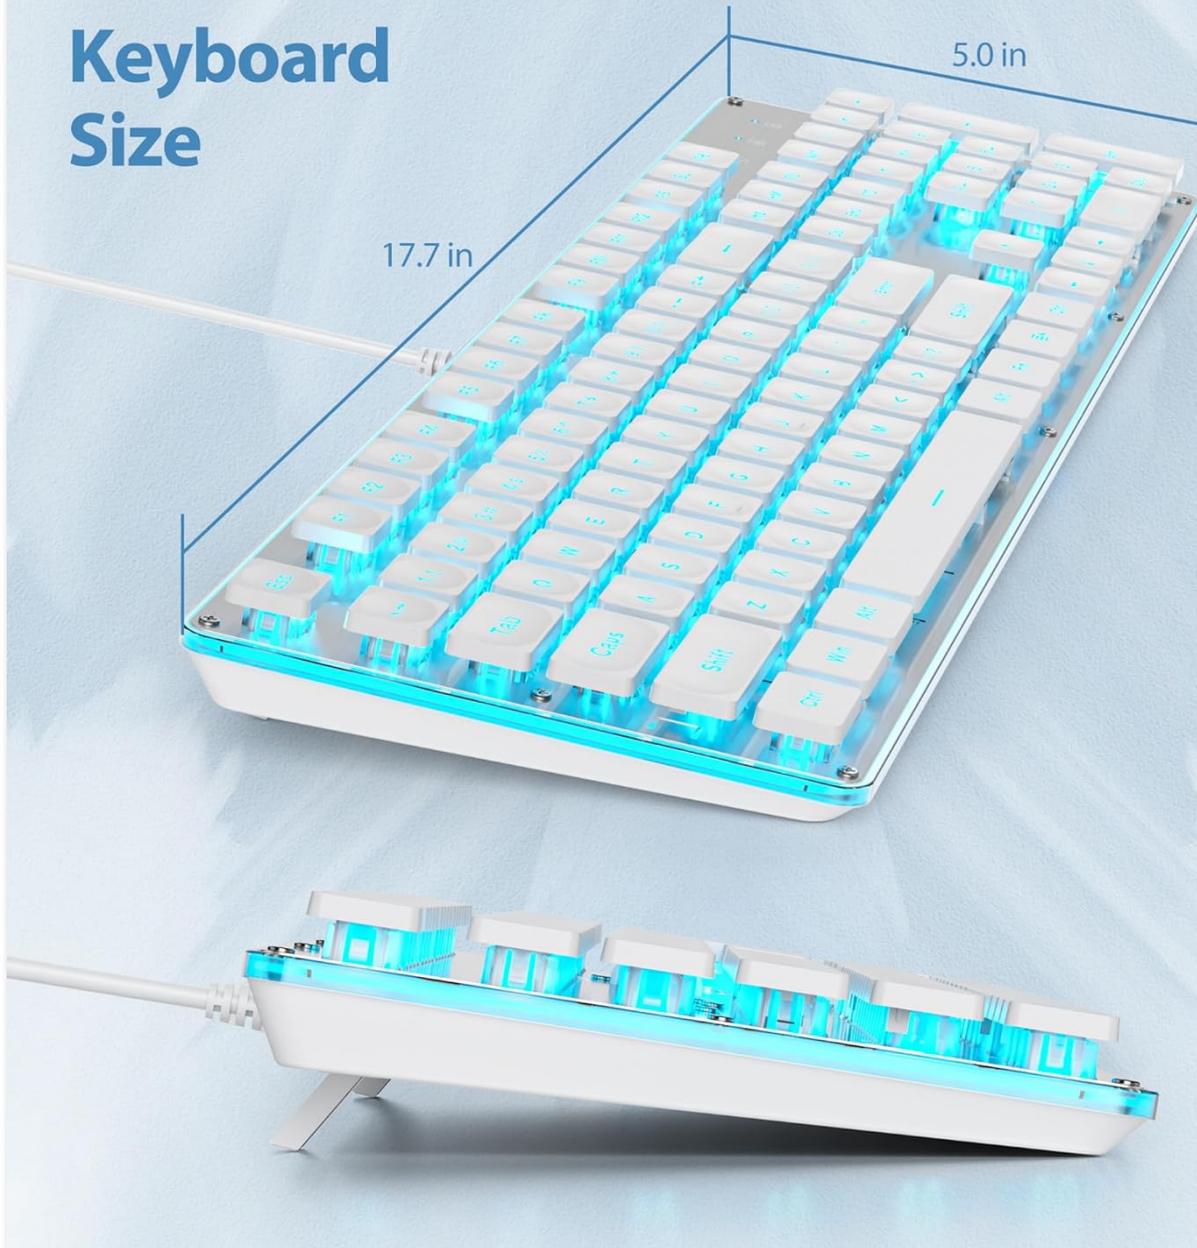


Image: A diagram illustrating the dimensions of the surmen G1000 keyboard, showing its length and width.

6. Warranty and Support

6.1 Warranty Information

Please refer to the product packaging or the seller's official website for specific warranty terms and conditions. Typically, electronic products come with a limited manufacturer's warranty covering defects in materials and workmanship.

6.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the manufacturer or seller directly through their official support channels. Contact information can usually be found on the product packaging, the seller's website, or the purchase platform.

