

TANLANIN CD-001

TANLANIN CD-001 Portable Rechargeable CD Player Instruction Manual

Model: CD-001

1. INTRODUCTION

Thank you for purchasing the TANLANIN CD-001 Portable Rechargeable CD Player. This device offers multiple audio playback options, including CD, Bluetooth input/output, USB, and AUX. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Figure 1.1: The TANLANIN CD-001 Portable CD Player and included remote control.

2. PRODUCT OVERVIEW

2.1 Package Contents

Please check the package for the following items:

- 1x TANLANIN CD-001 Vintage CD Player
- 1x User Manual (this document)
- 1x Remote Control
- 1x Type-C Charging Cable
- 1x Warranty Card

2.2 Device Features and Controls

Familiarize yourself with the various parts and controls of your CD player.



Figure 2.1: Front and rear view of the CD player, highlighting controls and ports. Key features include the CD play arm, control buttons (Stop, Next, Previous, Play/Pause, Bluetooth Transmit/Repeat), Volume Knob, Headphone Jack (AUX Out), Power Switch, USB Input Port, AUX Input Port, and Type-C Charging Port.



Figure 2.2: The LED display indicates the current operating mode: Bluetooth Input Mode (bE), USB Mode (USb), CD Mode (Cd), Line/AUX Mode (LINE), and Bluetooth Output Mode (-bE-).

3. SETUP

3.1 Initial Charging

Before first use, fully charge the CD player. Connect the provided Type-C charging cable to the charging port on the device and the other end to a compatible USB power source (e.g., wall adapter, power bank, computer USB port). The LED indicator will show charging status.

3.2 Powering On/Off

To power on the device, locate the power switch on the rear of the unit and slide it to the 'ON' position. To power off, slide the switch to the 'OFF' position.

4. OPERATING INSTRUCTIONS

4.1 CD Playback

1. Open the top cover of the CD player.
2. Carefully place a CD (CD, CD-R, CD-RW, MP3, WMA formats supported) onto the spindle, pressing gently until it clicks into place.
3. Close the top cover.
4. Swing the play arm over the CD. The device will automatically detect the CD and begin playback.
5. Use the control buttons (Play/Pause, Next Song, Previous Song, Stop) on the device or remote control to manage playback. Adjust volume using the Volume Knob.

4.2 Bluetooth Input Mode (Speaker Function)

This mode allows you to use the CD player as a Bluetooth speaker for your mobile phone or tablet.

1. Power on the CD player.
2. The LED display will show 'bE' indicating Bluetooth Input Mode. If not, press the 'Mode' button on the remote or the 'Bluetooth Transmit/Repeat' button on the unit until 'bE' is displayed.
3. On your mobile device, enable Bluetooth and search for available devices. Select 'TANLANIN CD-001' to pair.
4. Once paired, you can play audio from your mobile device through the CD player's speakers.

4.3 Bluetooth Output Mode (Transmitter Function)

This mode allows the CD player to transmit audio to external Bluetooth headphones or speakers.

5.0 BLUETOOTH SENDER/TRANSMITTER

Easily connect with bluetooth speakers or headphones, enjoy your CDs wirelessly.



Figure 4.1: The CD player can wirelessly connect to Bluetooth headphones or speakers for audio output.

1. Ensure your external Bluetooth headphones or speaker are in pairing mode.
2. Power on the CD player and select the desired audio source (CD, USB, or AUX).
3. Press and hold the 'Bluetooth Transmit/Repeat' button on the unit or the dedicated Bluetooth output button on the remote until '-bE-' appears on the LED display and starts flashing. This indicates Bluetooth Output Mode and pairing search.
4. The CD player will automatically search for and connect to nearby Bluetooth audio devices. Once connected, '-bE-' will stop flashing.
5. Audio from the selected source will now play through your connected Bluetooth headphones or speaker.

4.4 USB Playback

Play audio files directly from a USB flash drive.

1. Insert a USB flash drive into the USB Input Port on the rear of the device.
2. Press the 'Mode' button on the remote or the 'Bluetooth Transmit/Repeat' button on the unit until 'USb' is displayed.
3. The device will automatically begin playing audio files from the USB drive.
4. Use the control buttons (Play/Pause, Next Song, Previous Song, Stop) on the device or remote control to manage playback.

4.5 AUX Input

Connect external audio devices (e.g., MP3 players, non-Bluetooth phones) using a 3.5mm audio cable.

1. Connect one end of a 3.5mm audio cable to the AUX Input Port on the rear of the CD player.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the 'Mode' button on the remote or the 'Bluetooth Transmit/Repeat' button on the unit until 'LINE' is displayed.
4. Play audio from your external device. The sound will be output through the CD player's speakers.

4.6 Remote Control Functions

The included remote control provides convenient access to all playback and mode functions. Refer to the remote control diagram for specific button layouts and functions.

5. CHARGING

The TANLANIN CD-001 features a built-in 2000mAh rechargeable Lithium Ion battery, providing 5-8 hours of playtime on a full charge. When the battery is low, the device will indicate this on the LED display or through an audible alert.

Built-in 2000mah Rechargeable Battery



Figure 5.1: The CD player can be charged using various USB power sources, including power banks, car chargers, and computer laptops, via the Type-C port.

To charge the device:

1. Connect the provided Type-C charging cable to the Type-C Charging Port on the rear of the CD player.
2. Connect the other end of the cable to a 5V/1A USB power adapter (not included), a power bank, or a computer's USB port.
3. The charging indicator will illuminate during charging and turn off or change color when fully charged.

Warm Tip:

The device will enter shutdown standby mode after 15 minutes of inactivity to conserve battery. To reactivate, turn the power switch OFF for 5 seconds, then turn it back ON.

6. MAINTENANCE

6.1 Cleaning

- Always power off and unplug the device before cleaning.
- Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.

6.2 Storage

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on top of the player.
- If storing for an extended period, charge the battery periodically to maintain its health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted; Power switch is off.	Charge the device; Ensure power switch is in 'ON' position.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly; Unsupported CD format.	Clean the CD; Reinsert correctly; Ensure CD is a supported format (CD, CD-R, CD-RW, MP3, WMA).
Bluetooth device cannot connect (Input Mode).	CD player not in Bluetooth Input Mode; Device too far; Bluetooth not enabled on external device.	Ensure 'bE' is displayed; Move devices closer; Enable Bluetooth on your phone/tablet.
No sound from external Bluetooth speaker/headphones (Output Mode).	CD player not in Bluetooth Output Mode; External device not in pairing mode or too far.	Ensure '-bE-' is displayed and flashing during pairing; Put external device in pairing mode; Move devices closer.
USB drive not recognized or playing.	CD player not in USB Mode; USB drive not formatted correctly; Unsupported file types.	Ensure 'USB' is displayed; Use FAT32 formatted USB drives; Ensure audio files are MP3 or WMA.
No sound from AUX input.	CD player not in AUX Mode; Cable not fully inserted; Volume too low on external device.	Ensure 'LINE' is displayed; Check cable connections; Increase volume on external device.

8. SPECIFICATIONS

- **Product Dimensions:** 8.07 x 6.1 x 4.13 inches
- **Item Weight:** 3.2 pounds
- **Model Number:** CD-001


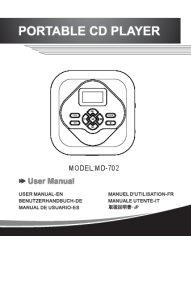 
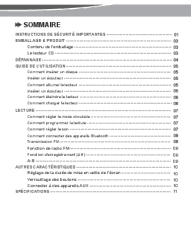 


- **Battery:** 1 Lithium Ion battery (included)
- **Connectivity Technology:** 3.5mm AUX input & output, Bluetooth input & output, USB
- **Supported CD Formats:** CD, CD-R, CD-RW, MP3, WMA
- **Special Features:** Anti-Skip Protection, Battery Level Indicator, Portable, Rechargeable
- **Manufacturer:** TANLANIN

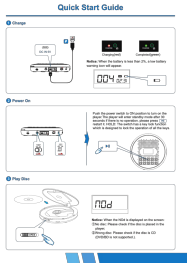 
9. WARRANTY AND SUPPORT

This TANLANIN CD-001 CD Player comes with a **1-year product warranty**. Additionally, a **30-day replacement policy** is offered for any manufacturing defects.

For technical support, warranty claims, or any questions regarding your product, please contact TANLANIN customer service through the retailer where the product was purchased.

Related Documents - CD-001

 <p>Limited Warranty for TANLANIN Brands</p> <p>TANLANIN warrants its products for the period specified in this warranty. The warranty is limited to the original purchaser of the product and is not transferable.</p> <p>Products covered by this warranty:</p> <table border="1"> <tr> <td>Model</td> <td>MD-702</td> </tr> <tr> <td>Color</td> <td>Black</td> </tr> <tr> <td>Material</td> <td>Plastic</td> </tr> <tr> <td>Weight</td> <td>150g</td> </tr> </table> <p>Product coverage:</p> <p>The Product will be covered for the period specified in this warranty. The warranty is limited to the original purchaser of the product and is not transferable.</p> <p>Options available for covered products:</p> <p>Options available for covered products include:</p> <ul style="list-style-type: none"> 1. Replacement of the product 2. Repair of the product 3. Refund of the purchase price 	Model	MD-702	Color	Black	Material	Plastic	Weight	150g	<p>TANLANIN Brands Limited Warranty Information and Coverage</p> <p>Official limited warranty details for TANLANIN brand products including Vinyl Record Players, Kids Karaoke Machines, CD Players, and Bluetooth Speakers. Learn about coverage periods, service options, and warranty limitations.</p>
Model	MD-702								
Color	Black								
Material	Plastic								
Weight	150g								
 <p>PORTABLE CD PLAYER</p> <p>MODEL MD-702</p> <p>User Manual</p> <p>USER MANUAL, CD MONODEAL BRANDS CD MANUAL, DE L'USAGES CD</p>	<p>MONODEAL Portable CD Player User Manual - Model MD-702</p> <p>User manual for the MONODEAL Portable CD Player (Model MD-702), providing safety instructions, operating procedures, troubleshooting tips, and feature explanations for this consumer electronic device.</p>								
 <p>SUMMARY</p> <p>INTRODUCTION DE L'USAGES CD 01</p> <p>INTRODUCTION DE L'USAGES CD 02</p> <p>INTRODUCTION DE L'USAGES CD 03</p> <p>INTRODUCTION DE L'USAGES CD 04</p> <p>INTRODUCTION DE L'USAGES CD 05</p> <p>INTRODUCTION DE L'USAGES CD 06</p> <p>INTRODUCTION DE L'USAGES CD 07</p> <p>INTRODUCTION DE L'USAGES CD 08</p> <p>INTRODUCTION DE L'USAGES CD 09</p> <p>INTRODUCTION DE L'USAGES CD 10</p> <p>INTRODUCTION DE L'USAGES CD 11</p> <p>INTRODUCTION DE L'USAGES CD 12</p> <p>INTRODUCTION DE L'USAGES CD 13</p> <p>INTRODUCTION DE L'USAGES CD 14</p> <p>INTRODUCTION DE L'USAGES CD 15</p> <p>INTRODUCTION DE L'USAGES CD 16</p> <p>INTRODUCTION DE L'USAGES CD 17</p> <p>INTRODUCTION DE L'USAGES CD 18</p> <p>INTRODUCTION DE L'USAGES CD 19</p> <p>INTRODUCTION DE L'USAGES CD 20</p> <p>INTRODUCTION DE L'USAGES CD 21</p> <p>INTRODUCTION DE L'USAGES CD 22</p> <p>INTRODUCTION DE L'USAGES CD 23</p> <p>INTRODUCTION DE L'USAGES CD 24</p> <p>INTRODUCTION DE L'USAGES CD 25</p> <p>INTRODUCTION DE L'USAGES CD 26</p> <p>INTRODUCTION DE L'USAGES CD 27</p> <p>INTRODUCTION DE L'USAGES CD 28</p> <p>INTRODUCTION DE L'USAGES CD 29</p> <p>INTRODUCTION DE L'USAGES CD 30</p> <p>INTRODUCTION DE L'USAGES CD 31</p> <p>INTRODUCTION DE L'USAGES CD 32</p> <p>INTRODUCTION DE L'USAGES CD 33</p> <p>INTRODUCTION DE L'USAGES CD 34</p> <p>INTRODUCTION DE L'USAGES CD 35</p> <p>INTRODUCTION DE L'USAGES CD 36</p> <p>INTRODUCTION DE L'USAGES CD 37</p> <p>INTRODUCTION DE L'USAGES CD 38</p> <p>INTRODUCTION DE L'USAGES CD 39</p> <p>INTRODUCTION DE L'USAGES CD 40</p> <p>INTRODUCTION DE L'USAGES CD 41</p> <p>INTRODUCTION DE L'USAGES CD 42</p> <p>INTRODUCTION DE L'USAGES CD 43</p> <p>INTRODUCTION DE L'USAGES CD 44</p> <p>INTRODUCTION DE L'USAGES CD 45</p> <p>INTRODUCTION DE L'USAGES CD 46</p> <p>INTRODUCTION DE L'USAGES CD 47</p> <p>INTRODUCTION DE L'USAGES CD 48</p> <p>INTRODUCTION DE L'USAGES CD 49</p> <p>INTRODUCTION DE L'USAGES CD 50</p> <p>INTRODUCTION DE L'USAGES CD 51</p> <p>INTRODUCTION DE L'USAGES CD 52</p> <p>INTRODUCTION DE L'USAGES CD 53</p> <p>INTRODUCTION DE L'USAGES CD 54</p> <p>INTRODUCTION DE L'USAGES CD 55</p> <p>INTRODUCTION DE L'USAGES CD 56</p> <p>INTRODUCTION DE L'USAGES CD 57</p> <p>INTRODUCTION DE L'USAGES CD 58</p> <p>INTRODUCTION DE L'USAGES CD 59</p> <p>INTRODUCTION DE L'USAGES CD 60</p> <p>INTRODUCTION DE L'USAGES CD 61</p> <p>INTRODUCTION DE L'USAGES CD 62</p> <p>INTRODUCTION DE L'USAGES CD 63</p> <p>INTRODUCTION DE L'USAGES CD 64</p> <p>INTRODUCTION DE L'USAGES CD 65</p> <p>INTRODUCTION DE L'USAGES CD 66</p> <p>INTRODUCTION DE L'USAGES CD 67</p> <p>INTRODUCTION DE L'USAGES CD 68</p> <p>INTRODUCTION DE L'USAGES CD 69</p> <p>INTRODUCTION DE L'USAGES CD 70</p> <p>INTRODUCTION DE L'USAGES CD 71</p> <p>INTRODUCTION DE L'USAGES CD 72</p> <p>INTRODUCTION DE L'USAGES CD 73</p> <p>INTRODUCTION DE L'USAGES CD 74</p> <p>INTRODUCTION DE L'USAGES CD 75</p> <p>INTRODUCTION DE L'USAGES CD 76</p> <p>INTRODUCTION DE L'USAGES CD 77</p> <p>INTRODUCTION DE L'USAGES CD 78</p> <p>INTRODUCTION DE L'USAGES CD 79</p> <p>INTRODUCTION DE L'USAGES CD 80</p> <p>INTRODUCTION DE L'USAGES CD 81</p> <p>INTRODUCTION DE L'USAGES CD 82</p> <p>INTRODUCTION DE L'USAGES CD 83</p> <p>INTRODUCTION DE L'USAGES CD 84</p> <p>INTRODUCTION DE L'USAGES CD 85</p> <p>INTRODUCTION DE L'USAGES CD 86</p> <p>INTRODUCTION DE L'USAGES CD 87</p> <p>INTRODUCTION DE L'USAGES CD 88</p> <p>INTRODUCTION DE L'USAGES CD 89</p> <p>INTRODUCTION DE L'USAGES CD 90</p> <p>INTRODUCTION DE L'USAGES CD 91</p> <p>INTRODUCTION DE L'USAGES CD 92</p> <p>INTRODUCTION DE L'USAGES CD 93</p> <p>INTRODUCTION DE L'USAGES CD 94</p> <p>INTRODUCTION DE L'USAGES CD 95</p> <p>INTRODUCTION DE L'USAGES CD 96</p> <p>INTRODUCTION DE L'USAGES CD 97</p> <p>INTRODUCTION DE L'USAGES CD 98</p> <p>INTRODUCTION DE L'USAGES CD 99</p> <p>INTRODUCTION DE L'USAGES CD 100</p>	<p>Arafuna Portable CD Player User Manual - Bluetooth, FM Radio, AUX</p> <p>Comprehensive user manual for the Arafuna Portable CD Player. Learn about setup, playback, Bluetooth connectivity, FM transmission, troubleshooting, and specifications.</p>								
 <p>TRETTITRE</p>	<p>TRETTITRE Portable CD Player User Manual</p> <p>User manual for the TRETTITRE Portable CD Player, detailing setup, functions, specifications, troubleshooting, and warranty information.</p>								
	<p>MONODEAL Portable CD Player User Manual</p> <p>User manual for the MONODEAL portable CD player, detailing functions, operation, FAQs, and specifications. Supports CD, CD-R, CD-RW, MP3, and WMA formats.</p>								

 <p>The image shows the first three pages of a 'Quick Start Guide' for the ARAFUNA Portable CD Player. The first page, titled 'Quick Start Guide', includes a 'Before Use' section with a diagram of the player connected to a power source and a note about the battery. The second page, 'Power On', shows a diagram of the player with the power button highlighted and a note about the power switch. The third page, 'Play Disc', shows a diagram of the disc tray and a note about the disc tray. The guide is written in Chinese and includes various icons and diagrams to illustrate the steps.</p>	<p>ARAFUNA Portable CD Player Quick Start Guide</p> <p>A quick start guide for the ARAFUNA Portable CD Player, detailing charging, power on, disc playback, last memory function, button functions, and headphone controls.</p>
---	---