

[Manuals.plus](#) /

> [TANLANIN](#) /

> TANLANIN CD-001WT Vintage Desktop CD Player User Manual

TANLANIN CD-001WT

TANLANIN CD-001WT Vintage Desktop CD Player

USER MANUAL

Important Safety Instructions

Please read these instructions carefully before using the device and retain them for future reference. Incorrect use may result in electric shock, fire, or other hazards.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the power adapter and cables specified by the manufacturer.
- Do not open the device casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device.
- **Battery Protection:** To prolong battery life, turn off the device when not in use or before recharging. The CD player automatically shuts off after 15 minutes of inactivity to conserve energy. To restart, turn it off for 5 seconds, then turn it back on.

Product Overview

The TANLANIN CD-001WT is a portable CD player designed with a vintage aesthetic, featuring a white synthetic leather exterior and rose gold hardware. It offers multiple audio playback options and connectivity features.



Image: TANLANIN CD-001WT Vintage Desktop CD Player. This image displays the front view of the portable CD player, highlighting its white synthetic leather finish, rose gold hardware, and integrated speakers.

Included Components:

- 1 x TANLANIN CD-001WT Vintage CD Player
- 1 x Type-C Charging Cable
- 1 x Remote Control
- 1 x User Manual

Controls and Ports:

The device features an intuitive LED control panel for playback functions (Play, Pause, Stop, Fast Forward, Rewind). Various ports are located on the unit for connectivity.

- **LED Display:** Shows current mode and track information.
- **Control Buttons:** Play/Pause, Stop, Skip Forward, Skip Backward, Mode, Volume.
- **CD Compartment:** For inserting audio CDs.

- **USB Port:** For USB playback.
- **AUX Input/Output (3.5mm):** For connecting external audio sources or outputting audio.
- **Headphone Jack (3.5mm):** For private listening.
- **Type-C Charging Port:** For charging the internal battery.

Setup

Charging the Device:

1. Connect the provided Type-C charging cable to the charging port on the CD player.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge provides approximately 5 to 8 hours of playback.

Initial Power On:

1. Ensure the device is sufficiently charged.
2. Locate the Power button, typically on the side or back of the unit.
3. Press and hold the Power button for a few seconds until the LED display illuminates.

Operating Instructions

CD Playback:

1. Open the CD compartment cover.
2. Carefully place a compatible CD (CD/CD-R/CD-RW/MP3/WMA format) onto the spindle, label side up.
3. Close the CD compartment cover securely.
4. Press the 'Mode' button to select CD mode if not automatically detected.
5. Press the 'Play/Pause' button to begin playback.
6. Use the 'Skip Forward' and 'Skip Backward' buttons to navigate tracks.
7. Press the 'Stop' button to end playback.
8. **Repeat Function:** Press the 'Repeat' button to cycle through repeat modes (e.g., repeat one track, repeat all tracks).

Bluetooth Input (Receiving Audio):

1. Power on the CD player.
2. Press the 'Mode' button to select Bluetooth input mode. The LED display will indicate Bluetooth pairing status.
3. On your external device (e.g., smartphone), enable Bluetooth and search for available devices.
4. Select 'TANLANIN CD-001WT' from the list to pair.
5. Once paired, audio from your external device will play through the CD player's speakers.

Bluetooth Output (Transmitting Audio):

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. On the CD player, select the desired audio source (CD, USB, AUX).
3. Press and hold the 'Bluetooth' button (or specific button for Bluetooth output, refer to device markings) to activate Bluetooth transmission.
4. The CD player will search for and connect to nearby Bluetooth audio receivers.
5. Once connected, audio will be transmitted to your Bluetooth headphones or speaker.

USB Playback:

1. Insert a USB flash drive containing MP3/WMA audio files into the USB port.
2. Press the 'Mode' button to select USB mode.
3. Playback will begin automatically or by pressing 'Play/Pause'.

AUX Input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the CD player.
2. Connect the other end to the headphone jack or audio output of an external audio device.
3. Press the 'Mode' button to select AUX mode.
4. Control playback and volume from your external device.

Headphone Use:

1. Plug 3.5mm headphones into the headphone jack.
2. Audio will automatically switch from the internal speakers to the headphones.

Remote Control:

The included remote control allows for convenient operation of playback functions, mode selection, and volume adjustment from a distance.

Maintenance

Cleaning:

- Before cleaning, ensure the device is powered off and unplugged.
- Wipe the exterior with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth designed for optical lenses.

Battery Care:

- Avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge the battery to approximately 50% and store in a cool, dry place.
- Recharge the battery every few months to prevent deep discharge.

Troubleshooting

If you encounter issues with your TANLANIN CD-001WT, please refer to the following common solutions:

- **No Power:** Ensure the device is charged. Connect the Type-C cable and charge for at least 30 minutes. Check if the power button is pressed correctly.
- **CD Not Playing:** Ensure the CD is clean and free of scratches. Verify the CD is inserted correctly, label side up. Make sure the CD compartment is fully closed. Check if the device is in CD mode.
- **No Sound:** Check the volume level on the device and any connected external speakers/headphones. Ensure the correct audio mode (CD, Bluetooth, USB, AUX) is selected. If using headphones, ensure they are fully plugged in.
- **Bluetooth Pairing Issues:** Ensure the CD player is in Bluetooth pairing mode. Turn off and on Bluetooth on your external device. Move the devices closer to each other. Disconnect from other Bluetooth devices if necessary.
- **USB Playback Not Working:** Ensure the USB drive is formatted correctly (FAT32) and contains compatible audio files (MP3/WMA). Try a different USB drive.

- **Remote Control Not Responding:** Check the battery in the remote control. Ensure there are no obstructions between the remote and the CD player.

If the problem persists after trying these steps, please contact customer support.

Specifications

Brand	TANLANIN
Model Number	CD-001WT
Color	White
Connectivity Technology	3.5mm AUX Input/Output, Bluetooth Input/Output, USB
Special Features	LED Display, CD-R/RW Compatible, Battery Protection Function, Battery Level Indicator, Rechargeable (built-in 2000 mAh battery)
Supported Audio Formats	MP3, WMA
Number of Discs	1
Headphone Jack	3.5mm Jack
Average Battery Life	6 hours
Battery Type	1 Lithium-ion (included)
Item Dimensions (L x W x H)	20.5 x 15.5 x 10.5 cm
Item Weight	2.2 Pounds

Warranty and Support

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the documentation included in your product packaging or contact TANLANIN customer support.

For technical assistance, troubleshooting, or any other inquiries, please visit the official TANLANIN website or contact their customer service department using the contact information provided with your purchase.

