

## Hama 00220893

# Hama Universal Turntable XL 40cm Diameter

Model: 00220893

## 1. INTRODUCTION

Thank you for choosing the Hama Universal Turntable. This versatile product is designed to provide 360-degree rotation for a wide range of items, enhancing convenience and accessibility in your home, office, or for hobby use. Its robust construction allows it to effortlessly turn objects weighing up to 100 kg, making it ideal for televisions, monitors, speakers, hi-fi devices, and even for model making or organizing kitchen and office supplies.

The turntable features a specially grooved surface to ensure good stability for your devices and utensils, while non-slip rubber feet on the bottom protect your furniture from scratches and ensure safe, stable rotation. Its flat and lightweight design makes it space-saving and easy to position flexibly.

## 2. SAFETY INSTRUCTIONS

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of **100 kg (220 lbs)**. Overloading can cause damage to the turntable or the item placed on it, and may lead to instability.
- **Stable Surface:** Always place the turntable on a flat, stable, and level surface that can adequately support the combined weight of the turntable and the item placed upon it.
- **Even Weight Distribution:** Ensure that the item placed on the turntable is centered and its weight is evenly distributed to maintain balance and prevent tipping.
- **Avoid Obstructions:** Keep the area around the turntable clear of any obstructions that might impede its rotation or cause damage.
- **Children and Pets:** Keep the turntable and any items on it out of reach of small children and pets to prevent accidents.

## 3. PRODUCT OVERVIEW

The Hama Universal Turntable is a simple yet highly functional accessory designed for ease of use and durability. It consists of two main parts: a stationary base and a rotating top plate, connected by a smooth bearing mechanism.



Image: Top-down view of the Hama Universal Turntable, highlighting its 40 cm diameter and textured surface designed for stability.

### Key Features:

- **360-Degree Rotation:** Allows for full rotation of items for optimal viewing angles or access.
- **High Load Capacity:** Supports up to 100 kg (220 lbs).
- **Non-Slip Feet:** Integrated rubber feet on the base prevent sliding and protect surfaces.
- **Grooved Surface:** The top plate features a textured, grooved pattern to enhance grip and stability for items placed on it.
- **Durable Material:** Constructed from Acrylonitrile Butadiene Styrene (ABS) for long-lasting use.



Image: Side profile of the Hama Universal Turntable, illustrating its compact and flat design.

## 4. SETUP

---

The Hama Universal Turntable requires no assembly. Simply follow these steps for initial setup:

1. **Unpack:** Carefully remove the turntable from its packaging.
2. **Choose Location:** Select a flat, stable, and level surface where you intend to use the turntable. Ensure this surface can support the combined weight of the turntable and the item you will place on it.
3. **Position Turntable:** Place the Hama Universal Turntable on the chosen surface. The non-slip rubber feet on the bottom will help secure it in place.
4. **Place Item:** Carefully place the item you wish to rotate (e.g., TV, monitor, plant) onto the center of the turntable's grooved top surface. Ensure the item is stable and balanced before proceeding.



Image: The turntable in use with a television, demonstrating its application in a living room environment.

## 5. OPERATING

---

Operating the Hama Universal Turntable is straightforward:

- **Rotation:** To rotate the item, gently push or pull the item itself, or the edge of the turntable, in the desired direction. The turntable will smoothly rotate 360 degrees.
- **Stability Check:** Before and after rotation, ensure the item remains stable and centered on the turntable.
- **Smooth Movement:** The internal bearing system is designed for smooth, effortless rotation, even with heavy loads within the specified limit.



Image: The turntable supporting a computer monitor on a desk, illustrating its utility for adjusting screen orientation.

## 6. MAINTENANCE

---

The Hama Universal Turntable requires minimal maintenance to ensure its longevity and smooth operation:

- **Cleaning:** To clean the turntable, simply wipe it with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used. Ensure the turntable is dry before placing items on it.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemical agents, as these can damage the material and finish of the turntable.
- **Inspect Regularly:** Periodically check the turntable for any signs of wear or damage. Ensure the non-slip feet are intact and the rotation remains smooth.
- **Storage:** When not in use, store the turntable in a clean, dry place away from extreme temperatures.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Hama Universal Turntable, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Turntable does not rotate smoothly or is stiff.	<ul style="list-style-type: none"> <li>Overloaded.</li> <li>Debris in the bearing mechanism.</li> <li>Uneven weight distribution.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce the weight of the item to be within the 100 kg limit.</li> <li>Clean the turntable, ensuring no dust or debris is trapped.</li> <li>Re-center the item on the turntable to distribute weight evenly.</li> </ul>
Item slips on the turntable surface.	<ul style="list-style-type: none"> <li>Surface is dirty or oily.</li> <li>Item is not centered.</li> <li>Item's base is too small for the grooved area.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the grooved surface of the turntable.</li> <li>Ensure the item is placed centrally on the turntable.</li> <li>If the item's base is very small, consider placing a non-slip mat between the item and the turntable (ensure it does not exceed load capacity).</li> </ul>
Turntable slides on the supporting surface.	<ul style="list-style-type: none"> <li>Supporting surface is too smooth or wet.</li> <li>Non-slip feet are damaged or missing.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the supporting surface is dry and clean. Consider placing a non-slip mat underneath the turntable.</li> <li>Inspect the rubber feet. If damaged, contact Hama support for advice.</li> </ul>

## 8. SPECIFICATIONS

Attribute	Value
Brand	Hama
Model Number	00220893
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Black
Item Diameter	40 Centimeters (approx. 15.7 inches)
Item Weight	993 Grams (approx. 2.19 pounds)
Maximum Recommended Load	100 Kilograms (approx. 220 pounds)
Batteries Required	No

## 9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details for the Hama Universal Turntable was

not available in the provided product data. For warranty claims or technical assistance, please refer to the product packaging or visit the official Hama website for the most up-to-date information.

You may also contact the retailer from whom you purchased the product for support.