

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOTRONIC](#) /

› [VOTRONIC 0538 VAC 1215 Battery Charger Instruction Manual](#)

VOTRONIC 0538

VOTRONIC 0538 VAC 1215 Battery Charger Instruction Manual

Model: 0538 VAC 1215

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your VOTRONIC 0538 VAC 1215 Battery Charger. Designed specifically for fire department and commercial vehicles according to DIN 14679, this fully automatic charger ensures precise adherence to battery charging voltages. It features 6 adjustable charging programs and microprocessor control for fast, gentle, and complete battery charging. Please read these instructions carefully before installation and operation.

2. SAFETY INSTRUCTIONS

- Always disconnect the charger from the mains power before making any connections or disconnections to the battery.
- Ensure proper ventilation during charging to prevent the accumulation of explosive gases.
- Do not expose the charger to rain, moisture, or extreme temperatures.
- Avoid short-circuiting the battery terminals or charger output.
- Only use the charger for the specified battery types (lead-acid, gel, AGM).
- Keep out of reach of children.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VOTRONIC 0538 VAC 1215 Battery Charger
- 4-meter Ölflex charging cable
- Instruction Manual (this document)

4. SETUP

Follow these steps for initial setup:

- Mounting the Charger:** Choose a dry, well-ventilated location for mounting the charger. Ensure sufficient space around the unit for heat dissipation. The compact design and low weight make it suitable for vehicle halls.
- Connecting the Battery:** Connect the 4-meter Ölflex charging cable to the battery terminals. Ensure correct polarity: positive (+) to positive, negative (-) to negative. The intelligent charge control automatically accounts for voltage losses on the vehicle's internal wiring and charging plug.
- Connecting to Mains Power:** Plug the charger's power cord into a standard 230V AC outlet.
- Optional Connections:** The charger supports connections for a remote control/indicator, a charging current distributor, switchable start, switch output motor start interlock, and a temperature sensor for optimized charging. Refer to the detailed wiring diagram in the full technical manual for these advanced connections.



Image 1: VOTRONIC 0538 VAC 1215 Battery Charger with the 4-meter Ölflex charging cable connected. This image illustrates the main unit and its primary connection cable.

5. OPERATING INSTRUCTIONS

The VOTRONIC 0538 VAC 1215 features intelligent microprocessor-controlled charging:

- **Automatic Operation:** Once connected to the battery and mains power, the charger automatically detects the battery status and begins the charging process.
- **Charging Programs:** The charger offers 6 adjustable charging programs, optimized for various battery types (acid, gel, AGM). Select the appropriate program for your battery to ensure optimal charging and longevity. Refer to the charger's display or indicators for program selection.
- **6-Stage Charging Characteristic:** The optimized 6-stage charging characteristic ensures a gentle and complete charge, preventing overcharging and extending battery life.
- **Automatic Battery Regeneration:** This function helps to maintain battery health and can improve the performance of older batteries.
- **Manual Charge Start:** For deeply discharged batteries, a manual charge start option is available. Consult the charger's interface for instructions on initiating this function.
- **Continuous Use:** The charger is designed for continuous operation, ensuring the battery remains fully charged at all times without risk of damage.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your charger:

- **Cleaning:** Periodically clean the charger's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Connection Check:** Regularly inspect all cable connections for tightness and signs of wear or corrosion. Ensure the 4-meter Ölflex charging cable is free from damage.
- **Ventilation:** Ensure that the ventilation openings on the charger are not blocked to prevent overheating.
- **Storage:** If storing the charger for an extended period, disconnect it from both the battery and mains power and store it in a dry, cool place.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common troubleshooting steps:

- **Charger Not Turning On:**
 - Check if the mains power cable is securely plugged into a working outlet.
 - Verify that the battery is correctly connected with the right polarity.
- **Battery Not Charging:**
 - Ensure the correct charging program is selected for your battery type.
 - Check all connections for looseness or corrosion.
 - The battery might be severely discharged; try the manual charge start function if available.
 - Inspect the 4-meter Ölflex charging cable for any visible damage.
- **Overheating:**
 - Ensure adequate ventilation around the charger.
 - Check if the ambient temperature is within the operating limits.

If the problem persists after following these steps, contact VOTRONIC customer support or a qualified technician.

8. SPECIFICATIONS

Model	VOTRONIC 0538 VAC 1215
Battery Voltage	12 V
Charging Current	15 A
Mains Voltage	230 V AC
Max. Power Consumption	270 W
Dimensions (L x W x H)	21.3 x 13.9 x 7.4 cm
Weight	1.3 kg
Compatible Battery Types	Lead-Acid, Gel, AGM
Protection Class	I
Cable Included	4m Ölflex Charging Cable

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. You may also visit the official VOTRONIC website for further assistance and contact details.
Manufacturer: VOTRONIC