

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BluMill](#) /

› [BluMill Self-Inflating Air Bed for 1 Person - Integrated Electric Pump - Model 12079 User Manual](#)

BluMill 12079

BluMill Self-Inflating Air Bed User Manual

Model: 12079

INTRODUCTION

Thank you for choosing the BluMill Self-Inflating Air Bed. This manual provides essential information for the safe and efficient use of your new air bed. Please read these instructions carefully before setup and operation, and retain them for future reference.



Figure 1: The BluMill Self-Inflating Air Bed. This image shows the full view of the air bed, highlighting its grey flocking top surface and black PVC sides, with the integrated pump visible on one side.

SAFETY INFORMATION

- **Electrical Safety:** The integrated pump operates on electricity. Do not immerse the pump or power cord in water. Ensure hands are dry when plugging or unplugging the unit.
- **Over-inflation:** Do not over-inflate the air bed. Over-inflation can cause damage to the mattress and may lead to injury.
- **Weight Limit:** Do not exceed the maximum weight capacity of 100 kg (220 lbs).
- **Sharp Objects:** Keep the air bed away from sharp objects, heat sources, and open flames to prevent punctures and damage.
- **Children and Pets:** Do not allow children or pets to play unsupervised on or near the air bed.
- **Temperature:** Avoid using the air bed in extreme temperatures, as this can affect the material's integrity.
- **Household Use Only:** This product is intended for household use.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x BluMill Self-Inflating Air Bed (Model 12079)
- 1 x Integrated Electric Pump (pre-installed)
- 1 x Repair Kit

- 1 x Carry Bag

SETUP AND INFLATION

1. **Unpack:** Remove the air bed from its carry bag and unroll it on a clean, flat surface, free from sharp objects.
2. **Locate Pump:** Identify the integrated electric pump on the side of the air bed.
3. **Plug In:** Connect the power cord of the integrated pump to a standard electrical outlet.
4. **Inflate:** Turn the rotary switch on the pump to the "INFLATE" position. The air bed will begin to inflate automatically.
5. **Monitor Inflation:** The air bed will fully inflate in approximately 3 to 5 minutes. Monitor the firmness and turn the switch to "OFF" once the desired firmness is reached. Do not over-inflate.
6. **Unplug:** Disconnect the power cord from the electrical outlet and store it in the designated cable compartment on the pump.



Figure 2: Detail of the integrated electric pump. This image shows a close-up of the pump unit with a rotary switch for inflation and deflation, and the power cord compartment.



Figure 3: The BluMill Air Bed set up in a room, illustrating its use as a temporary sleeping solution. Icons below highlight key features: 1 Person Max 100kg, Built-in Pump, Optimal Support, and Inflates/Deflates in under 5 minutes.

OPERATING AND DEFLATION

Adjusting Firmness

The air bed's firmness can be adjusted during inflation. For a softer feel, stop inflation earlier. For a firmer feel, allow the pump to run longer, but always ensure not to over-inflate beyond the bed's capacity.

Deflation and Storage

1. **Plug In:** Connect the power cord of the integrated pump to an electrical outlet.
2. **Deflate:** Turn the rotary switch on the pump to the "DEFLATE" position. The pump will begin to extract air from the mattress.
3. **Complete Deflation:** Allow the pump to run until all air is removed and the mattress is flat. This typically takes 3 to 5 minutes.
4. **Unplug:** Disconnect the power cord and store it in its compartment.

5. **Fold and Store:** Carefully fold the deflated air bed and place it into the provided carry bag for compact storage.



Figure 4: The practical carry bag included with the BluMill Air Bed. This black fabric bag allows for easy and compact storage and transport of the deflated mattress.

MAINTENANCE

Cleaning

To clean the air bed, wipe the flocked surface and PVC sides with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Ensure the air bed is completely dry before storing.

Repairing Punctures

In case of a small puncture, use the included repair kit. Clean the area around the puncture, apply the patch according to the repair kit instructions, and allow sufficient time for it to cure before re-inflating the bed.

TROUBLESHOOTING

• Air Bed Not Inflating:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check that the rotary switch on the pump is set to the "INFLATE" position.
- Verify there are no obstructions in the pump's air intake or output.

• Air Bed Not Holding Air / Losing Firmness:

- Inspect the entire surface of the air bed for any punctures or leaks. Use soapy water to identify small leaks

(bubbles will form).

- Ensure the pump's rotary switch is fully in the "OFF" position after inflation to seal the air.
- Check the valve cap (if applicable) for a secure seal.
- Note that PVC material can stretch slightly during initial uses, which may give the impression of air loss. Re-inflate as needed.

• **Pump Not Working:**

- Check the power supply.
- Ensure the pump has not overheated. If it has, unplug it and allow it to cool for at least 20 minutes before attempting to use it again.

SPECIFICATIONS

Feature	Specification
Brand	BluMill
Model Number	12079
Dimensions (L x W x H)	191 x 99 x 36 cm (75.2 x 39 x 14.2 inches)
Maximum Weight Capacity	100 kg (220 lbs)
Material	0.57 mm thick PVC (Polyvinyl Chloride)
Item Weight	4.81 kg (10.6 lbs)
Inflation/Deflation Time	Approx. 3-5 minutes
Special Features	Integrated Electric Pump, Flocked Surface, Anti-slip Bottom
Included Components	Repair Kit, Carry Bag








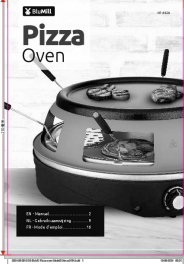
Figure 5: Diagram illustrating the dimensions of the BluMill Air Bed. The image clearly shows the length (191cm), width (99cm), and height (36cm) of the mattress.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact BluMill customer support directly. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual or require further assistance, please contact BluMill customer service through their official website or the retailer where the product was purchased.

© 2024 BluMill. All rights reserved.

	<p>BluMill MT-710 Robot Vacuum Cleaner: User Manual & Guide</p> <p>Official user manual for the BluMill MT-710 Robot Vacuum Cleaner. Find setup instructions, operating modes, maintenance tips, safety guidelines, and technical specifications for your smart home cleaning device.</p>
	<p>BluMill Airfryer Mini User Manual - HIC-AF-8061</p> <p>This user manual provides essential information for operating the BluMill Airfryer Mini (Model HIC-AF-8061), including safety instructions, usage guidelines, settings, and troubleshooting tips.</p>
	<p>BluMill Treadmill + Bluetooth User Manual</p> <p>Discover the BluMill Treadmill with Bluetooth (Model HSM-T09D5). This user manual provides comprehensive guidance on safety, assembly, operation, maintenance, and troubleshooting for an optimal home fitness experience.</p>
	<p>BluMill Coffee Machine with Milk Frother User Manual</p> <p>Comprehensive user manual for the BluMill Coffee Machine with Milk Frother, covering setup, operation, cleaning, and troubleshooting.</p>
	<p>BluMill Spa Pool Santa Monica ZXJW0009 User Manual</p> <p>Comprehensive user manual for the BluMill Spa Pool Santa Monica (model ZXJW0009), providing essential safety, installation, operation, maintenance, and troubleshooting guidance.</p>
	<p>BluMill Pizza Oven HF-402A User Manual</p> <p>This user manual provides comprehensive instructions for the BluMill Pizza Oven HF-402A, covering safety, operation, cleaning, and technical details. Learn how to safely use and maintain your BluMill pizza oven.</p>

