

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER Dual Brew 14-Cup Carafe Single Serve Coffee Maker \(Model SS0441-0BD\) User Manual](#)

BLACK+DECKER SS0441-0BD

BLACK+DECKER Dual Brew 14-Cup Carafe Single Serve Coffee Maker (Model SS0441-0BD) User Manual

Model: SS0441-0BD

INTRODUCTION

Thank you for choosing the BLACK+DECKER Dual Brew Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Instructions

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for household use only.

PRODUCT OVERVIEW

The BLACK+DECKER Dual Brew Coffee Maker offers versatile brewing options for both single-serve cups and full carafes. Key components and features are outlined below.

BLACK+DECKER

CARAFE

8oz — 10oz — 12oz

6 cups — 10 cups — 14 cups

SINGLE

BREW/
OFF

CLEAN

BREW
SIZE



Figure 1: Front view of the BLACK+DECKER Dual Brew Coffee Maker. This image displays the main unit with the carafe in place, highlighting its sleek black and silver design.



Figure 2: Key features of the coffee maker, including the mug-safe stand for direct brewing into mugs, the easy one-touch auto-clean function, and the large removable 70 oz. water tank for convenient refilling.



Single-Serve Cups

8 oz., 10 oz., or 12 oz.

Figure 3: Close-up of the control panel, showing buttons for "BREW/OFF", "CLEAN", and "BREW SIZE". Indicators for carafe (6, 10, 14 cups) and single-serve (8oz, 10oz, 12oz) options are visible.



Reusable Filter Baskets

Figure 4: The reusable filter baskets for both K-Cup pods and ground coffee, designed for easy cleaning and cost savings.

SETUP

Unpacking and Initial Cleaning

1. Carefully remove all packaging materials from the coffee maker.
2. Wash the carafe, carafe lid, reusable carafe filter, single-serve filter basket, and K-Cup pod holder in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Place the coffee maker on a flat, stable surface.

First Use (Cleaning Cycle)

Before brewing coffee for the first time, it is recommended to run a cleaning cycle to remove any manufacturing residues.

1. Fill the removable water reservoir with fresh water up to the "MAX" fill line.

2. Ensure no coffee grounds or K-Cup pods are in the filter baskets.
3. Place the empty carafe on the warming plate.
4. Press the "BREW/OFF" button to start a full carafe brew cycle with just water.
5. Once the cycle is complete, discard the water from the carafe.
6. Repeat this process for the single-serve side by placing a mug on the mug-safe stand and selecting a single-serve size.

OPERATING INSTRUCTIONS

Your BLACK+DECKER Dual Brew Coffee Maker allows you to brew coffee using either a carafe or single-serve method.

Brewing a Carafe (6, 10, or 14 Cups)

1. Fill the removable water reservoir with fresh water to the desired level for 6, 10, or 14 cups.
2. Insert the reusable carafe filter into the filter basket. Add the appropriate amount of ground coffee (approximately 1 tablespoon per cup).
3. Place the carafe with its lid on the warming plate.
4. Press the "BREW SIZE" button until the indicator light for your desired carafe size (6, 10, or 14 cups) is illuminated.
5. Press the "BREW/OFF" button to start brewing. The indicator light will illuminate.
6. Once brewing is complete, the coffee maker will enter the "Keep Warm" mode for up to 2 hours.
7. To turn off the coffee maker before the 2-hour keep warm cycle ends, press the "BREW/OFF" button.



**Keep
Warm Plate**

Enjoy a cup hours later

Figure 5: The coffee carafe resting on the keep warm plate, illustrating the feature that maintains coffee temperature for up to two hours after brewing.

Brewing a Single-Serve Cup (8oz, 10oz, or 12oz)

1. Fill the removable water reservoir with fresh water to the desired level for your single-serve cup (8oz, 10oz, or 12oz). Do not exceed the "MAX" fill line.
2. **For K-Cup Pods:** Insert a K-Cup pod into the K-Cup pod holder. Close the lid firmly.
3. **For Ground Coffee:** Insert the reusable single-serve filter basket into the coffee maker. Add ground coffee (approximately 1-2 tablespoons, depending on desired strength). Close the lid firmly.
4. Place your mug on the mug-safe stand.
5. Press the "BREW SIZE" button until the indicator light for your desired single-serve size (8oz, 10oz, or 12oz) is illuminated.
6. Press the "BREW/OFF" button to start brewing. The indicator light will illuminate.
7. Once brewing is complete, the coffee maker will automatically turn off.



3 Ways to Brew

Single-serve cups, 14-cup*
carafe, K-Cup®+ pods

*one serving equals approximately 5 ounces (varies by brewing technique)
†K-Cup® is registered trademark of Keurig Green Mountain

Figure 6: This image demonstrates the versatility of the coffee maker, showing options for brewing single-serve cups, using K-Cup pods, or filling a 14-cup carafe.

K-CUP[®]+ POD OR GROUND FILTER COMPATIBLE

The capsule holder allows you to brew with convenient K-Cup[®]+ pods. The reusable single-serve and carafe filters allow you to brew with your own fresh coffee grounds.

† K-Cup[®] is a registered trademark of Keurig Green Mountain, Inc. Empower Brands, LLC is not affiliated with, endorsed by, or sponsored by Keurig Green Mountain, Inc.



CHOOSE YOUR SIZE

Fill your mug with 8 oz., 10 oz., or 12 oz. of your favorite coffee or set the Brew function to brew 6, 10, or 14 cups*.

REUSABLE SINGLE-SERVE & CARAFE FILTERS

Both filters are dishwasher-safe for quick and easy clean-up.



Figure 7: Illustrates the compatibility with both K-Cup pods and ground coffee filters, alongside the control panel for selecting desired brew sizes (8oz, 10oz, 12oz for single-serve; 6, 10, 14 cups for carafe).

MAINTENANCE

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the carafe, carafe lid, reusable carafe filter, single-serve filter basket, and K-Cup pod holder in warm, soapy water after each use. These parts are also dishwasher-safe (top rack recommended).
- Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Empty and rinse the water reservoir daily.

Descaling (Auto-Clean Function)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting performance and coffee taste. The "CLEAN" indicator light will illuminate when descaling is recommended. It is advised to descale every 60-90 days, or more frequently in areas with hard water.

1. Ensure the coffee maker is empty of coffee grounds or K-Cup pods.
2. Fill the water reservoir with 1 cup of white vinegar and 3 cups of cold water.
3. Place the empty carafe on the warming plate.
4. Press the "CLEAN" button. The "CLEAN" indicator light will flash, and the cleaning cycle will begin.
5. The cleaning cycle will take approximately 45-60 minutes. During this time, the coffee maker will brew a portion of the cleaning solution, pause, and then complete the cycle.
6. Once the "CLEAN" light turns off, discard the vinegar solution from the carafe.
7. Fill the water reservoir with fresh water and run two full carafe brew cycles with just water to rinse the system thoroughly.

TROUBLESHOOTING

Review the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Coffee does not brew.	<ul style="list-style-type: none"> Coffee maker not plugged in. Water reservoir empty. "BREW/OFF" button not pressed. Brew basket not properly seated. 	<ul style="list-style-type: none"> Ensure the power cord is securely plugged into a working outlet. Fill the water reservoir with fresh water. Press the "BREW/OFF" button. Ensure the brew basket is correctly inserted.
Coffee tastes weak or too strong.	<ul style="list-style-type: none"> Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine. 	<ul style="list-style-type: none"> Adjust the amount of coffee grounds used. Use medium-grind coffee for optimal results.
"CLEAN" light illuminates.	<ul style="list-style-type: none"> Indicates mineral buildup. 	<ul style="list-style-type: none"> Run a descaling cycle using the "CLEAN" function as described in the Maintenance section.
Water leaks from the coffee maker.	<ul style="list-style-type: none"> Water reservoir overfilled. Reservoir not properly seated. Brew basket overflowing. 	<ul style="list-style-type: none"> Do not fill water past the "MAX" line. Ensure the water reservoir is securely in place. Check that the filter basket is not clogged and that the correct amount of coffee grounds is used.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	Dual Brew Single Coffee Maker
Item Model Number	SS0441-0BD
Coffee Maker Type	Drip Coffee Machine
Coffee Input Type	Pods and Grounds
Carafe Capacity	Up to 14 cups
Single Serve Sizes	8 oz, 10 oz, 12 oz
Water Reservoir Capacity	70 oz (removable)
Special Features	Auto Clean Function, Keep Warm Plate (2 hours), Removable Tank, Mug-Safe Stand
Product Dimensions	16.14"D x 9.05"W x 16.85"H
Item Weight	10.93 pounds
UPC	050875002289



Figure 8: A diagram illustrating the dimensions of the coffee maker.

WARRANTY INFORMATION

This BLACK+DECKER Dual Brew Coffee Maker (Model SS0441-0BD) is covered by a **2-Year Limited Warranty**. This warranty covers any defects in material or workmanship under normal use during the warranty period. The warranty does not cover damage resulting from accident, misuse, abuse, or unauthorized modification. Please retain your proof of purchase for warranty claims.

2 HOUR AUTO SHUT-OFF

When the brewing cycle is complete, the coffeemaker enters into the Keep Warm mode and shuts off after two hours for peace of mind with every use.



KEEP WARM PLATE

Non-stick plate keeps coffee warm for up to 2 hours after brewing is complete.



2-YEAR LIMITED WARRANTY

The integrated cord wrap makes storage and display simpler.



Figure 9: This image highlights the 2-year limited warranty and the 2-hour auto shut-off feature, which provides peace of mind by automatically turning off the warming plate after two hours.

CUSTOMER SUPPORT

For technical assistance, warranty service, or to order replacement parts, please contact BLACK+DECKER customer support. Refer to the official BLACK+DECKER website or your product packaging for the most current contact information.

You can also visit the official [BLACK+DECKER Store on Amazon](#) for more product information and support resources.

