

## COWSAR CM3729-BLACK

# COWSAR CM3729-BLACK Single Serve Coffee Maker Instruction Manual

Model: CM3729-BLACK

## 1. INTRODUCTION

---

Thank you for choosing the COWSAR Single Serve Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read it thoroughly before first use and keep it for future reference.

The COWSAR CM3729-BLACK is a versatile 2-in-1 coffee maker designed to brew both K-Cups and ground coffee, offering convenience and flexibility for your daily coffee ritual. With multiple brew size options and a user-friendly touchscreen, enjoying your favorite coffee has never been easier.

## 2. PRODUCT FEATURES

---

- **Versatile Brewing:** Supports both K-Cups and ground coffee with an included reusable filter.
- **Fast Brewing:** Enjoy a fresh cup of coffee in as little as 90 seconds.
- **User-Friendly Touchscreen:** Simple operation with a responsive touchscreen interface.
- **Multiple Brew Sizes:** Offers 5 brew size options: 6 oz, 8 oz, 10 oz, 12 oz, and 14 oz.
- **Large Water Tank:** Features a detachable 40 oz (0.9 Liters) water tank, reducing the need for frequent refills.
- **Compact Design:** Sleek dimensions (10.8"D x 5.5"W x 12"H) for easy placement and storage.
- **Easy to Clean:** Removable drip tray and descaling indicator for hassle-free maintenance.

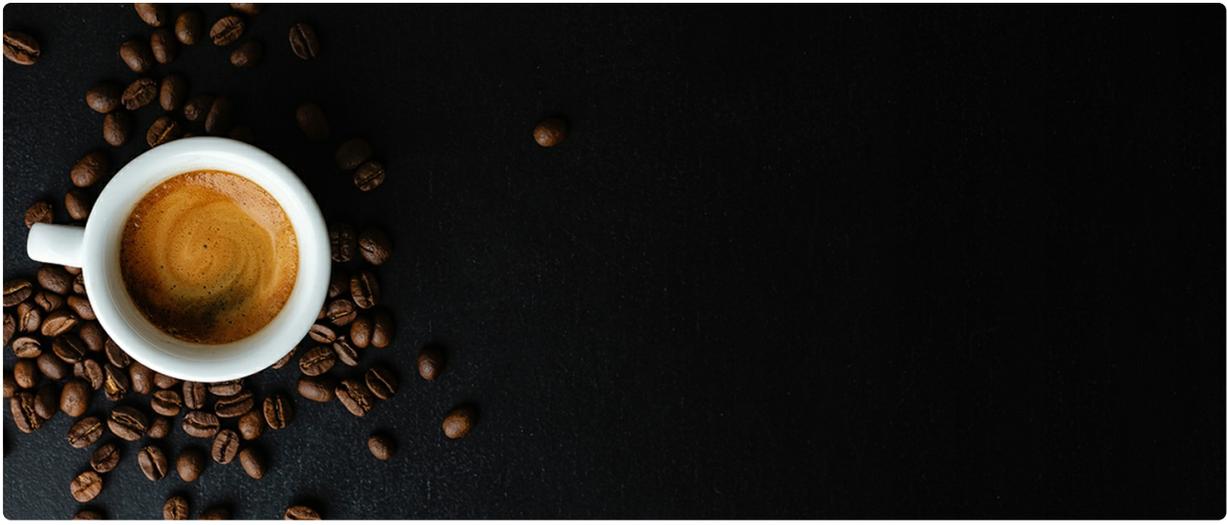


Figure 1: COWSAR 2-in-1 Coffee Maker highlighting key features.

### 3. SETUP

---

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: coffee maker unit, detachable water tank, reusable ground coffee filter, and instruction manual.
2. **Initial Cleaning:** Before first use, wash the detachable water tank, reusable filter, and drip tray with warm, soapy water. Rinse thoroughly and dry.
3. **Water Tank Installation:** Place the detachable 40 oz water tank onto the back of the coffee maker. Ensure it is securely seated.
4. **Fill Water Tank:** Fill the water tank with fresh, cold water up to the 'MAX' line (40 oz). Do not exceed the 'MAX' line. The minimum fill level is 15 oz.
5. **Power Connection:** Plug the coffee maker into a grounded electrical outlet. The power button will illuminate.
6. **Initial Rinse Cycle:** To clean the internal components, perform a rinse cycle without coffee. Fill the water tank, place an empty mug on the drip tray, select the 14 oz brew size, and press 'BREW'. Discard the hot water. Repeat this process 2-3 times.



Figure 2: Detachable 40 oz water tank and removable drip tray.

## 4. OPERATING INSTRUCTIONS

### 4.1. Brewing with K-Cups

1. **Open Lid:** Lift the lid of the brewing chamber.
2. **Insert K-Cup:** Place a K-Cup pod into the K-Cup holder. Ensure it is seated correctly.

3. **Close Lid:** Firmly close the lid until it clicks into place.
4. **Place Mug:** Place your coffee mug on the drip tray.
5. **Select Brew Size:** On the touchscreen, press the 'SIZE' button repeatedly to cycle through the available brew sizes (6 oz, 8 oz, 10 oz, 12 oz, 14 oz) until your desired size is illuminated.
6. **Start Brewing:** Press the 'BREW' button. The coffee maker will begin heating and then dispense coffee into your mug.
7. **Enjoy:** Once brewing is complete, carefully remove your mug and enjoy your coffee.

#### 4.2. Brewing with Ground Coffee

1. **Open Lid:** Lift the lid of the brewing chamber.
2. **Prepare Filter:** Open the reusable ground coffee filter. Fill it with your desired amount of ground coffee, ensuring not to exceed the 'MAX' fill line inside the filter. Close the filter lid securely.
3. **Insert Filter:** Place the filled reusable filter into the brewing chamber.
4. **Close Lid:** Firmly close the lid until it clicks into place.
5. **Place Mug:** Place your coffee mug on the drip tray.
6. **Select Brew Size:** On the touchscreen, press the 'SIZE' button repeatedly to cycle through the available brew sizes (6 oz, 8 oz, 10 oz, 12 oz, 14 oz) until your desired size is illuminated.
7. **Start Brewing:** Press the 'BREW' button. The coffee maker will begin heating and then dispense coffee into your mug.
8. **Enjoy:** Once brewing is complete, carefully remove your mug and enjoy your coffee.



Figure 3: Supports both K-Cup and Ground Coffee.

## EASY 3 STEPS TO GET A CUP OF COFFEE



Figure 4: Easy 3 steps to get a cup of coffee.

Your browser does not support the video tag.

Video 1: Demonstration of COWSAR Coffee Maker using K-Cups and ground coffee, highlighting various cup sizes.

## 5. MAINTENANCE AND CLEANING

### 5.1. Daily Cleaning

- **Water Tank:** The detachable 40 oz water tank can be easily removed and washed with warm, soapy water. Rinse thoroughly.
- **Reusable Filter:** After each use with ground coffee, remove and empty the reusable filter. Wash it with warm, soapy water and rinse.
- **Drip Tray:** The removable drip tray collects spills and can be easily detached for cleaning. Wash with warm, soapy water and rinse.
- **Exterior:** Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the unit in water.

### 5.2. Descaling (Deep Cleaning)

Over time, mineral deposits (scale) can build up inside your coffee maker, affecting performance and taste. The descaling indicator light will illuminate when it's time for a thorough cleaning.

1. **Prepare Solution:** Fill the water tank with a mixture of white vinegar and water (e.g., 1:1 ratio) or a commercial descaling solution according to its instructions.
2. **Start Self-Cleaning:** Place a large empty mug or container on the drip tray. Press and hold the 'SIZE' and 'BREW' buttons simultaneously for 5 seconds. The coffee machine will automatically enter cleaning mode and run the descaling cycle.
3. **Rinse Cycles:** After the descaling cycle is complete, empty the water tank and refill it with fresh, clean water. Run 2-3 full brew cycles with plain water to rinse out any remaining descaling solution.



Figure 5: Descale Reminder light indicates cleaning is required.



Figure 6: Self-cleaning function activated by pressing 'SIZE' and 'BREW' buttons for 5 seconds.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker not turning on.	Not plugged in or power outage.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
'ADD WATER' indicator light is on.	Water tank is empty or below minimum level.	Refill the water tank with fresh, cold water above the 15 oz minimum line.
Coffee is not brewing.	Lid not closed properly, water tank not seated, or no water.	Ensure the brewing chamber lid is fully closed. Check if the water tank is correctly installed and filled.
Coffee tastes weak or watery.	Insufficient coffee grounds/K-Cup, or descaling needed.	Use more coffee grounds or a stronger K-Cup. Perform a descaling cycle if the indicator is on.
Coffee maker is loud during brewing.	Normal operation, or air in the system.	Some noise is normal during heating and brewing. Ensure the water tank is full to prevent air pockets.

Problem	Possible Cause	Solution
'DESCALE' indicator light is on.	Mineral buildup in the machine.	Perform a descaling cycle as described in Section 5.2.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	COWSAR
Model Name	CM3729-BLACK
Color	Black
Product Dimensions	10.8"D x 5.5"W x 12"H
Item Weight	5.2 pounds
Capacity	0.9 Liters (40 oz)
Special Feature	Touchscreen, Swift Brewing, Compatible with K-Cups and Ground Coffee
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Voltage	120 Volts
Included Components	Reusable Filter

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact COWSAR customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.