

RESUXI 985

RESUXI Model 985 Professional Cordless Hair Clipper and Trimmer Set

INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the RESUXI Model 985 Professional Cordless Hair Clipper and Trimmer Set. This comprehensive grooming kit is designed to provide precise and efficient hair cutting, trimming, and detailing for personal and professional use. This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.

2. Product Overview and Package Contents

Your RESUXI Model 985 set includes a main hair clipper, a T-blade hair trimmer, and a nose hair trimmer, along with various accessories to facilitate a complete grooming experience.



Image: The complete RESUXI Model 985 grooming kit, showcasing the main hair clipper, T-blade trimmer, nose hair trimmer, various guide combs, charging cables, and a storage bag.

Package Contents:

- 1x Hair Clipper (Main Unit)
- 1x Hair Trimmer (T-Blade)
- 1x Nose Hair Trimmer
- 12x Guide Combs for Hair Clipper (various lengths)
- 4x Guide Combs for Hair Trimmer (various lengths)
- 3x USB Charging Cables
- 1x Barber Cape
- 1x Cleaning Brush
- 1x Barber's Comb
- 1x EVA Storage Bag
- 1x Blade Oil (referred to as 'Oil shears' in product data)

Suitable for family gifts

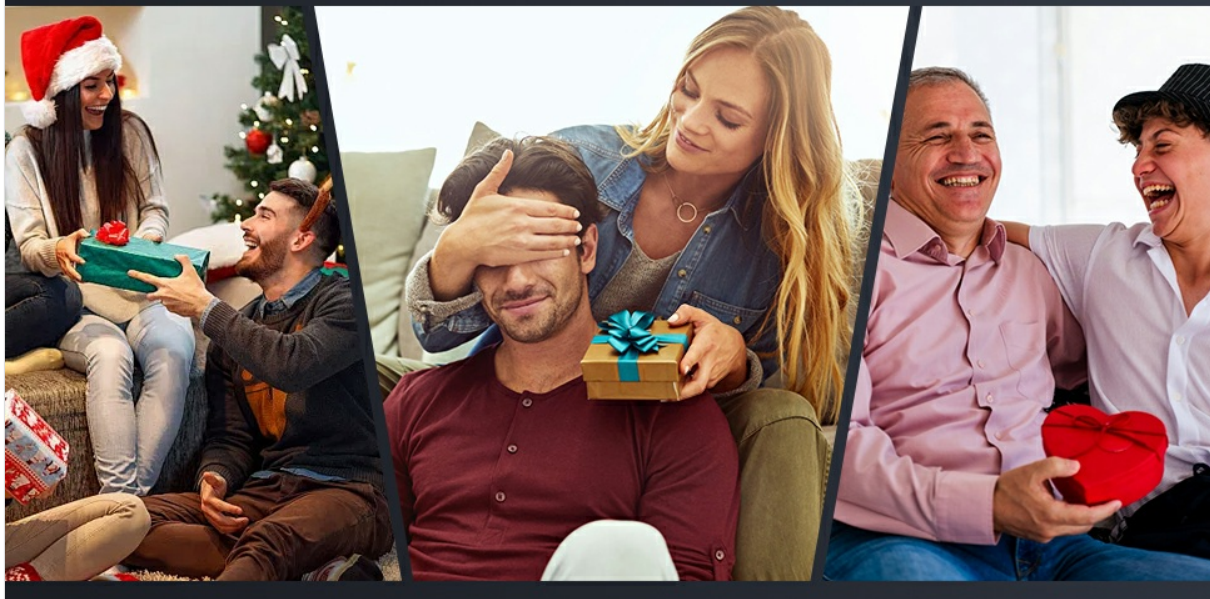 


Image: Detailed view of the matching accessories included with the RESUXI Model 985 kit, such as guide combs, charging cables, cleaning brush, and comb.

3. Safety Information

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Always unplug the product from the power source before cleaning or performing any maintenance.
- Do not use the product while sleeping or if you are unconscious.
- Keep the product away from heat sources, direct sunlight, and flammable materials.
- Store the product out of reach of children to prevent accidental injury.
- Exercise caution when using the product near sensitive areas such as the face and eyes.
- Do not immerse the device in water or use it in wet conditions unless explicitly stated as waterproof.
- Only use the provided charging cables and accessories.
- If the device appears damaged or malfunctions, discontinue use immediately and contact customer support.

4. Setup

4.1 Initial Charging

Before first use, fully charge each device. Connect the appropriate USB charging cable to the charging port at the bottom of the clipper, trimmer, or nose trimmer, and then to a compatible USB power adapter (not included) or computer USB port.

- **Hair Clipper:** Approximately 2.5 hours for a full charge, providing up to 180 minutes of runtime.
- **Hair Trimmer:** Approximately 3 hours for a full charge, providing up to 150 minutes of runtime.
- **Nose Hair Trimmer:** Approximately 1.5 hours for a full charge, providing up to 90 minutes of runtime.

The integrated LCD display on the hair clipper and T-blade trimmer will show the remaining charge percentage. It will also indicate when the battery is low or when blade oil is needed.



Image: Visual representation of the battery capacity and charging/runtime for the hair clipper, hair trimmer, and nose hair trimmer.

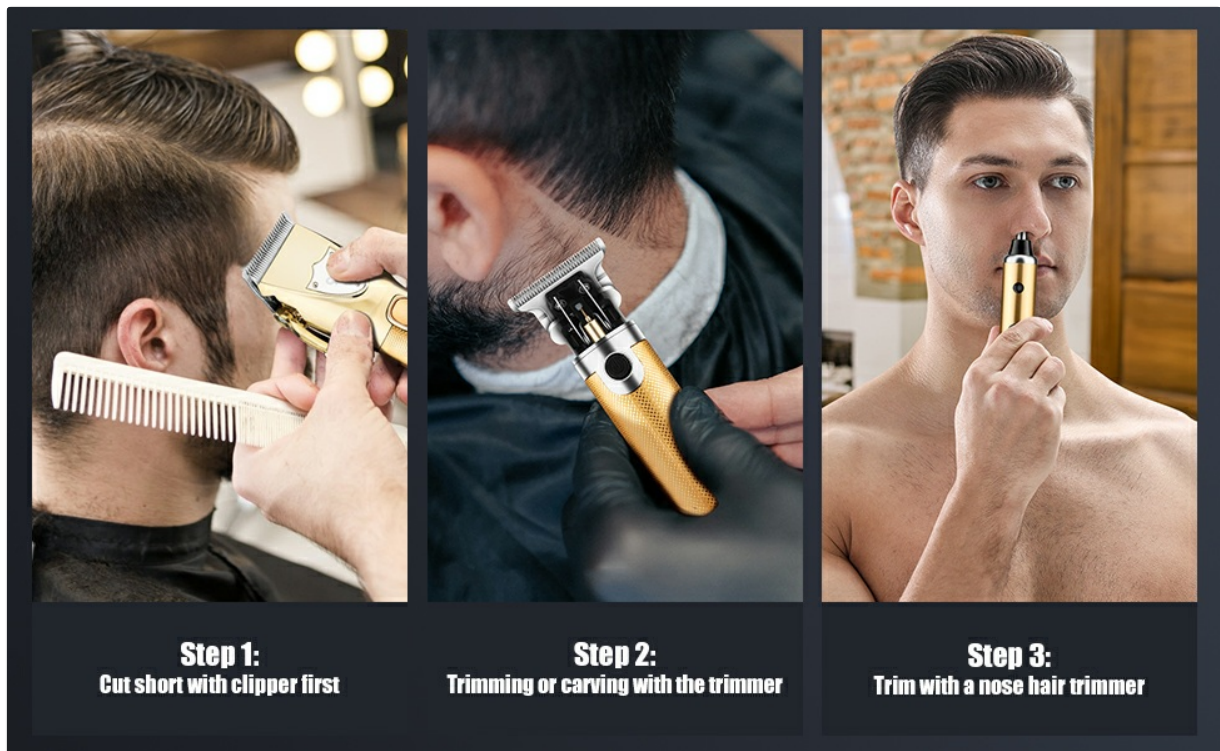 


Image: Close-up of the intelligent LED display showing battery percentage, low battery warning, and oil drop reminder.

4.2 Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the blade of the hair clipper or T-blade trimmer and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.

5. Operating Instructions

5.1 General Operation

Press the power button on each device to turn it on or off. Ensure the blades are clean and oiled before each use for optimal performance.

MORE DETAILS



**Stainless Steel
R blade head**



**Mechanical
adjustment lever**



Bottom charging



One touch on/off



**Tail hanging for
easy storage**



LED Screen

Image: Detailed view highlighting features such as the one-touch on/off button, bottom charging port, and tail hanging loop for storage.

5.2 Using the Hair Clipper

The main hair clipper is ideal for general hair cutting and shaping. Attach the desired guide comb. The clipper features a mechanical adjustment lever for fine-tuning the blade pitch (0.1-3mm) without a comb, allowing for precise cutting lengths.

- Start with a longer guide comb if you are unsure of the desired length.
- Move the clipper against the direction of hair growth for an even cut.
- Use the adjustment lever to achieve fades or blend different lengths.



Image: The hair clipper demonstrating its four-gear adjustable blade pitch (0.1-3mm) for fine cutting.



Image: A person using the RESUXI hair clipper to cut hair, illustrating its application.

5.3 Using the Hair Trimmer (T-Blade)

The T-blade trimmer is designed for precise detailing, creating sharp lines, and trimming beards, sideburns, and necklines. Attach one of the four guide combs for desired beard or stubble length, or use without a comb for zero-gapped precision.

- Hold the trimmer at a slight angle to the skin for clean lines.
- Use short, controlled strokes for intricate designs or shaping.



Image: A person using the RESUXI T-blade hair trimmer for beard trimming and creating hair art, demonstrating its precision capabilities.

5.4 Using the Nose Hair Trimmer

The nose hair trimmer features an R-shaped round head designed for safe and effective trimming of nose and ear hair. The 360-degree fit ensures moderate trimming while retaining the natural dust filtering function of nose hair.

- Gently insert the trimmer tip into the nostril or ear canal.
- Move the trimmer in a circular motion to trim unwanted hair.
- Do not insert the trimmer too deeply into the nostril or ear.

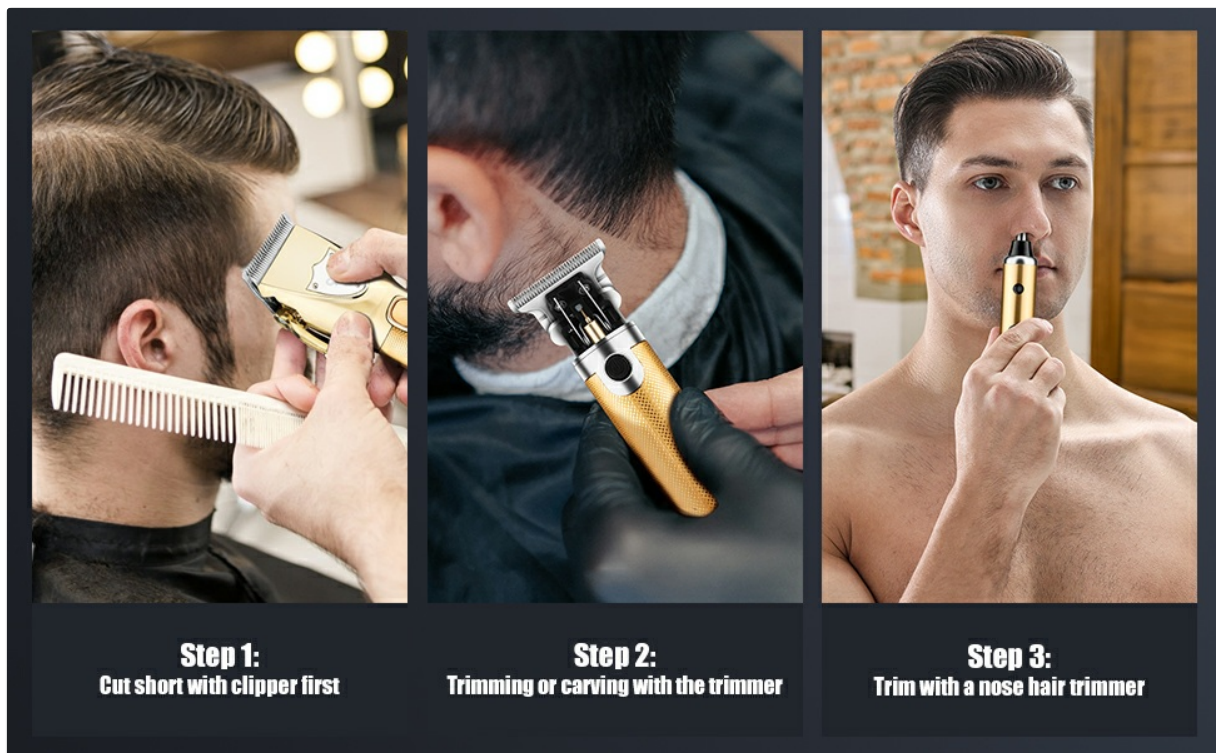


Image: Close-up of the nose hair trimmer head, illustrating its R-shaped round design for safe and effective trimming.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your RESUXI grooming kit.

6.1 Cleaning

- After each use, turn off and unplug the device.
- Use the provided cleaning brush to remove loose hairs from the blades and cutting head.
- For thorough cleaning, the blade heads can often be detached (refer to specific device instructions for removal). Rinse detachable blades under running water and allow them to air dry completely before reattaching. Ensure the main body of the device does not get wet.

6.2 Oiling Blades

Regular oiling of the blades is crucial for maintaining sharpness and smooth operation. Apply a few drops of the included blade oil to the teeth of the clipper and trimmer blades after every few uses or when the LCD display indicates an oil drop warning. Turn on the device for a few seconds to distribute the oil evenly.

6.3 Storage

Store all components in the provided EVA storage bag in a cool, dry place, away from direct sunlight and moisture. Ensure all devices are turned off before storing.

7. Troubleshooting

If you encounter any issues with your RESUXI grooming kit, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Device not charged.	Charge the device fully using the provided USB cable.
Poor cutting performance; Hair snagging.	Blades are dull, dirty, or not oiled; Hair buildup.	Clean the blades thoroughly with the brush. Apply blade oil. Ensure blades are properly aligned.
Excessive noise or vibration.	Blades require oiling; Foreign object lodged in blades.	Oil the blades. Inspect and remove any debris from the blade area.
Nose trimmer not effective.	Hair too long; Incorrect angle.	Ensure hair is not excessively long. Adjust the angle of insertion.

If the problem persists after attempting these solutions, please contact RESUXI customer support for further assistance.

8. Specifications

- **Model Name:** 985
- **Brand:** RESUXI
- **Power Source:** Rechargeable Lithium Ion Batteries (included)
- **Hair Clipper Charging Time:** 2.5 Hours
- **Hair Clipper Runtime:** Up to 180 minutes
- **Hair Trimmer Charging Time:** 3 Hours
- **Hair Trimmer Runtime:** Up to 150 minutes
- **Nose Trimmer Charging Time:** 1.5 Hours
- **Nose Trimmer Runtime:** Up to 90 minutes
- **Blade Material:** High Carbon Steel
- **Item Dimensions:** 15.83 x 6.1 x 3.78 inches (Package)
- **Item Weight:** 2.89 Pounds (Package)
- **Manufacturer:** RESUXI

9. Warranty and Support

For warranty information, product support, or any inquiries not covered in this manual, please refer to the warranty card included with your purchase or contact RESUXI customer service directly through their official website or the retailer where the product was purchased. Please have your model number (985) and purchase date available when contacting support.