

[Manuals.plus](#) /

> [TOSHIBA](#) /

> TOSHIBA Drum Type Washing Machine Dryer Width 60cm Wash 12kg Dry 7kg Right Opening TW-127XH3R(W) Gran White Large Capacity Drying Ag+ Antibacterial Water Detergent Auto Input Hot Water Washing User Manual

TOSHIBA TW-127XH3R(W)

TOSHIBA TW-127XH3R(W) Drum Type Washing Machine Dryer User Manual

Model: TW-127XH3R(W)

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your TOSHIBA TW-127XH3R(W) Drum Type Washing Machine Dryer. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged.

PRODUCT OVERVIEW

The TOSHIBA TW-127XH3R(W) is a high-performance drum type washing machine dryer designed for efficient and thorough laundry care. It features advanced technologies such as antibacterial ultra fine bubble wash, heat pump drying, and automatic detergent dispensing.



Image: Front view of the TOSHIBA TW-127XH3R(W) drum type washing machine dryer in Gran White.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine dryer.

Unpacking

1. Carefully remove all packaging materials.
2. Check for any damage during transit. Report any damage to your dealer immediately.
3. Remove all transit bolts from the rear of the machine. Keep them for future transport.

Location Requirements

The appliance should be placed on a firm, level surface. Ensure there is sufficient space around the unit for ventilation and door opening.

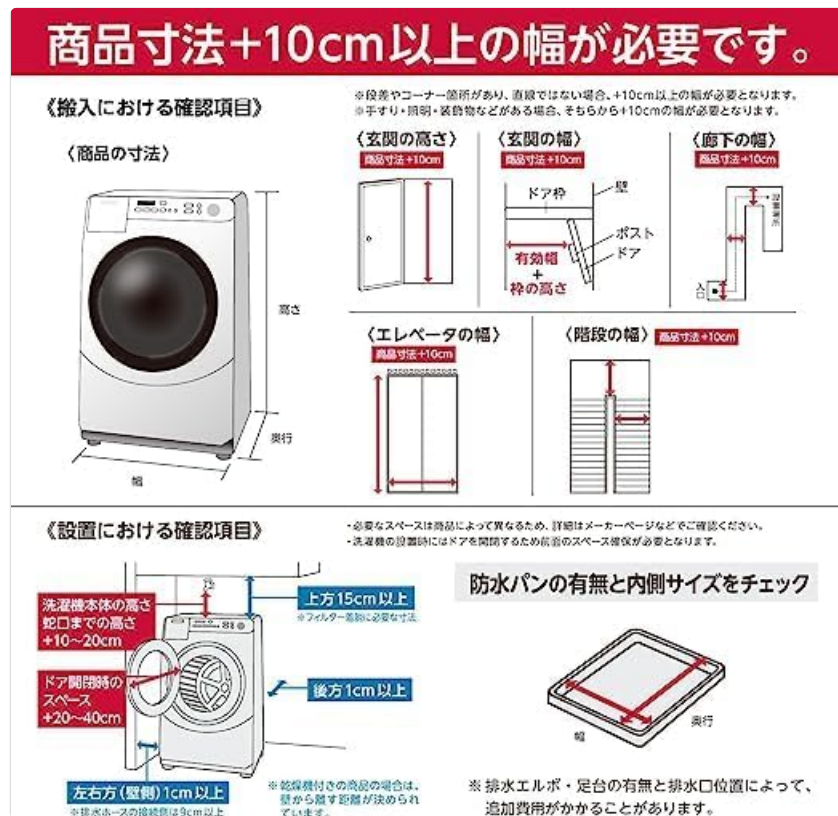


Image: Diagram illustrating the required installation space, including dimensions for width, depth, height, and clearance from walls. It also shows considerations for waterproof pans and drain hose connections.

Water and Electrical Connections

1. Connect the water supply hoses to the hot and cold water taps.
2. Ensure the drain hose is properly installed into a suitable drain.
3. Plug the power cord into a grounded electrical outlet (100V).

OPERATING INSTRUCTIONS

This section details the steps for operating your washing machine dryer.


Loading Laundry

1. Sort laundry by fabric type, color, and degree of soiling.
2. Open the door and load laundry loosely into the drum, ensuring not to overload. The maximum wash capacity is 12kg, and dry capacity is 7kg.

Adding Detergent and Softener

The appliance features an automatic liquid detergent and softener dispenser.

液体洗剤・柔軟剤 自動投入

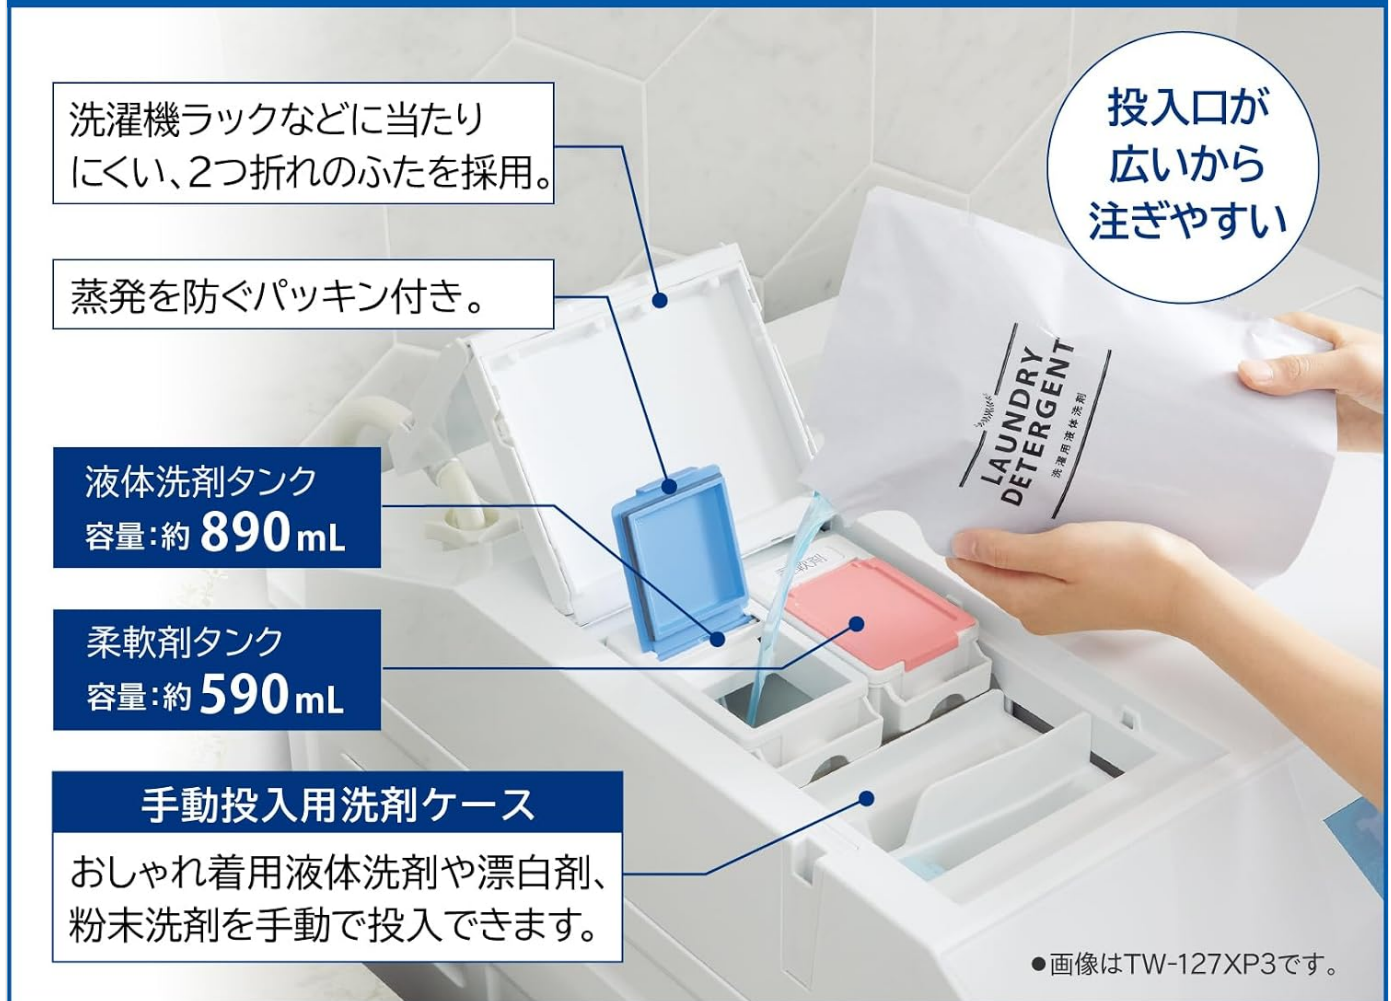

ここが
便利

- ▶ 計量や投入の手間を減らせる
- ▶ 自動で適量を量るから経済的
- ▶ 洗剤・柔軟剤の置き場所いらず



● 液体洗剤は890mL以下、柔軟剤は590mL以下の詰め替え用タイプの中身を1本全部入れられます。

Image: Close-up view of the automatic liquid detergent and softener dispenser compartments, showing how to refill them. The wide opening makes pouring easy.

1. Pour liquid detergent into the designated detergent compartment (approx. 890ml capacity).
2. Pour softener into the designated softener compartment (approx. 590ml capacity).
3. The machine will automatically dispense the correct amount based on the load.
4. For special detergents or powder detergents, use the manual input case.

Selecting a Program

Use the large color touch panel to select your desired wash and dry program.

ZABOON®	TW-127XP3	TW-127XH3	TW-127XM3
	 左開きタイプ/右開きタイプ有り	 左開きタイプ/右開きタイプ有り	
洗濯 ▶ 脱水容量	12.0kg	12.0kg	12.0kg
洗濯 ▶ 乾燥・乾燥容量	7.0kg	7.0kg	7.0kg
乾燥機能	ヒートポンプ除湿乾燥		
洗浄機能※1	 抗菌 ウルトラファインバブル洗浄 EX	 抗菌 ウルトラファインバブル洗浄 W	
温水洗浄機能	温水 抗菌ウルトラファインバブル洗浄EX	温水 抗菌ウルトラ ファインバブル洗浄W	—
	約60° / 約50° / 約40° / 約30° / 約15° 洗浄		
清潔機能※2	 (ハイパワー) UV除菌/UV除菌洗濯/UV除菌洗濯コース (ハイパワー) UV除菌消臭コース	 UV温風除菌/UV除菌洗乾コース 消臭コース	 除菌乾燥モード 除菌消臭コース
	液体洗剤・柔軟剤 自動投入		
使いやすさ	大型カラータッチパネル	LED表示	
	槽内LED照明		—
予約機能	時計機能内蔵 (タイマー式終了時刻設定)	1 ~ 2 4 時間後設定	

※1.★★★：抗菌ウルトラファインバブル洗浄EX、★★：抗菌ウルトラファインバブル洗浄W、★：抗菌ウルトラファインバブル洗浄。

※2.★★★：(ハイパワー) UV除菌/UV除菌洗濯/UV除菌洗濯コース (ハイパワー) UV除菌消臭コース、★★：UV温風除菌/UV除菌洗乾コース 消臭コース

★：除菌乾燥モード 除菌消臭コース

Image: Comparison table of different models (TW-127XP3, TW-127XH3, TW-127XM3) showing their wash/dry capacities, drying functions (Heat Pump Dehumidifying Drying), washing functions (Antibacterial Ultra Fine Bubble Wash EX, Antibacterial Ultra Fine Bubble Wash W), hot water wash options, cleaning functions, ease of use (Large Color Touch Panel, LED display), and reservation functions.

1. **Antibacterial Ultra Fine Bubble Wash W:** Penetrates detergent deep into fibers to remove dirt and prevent odors, with added antibacterial effect.

 


抗菌

ウルトラファインバブル洗淨

W
ダブル

繊維のすき間より小さいナノサイズの泡が、洗濯効果を高める！

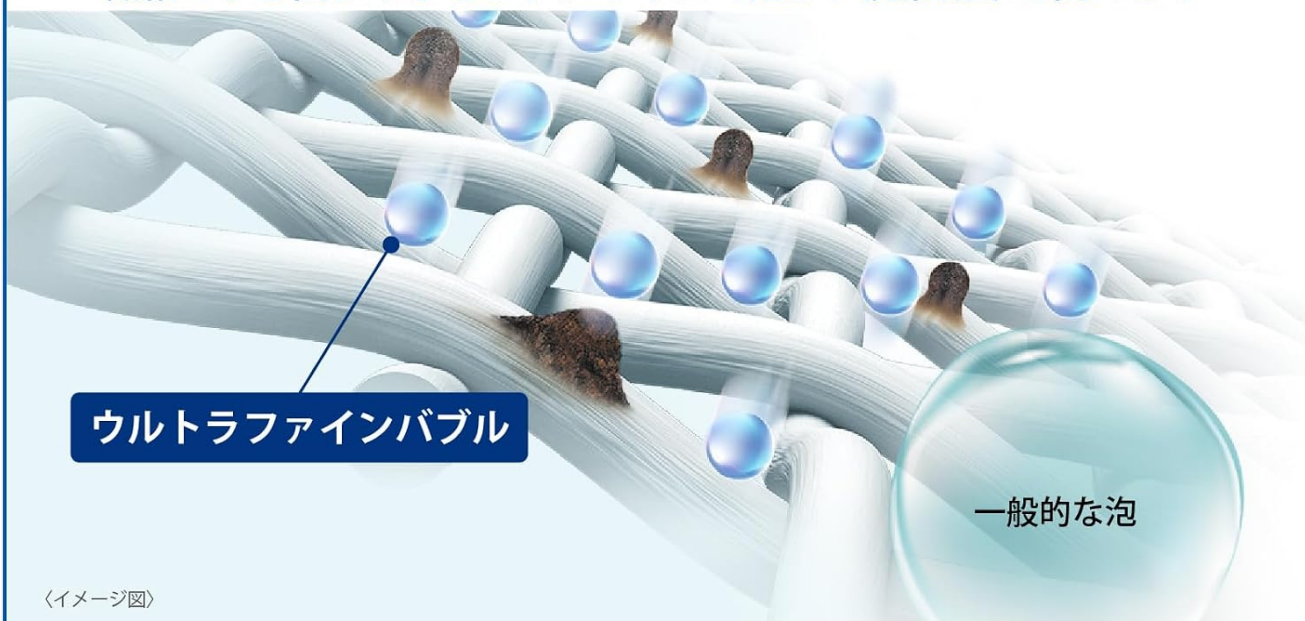

ウルトラファインバブル

一般的な泡

<イメージ図>

STEP 1



ウルトラファインバブルが洗剤の洗淨成分を吸着

STEP 2



繊維のすき間に浸透し、洗淨成分を届ける

STEP 3



洗淨成分が汚れをはがし取る効果を高める

●「ファインバブル」、「ウルトラファインバブル」、「FINE BUBBLE」は、一般社団法人ファインバブル産業会の登録商標です。

Image: Diagram illustrating how ultra fine bubbles penetrate fabric fibers to enhance washing effectiveness, showing the process of detergent adsorption, penetration, and dirt removal.

2. **Ultra Fine Bubble Rinse:** Adsorbs and removes residual detergent components for a clean rinse.
3. **Hot Water Antibacterial Ultra Fine Bubble Wash W:** Enhances cleaning power with warm water for more effective stain removal.
4. **Heat Pump Dehumidifying Drying:** Dries clothes quickly with large airflow while minimizing wrinkles, using gentle heat pump technology for a fluffy finish.
5. **UV Sterilization Drying Course (up to 4kg):** UV irradiation before washing and synergistic effect with warm air during drying sterilizes clothes and suppresses viruses.
6. **Mite Care Course (up to 3kg):** UV irradiation followed by warm air heating before washing to effectively remove mites. Recommended for blankets and bedding covers.

Starting the Cycle

1. Close the door securely.
2. Press the Start/Pause button to begin the cycle.

Smartphone Link (App Compatible)

Control your washing machine dryer remotely using the dedicated smartphone app for added convenience.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your appliance.

Cleaning the Lint Filter

Clean the lint filter after every drying cycle to maintain drying efficiency.



Image: Diagram showing how to remove and clean the lint filter, emphasizing the "Push de Pon!" mechanism for easy removal.

1. Open the filter cover.
2. Remove the lint filter and clean off any accumulated lint.
3. Rinse the filter under running water if necessary and ensure it is completely dry before reinserting.

Cleaning the Detergent Dispenser

Periodically clean the detergent and softener compartments to prevent residue buildup.

1. Remove the dispenser drawer.
2. Wash the drawer under running water and remove any residue.
3. Clean the housing of the dispenser with a damp cloth.

Drum Cleaning

Use the drum clean function regularly to keep the drum hygienic.

1. Refer to the control panel for the specific "Drum Clean" program.
2. Run the program without laundry.

TROUBLESHOOTING

Before contacting service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Child lock activated.	Check power connection; Ensure door is securely latched; Deactivate child lock.
Excessive vibration/noise	Transit bolts not removed; Appliance not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry evenly.

Problem	Possible Cause	Solution
Clothes not drying properly	Lint filter clogged; Overloaded dryer; Incorrect program selected.	Clean lint filter; Reduce load size; Select appropriate drying program.
Water leakage	Hoses not properly connected; Drain hose blocked.	Check and tighten hose connections; Clear any blockages in the drain hose.

SPECIFICATIONS

Detailed technical specifications for the TOSHIBA TW-127XH3R(W).

ヒートポンプ除湿乾燥

たくさん洗濯・乾燥出来て、圧倒的スピード。
さらにヒートポンプだから省エネ!

使い方に合わせて選べる乾燥設定

お急ぎ
モード

洗濯から乾燥までを
スピーディーに。

大容量
7kg 約96分 ※1

〈外干し〉



パイルが寝て、
ごわついたタオル。

節電
モード

電気代と運転音を
抑えたいときに。

電気代(目安)
大容量
7kg 約23円 ※1 約42dB ※2

〈ヒートポンプ除湿乾燥〉



繊維がふっくら
仕上がる。

● 衣類の量・素材、使用状況、一緒に乾燥する物の種類によって効果は異なります。(東芝ライフスタイル株式会社実験による)

※1 東芝ライフスタイル株式会社機種TW-127XH3。7kg洗濯乾燥時、標準コース「乾燥お急ぎモード」での消費電力量約1330Wh、電気代目安約41円(洗濯～乾燥行程)、標準コース「乾燥節電モード」での消費電力量約730Wh(洗濯～乾燥行程)洗濯から乾燥までの時間約205分。【電気代】電力料金目安単価31円/kWh(税込)、家電公取協調ペ(2022年7月改定)。電気代はあくまで目安であり、衣類の状況と使用環境により異なります。※2 運転音の表示は一般社団法人日本電機工業会洗濯機性能評価基準による。

室温・水温、水道水圧、設置・排水条件、衣類の量や種類、衣類の片寄り、風呂水の使用などにより、使用水量・消費電力量・運転時間が増減します。

Image: Technical drawing showing the detailed dimensions of the TOSHIBA TW-127XH3R(W) washing machine dryer, including width, depth, and height measurements.

Feature	Detail
---------	--------

Feature	Detail
Model Number	TW-127XH3R(W)
Wash/Spin Capacity	12 kg
Wash to Dry/Dry Capacity	7 kg
Overall Dimensions (W x D x H)	645 x 720 x 1060 mm (including water supply/drain hoses)
Product Dimensions (D x W x H)	72.2 x 64.5 x 106 cm
Product Weight	Approx. 89 kg
Voltage	100 Volts
Wash Noise Level	Approx. 32 dB
Spin Noise Level	Approx. 37 dB
Dry Noise Level	Approx. 48 dB (Energy saving mode: Approx. 42 dB)
Estimated Wash Time	Approx. 35 minutes
Estimated Wash to Dry Time	Approx. 96 minutes (Energy saving mode: Approx. 205 minutes)
Drum Material	Stainless Steel
Special Features	Inverter, Child Lock, Drum Clean, Vibration Reduction, Auto Dispense

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official TOSHIBA website.

Online Support: [TOSHIBA Official Store on Amazon.co.jp](#)

For technical assistance or spare parts, please contact your local authorized service center.