

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ECONTROLLY](#) /

› [ECONTROLLY MAG522w3 Remote Control Instruction Manual](#)

ECONTROLLY MAG522w3

ECONTROLLY MAG522w3 Remote Control Instruction Manual

Model: MAG522w3

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY MAG522w3 Remote Control. This remote is designed for compatibility with various INFOMIR Mag series devices, including Mag522 W3 v2, Mag520, Mag420, Mag322, and Mag254.

PACKAGE CONTENTS

- One (1) ECONTROLLY MAG522w3 Remote Control

Note: Instructions and batteries are not included in the package.

SETUP

Battery Installation

The ECONTROLLY MAG522w3 Remote Control requires two (2) AAA alkaline batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.





Image showing the rear of the ECONTROLLY MAG522w3 remote control with the battery cover removed, revealing the battery slots. Two AAA batteries are visible, correctly oriented.

OPERATING INSTRUCTIONS

Basic Operation

This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible INFOMIR Mag series devices.

- **Power Button:** Located at the top right, use to turn your device on or off.
- **Navigation Pad (OK button):** Use the directional arrows to navigate menus and the central "OK" button to confirm selections.
- **Volume Control:** Buttons labeled "VOL +" and "VOL -" adjust the audio volume.
- **Channel Control:** Buttons labeled "CHAN +" and "CHAN -" change channels.
- **Numeric Keypad:** Use for direct channel input or other numerical functions.
- **Function Keys (F1, F2, F3, F4):** These colored buttons may have specific functions depending on your connected device and its software.
- **Mute Button:** Silences the audio.
- **Menu/Home Button:** Accesses the main menu or home screen of your device.
- **Back/Return Button:** Returns to the previous screen or menu.



Image displaying the front face of the ECONTROLLY MAG522w3 remote control, highlighting the layout of all buttons including power, navigation, volume, channel, and numeric keys.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always use new AAA alkaline batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and your device's IR receiver. Obstructions can block the signal.
- **Device Compatibility:** Confirm that your device (e.g., INFOMIR Mag522 W3 v2, Mag520, etc.) is listed as compatible with this remote control.

Intermittent Functionality

- **Battery Power:** Weak batteries can cause intermittent operation. Replace them.
- **Interference:** Other electronic devices or strong light sources might interfere with the remote's signal. Try using the remote in a different environment.

SPECIFICATIONS

- **Model:** MAG522w3
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** 7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
- **Weight:** 1.76 ounces (50 grams)
- **Color:** Black
- **Special Feature:** No programming required
- **Compatible Devices:** INFOMIR Mag522 W3 v2, Mag520, Mag420, Mag322, Mag254 (and other compatible models)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact ECONTROLLY customer service directly. Keep your purchase receipt for warranty claims.