

## Bear QSJ-D03W5-DOUBLE

# Bear Mini Food Chopper User Manual

Model: QSJ-D03W5-DOUBLE

Brand: Bear

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the bowl while chopping to prevent injury and damage to the chopper.
- Avoid contact with moving parts. Blades are sharp. Handle with extreme care.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure the lid is securely locked in place before operating the chopper.
- Do not process extremely hard foods such as frozen meat or bones, as this may damage the blades or motor.

## 2. PRODUCT OVERVIEW

The Bear Mini Food Chopper is designed for efficient chopping, cutting, and mixing of various food ingredients. It comes with two different capacity bowls for versatile use.



**Figure 2.1:** Main components of the Bear Mini Food Chopper, including the motor unit, glass bowl, stainless steel bowl, and blades, surrounded by fresh ingredients.

2 GLASS BOWLS FOR DIFFERENT USES

2L capacity for meat/vegetables/carrots

1.8L with one more

**Figure 2.2:** Illustration of the two included bowls: a 2-liter glass bowl suitable for larger quantities like meat and vegetables, and a 1.8-liter stainless steel bowl ideal for smaller tasks such as chopping garlic or chili.


## Components:

- **Motor Unit:** Contains the 600W motor and speed control buttons.
- **2L Glass Bowl:** High-quality, food-safe glass bowl for larger processing tasks.
- **1.8L Stainless Steel Bowl:** Durable 304 food-grade stainless steel bowl for smaller tasks or alternative use.
- **Stainless Steel Blades:** Two sets of sharp, double stainless steel blades for efficient chopping.
- **Lid:** Transparent lid to cover the bowl during operation.

## 3. SETUP AND ASSEMBLY

Follow these steps to assemble your Bear Mini Food Chopper before use.

1. Place the chosen bowl (glass or stainless steel) on a stable, flat surface.
2. Carefully place the stainless steel blade assembly onto the central shaft inside the bowl. Ensure it sits securely.

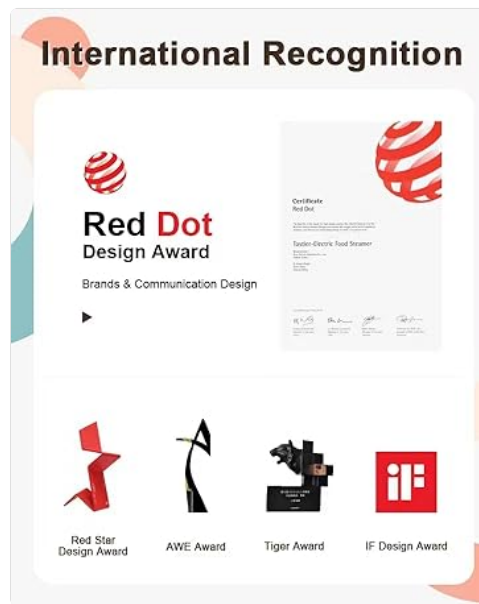

**Figure 3.1:** Correct placement of the blade assembly onto the central shaft within the bowl.

3. Add your ingredients into the bowl. Do not overfill the bowl beyond the maximum fill line.
4. Place the lid securely on top of the bowl. Ensure it is properly aligned and locked into place.
5. Position the motor unit on top of the lid, aligning the motor shaft with the blade assembly. The motor unit should fit snugly.
6. Plug the power cord into a suitable 220V electrical outlet.

## 4. OPERATING INSTRUCTIONS

---

The Bear Mini Food Chopper features two speed settings for optimal processing of various food types.



Figure 4.1: Visual guide for selecting the appropriate speed setting based on food consistency.

- **Speed I (Button with 'I'):** Ideal for soft foods and ingredients that require a finer chop or quick blending.
  - Examples: Vegetables (onions, peppers), fruits, garlic, chili peppers, cold soups.
  - Press and hold the 'I' button for continuous operation. Release to stop.
- **Speed II (Button with 'II'):** Suitable for harder foods and ingredients that require more power to process.
  - Examples: Meat, nuts, carrots, ham, cheese.
  - Press and hold the 'II' button for continuous operation. Release to stop.

**Important:** For best results and to prevent overheating, operate the chopper in short pulses rather than continuous running, especially for harder ingredients. Allow the motor to rest between pulses.

## 5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Bear Mini Food Chopper.



**Figure 5.1:** The glass bowl is shown being rinsed, emphasizing its food-grade safety, high temperature resistance, and ease of cleaning, including being dishwasher safe.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool down.
2. **Disassembly:** Carefully remove the motor unit, then the lid, and finally the blade assembly from the bowl. Handle blades with extreme caution.
3. **Cleaning Bowls and Blades:** The glass bowl, stainless steel bowl, and stainless steel blades are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.
4. **Cleaning Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Storage:** Store the assembled or disassembled chopper in a dry place, away from direct sunlight and out of reach of children.

## 6. TROUBLESHOOTING

If you encounter any issues with your Bear Mini Food Chopper, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly seated; lid not securely locked.	Ensure the power cord is securely plugged into a working outlet. Check if the motor unit is correctly placed on the lid and the lid is locked.
Motor runs but blades do not spin.	Blade assembly not properly installed on the shaft.	Unplug the appliance, remove the motor unit and lid, and re-install the blade assembly ensuring it is securely seated on the central shaft.
Food is not chopped evenly.	Too much food in the bowl; food pieces are too large; incorrect speed setting.	Process smaller batches. Cut large ingredients into smaller, uniform pieces before chopping. Use the appropriate speed setting (Speed II for harder foods).

Problem	Possible Cause	Solution
Appliance stops during operation.	Overheating due to continuous use or processing too hard ingredients.	Unplug the appliance and let it cool down for at least 15-20 minutes. Reduce batch size or cut ingredients into smaller pieces. Use pulse function instead of continuous running.
Unusual smell during operation.	New appliance smell (normal for first few uses); motor overheating.	A slight smell during initial uses is normal. If the smell persists or is strong, unplug immediately and let the unit cool. Ensure not to overload the motor. If the problem continues, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Bear
Model Number	QSJ-D03W5-DOUBLE
Power	600 Watts
Voltage	220 Volts
Capacity (Glass Bowl)	2 Liters
Capacity (Stainless Steel Bowl)	1.8 Liters
Material	Stainless Steel (blades, 1.8L bowl), Glass (2L bowl)
Number of Speeds	2
Dimensions (L x W x H)	21.9 x 17.5 x 24 cm
Weight	2.03 Kilograms
Care Instructions	Hand wash and Dishwasher safe (bowls and blades)

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Bear is committed to providing quality products and support. For further assistance, please visit the official Bear website or contact their customer service department.

