

ECONTROLLY IRV IRV6500BT EX6500DVD 292-101079

ECONTROLLY Universal Remote Control Instruction Manual

Compatible with IRV IRV6500BT, EX6500DVD, and 292-101079 Digital Stereo Receivers

1. INTRODUCTION


This manual provides instructions for the proper setup, operation, and maintenance of your ECONTROLLY Universal Remote Control. This remote is designed for compatibility with IRV IRV6500BT, EX6500DVD, and 292-101079 Digital Stereo Receivers.

2. SETUP

2.1 Battery Installation

The remote control requires batteries for operation. No programming is needed; simply install new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover in the direction indicated by the arrow or press the release tab.
3. Insert two CR2025 alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Close the battery compartment cover securely.

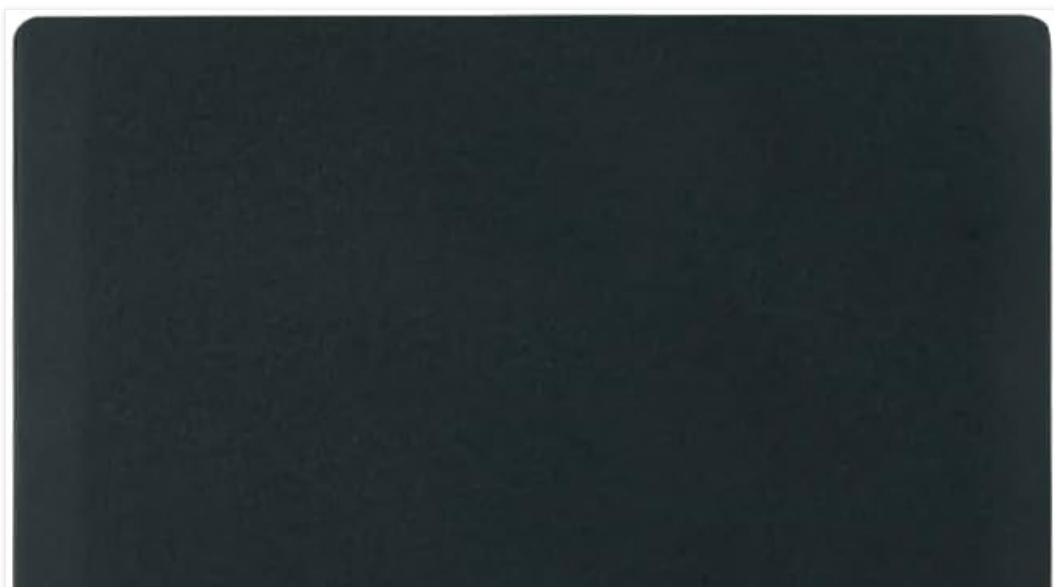

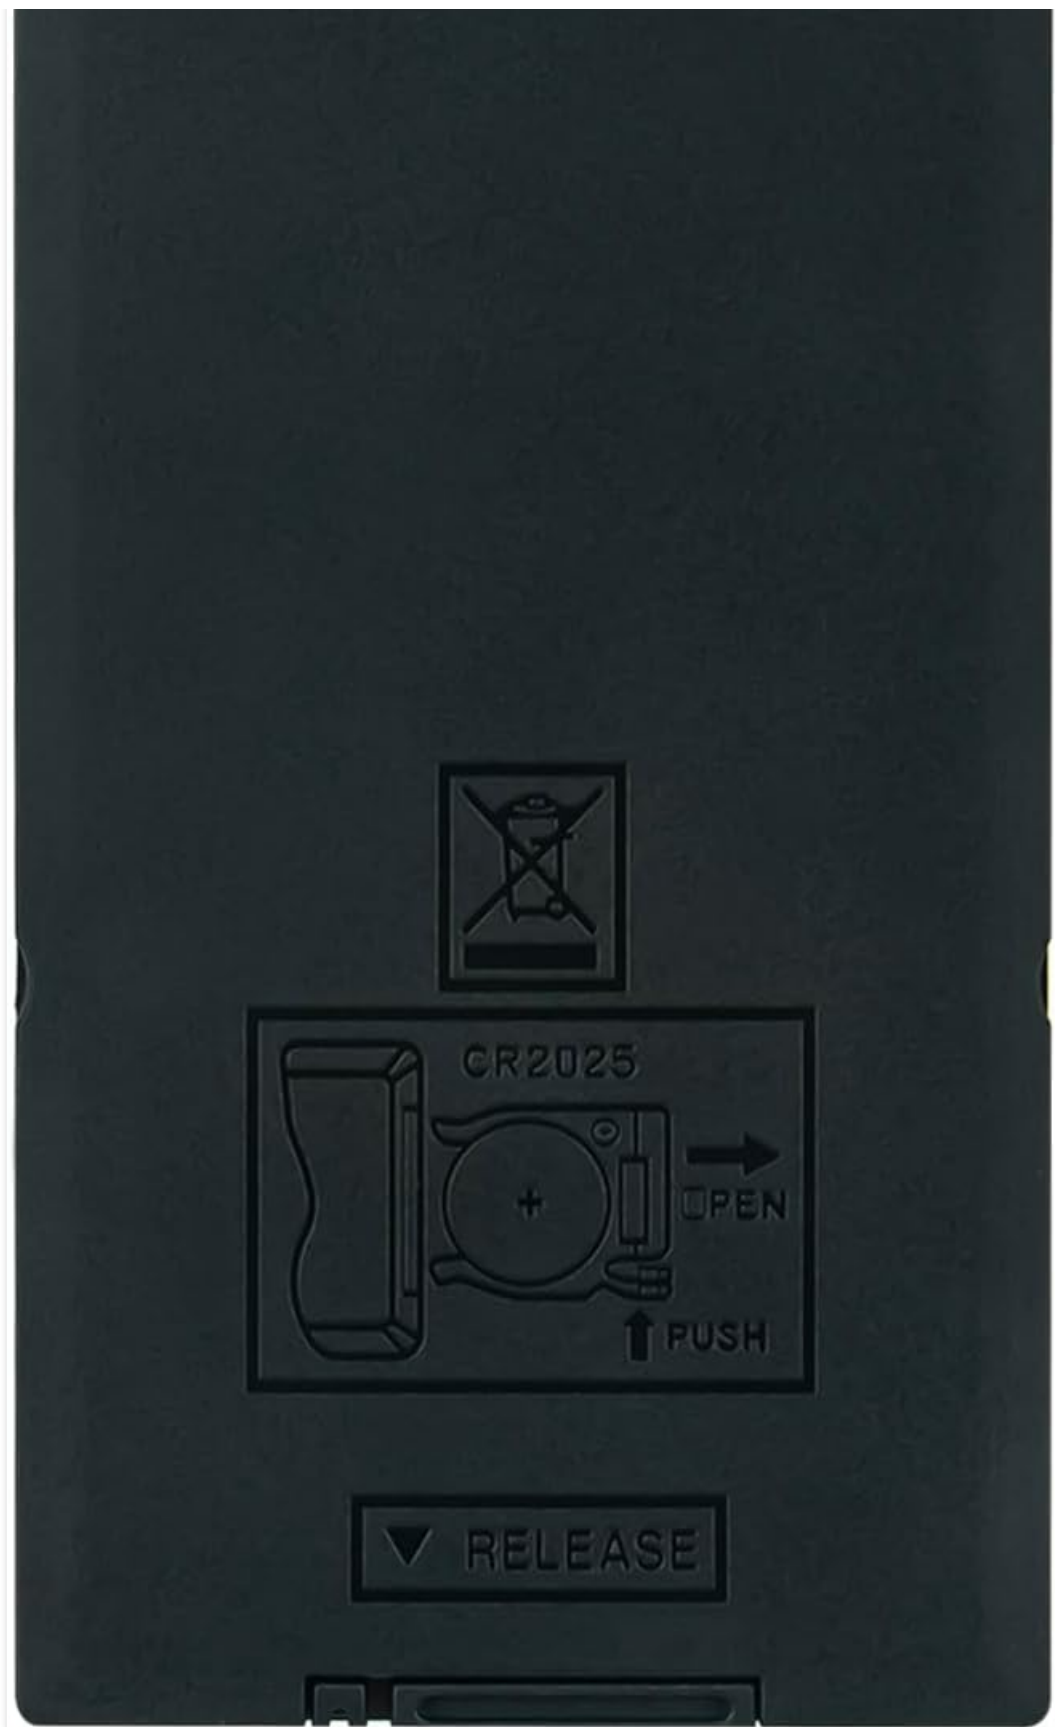


Figure 1: Rear view of the remote control, illustrating the battery compartment. The compartment indicates the use of CR2025 batteries and shows the correct orientation for insertion.

2.2 Initial Use

After battery installation, the remote control is ready for immediate use with compatible IRV Digital Stereo Receivers. Point the remote directly at the receiver's infrared sensor.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your ECONTROLLY Universal Remote Control.





Figure 2: Front view of the ECONTROLLY Universal Remote Control, displaying the layout of all control buttons.

- **POWER (Red Button):** Turns the receiver on or off.
- **MODE:** Cycles through different input modes (e.g., Radio, CD, USB).
- **PLAY/PAUSE (▶ ▶):** Plays or pauses media playback.
- **MUTE (Speaker with X):** Mutes or unmutes the audio output.
- **BND/C RDM:** Band selection for radio or random playback for media.
- **MENU:** Accesses the main menu of the receiver.
- **Sub-T:** Subtitle control (if applicable).
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms a selection in menus.
- **Setup:** Enters the system setup menu.
- **EJECT:** Ejects a disc (if applicable).
- **Angle:** Changes camera angle during DVD playback (if applicable).
- **INT:** Initiates intro scan.
- **P.SCN RPT/#:** Program scan or repeat function.
- **ST/MO PTY/*:** Stereo/Mono selection or Program Type.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **A-B ZOOM:** Sets A-B repeat points or controls zoom function.
- **LOUD TA:** Activates loudness feature or Traffic Announcement.
- **SEEK- / SEEK+:** Skips to the previous/next track or seeks radio stations.
- **SEL AF:** Selects audio function or Alternative Frequencies.
- **AUDIO GOTO:** Accesses audio settings or specific time points.
- **PBC:** Playback Control (for VCDs).
- **OSD:** On-Screen Display.
- **Number Buttons (0-9):** Direct input for channels, tracks, or menu selections.
- **OPEN TILT:** Opens/tilts the display panel (if applicable).
- **DUAL:** Activates dual-zone audio control (if applicable).

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries

simultaneously with new CR2025 alkaline batteries. Do not mix old and new batteries or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote and the receiver's infrared sensor.
 - Confirm the remote is pointed directly at the receiver.
- **Limited range:**
 - Ensure batteries are fresh.
 - Verify there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.
 - The effective transmitting distance is approximately 8-10 meters (26-33 feet). Operating beyond this range may result in inconsistent performance.

6. SPECIFICATIONS

Model Number	IRV IRV6500BT EX6500DVD 292-101079
Compatible Devices	IRV IRV6500BT, EX6500DVD, 292-101079 Digital Stereo Receivers
Power Source	2 x CR2025 Alkaline Batteries
Control Technology	Infrared (IR)
Operating Distance	Approximately 8-10 meters (26-33 feet)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Material	ABS Environmental Protection Material

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question