

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SINCHER](#) /

› [SINCHER H150R Cordless Vacuum Cleaner User Manual](#)

SINCHER H150R

SINCHER H150R Cordless Vacuum Cleaner User Manual

Model: H150R

1. INTRODUCTION

Thank you for choosing the SINCHER H150R Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The SINCHER H150R is a versatile 4-in-1 lightweight stick vacuum cleaner designed for efficient cleaning of various surfaces, including hard floors, carpets, and upholstery. Its cordless design and powerful motor offer convenience and effective dirt removal.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).

- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your SINCHER H150R vacuum cleaner:



Image Description: An exploded diagram showing the main components of the SINCHER H150R Cordless Vacuum Cleaner. Numbered

parts include: 1. Host Header (main unit with motor and dust cup), 2. Telescopic Aluminum Alloy Tube (extension wand), 3. LED Turbo Electric Floor Brush (main floor head), 4. Slot Nozzle (crevice tool), 5. Slot Nozzle (another crevice tool or brush, possibly a typo in original image), 6. Wall-Mounted (wall mount bracket), 7. 2200mAh Battery, 8. Wall-Mounted (wall mount screws/anchors), 9. Telescopic Aluminum Alloy Tube (power adapter), 10. (Unlabeled, likely a small brush tool).

- **Main Unit:** Contains the motor, dust cup, and filtration system.
- **Telescopic Extension Wand:** Connects the main unit to the floor brush, allowing for extended reach.
- **LED Turbo Electric Floor Brush:** Motorized brush head with LED lights for illuminating dust on floors.
- **Crevice Tool:** For narrow spaces and corners.
- **2-in-1 Brush Tool:** Combines a brush and a wide nozzle for upholstery and delicate surfaces.
- **Detachable Battery:** 2200mAh lithium-ion battery.
- **Wall Mount Bracket:** For convenient storage and charging.
- **Power Adapter:** For charging the battery.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Battery:** Slide the detachable battery into the main unit until it clicks securely into place.
2. **Assemble the Main Vacuum:**
 - Connect the telescopic extension wand to the main unit. Ensure it clicks firmly.
 - Attach the LED Turbo Electric Floor Brush to the other end of the extension wand.
3. **Install Wall Mount (Optional):**
 - Choose a suitable location near a power outlet.
 - Mark the drilling points for the wall mount bracket.
 - Drill holes and insert wall anchors if necessary.
 - Secure the wall mount bracket to the wall using the provided screws.



Image Description: The image shows the SINCHER H150R Cordless Vacuum mounted on a wall bracket, connected to its charger. Separately, the battery is shown charging on a small table, indicating flexible charging options. The wall mount bracket and screws are also depicted.

5. CHARGING THE BATTERY

The SINCHER H150R features a detachable battery for convenient charging.

1. **Initial Charge:** Before first use, fully charge the battery for approximately 4.5 hours.
2. **Charging Options:**
 - **Directly on Vacuum:** Plug the power adapter into the charging port on the main unit while the battery is attached.
 - **Detached Battery:** Remove the battery from the main unit and plug the power adapter directly into the battery's charging port.
3. **Charging Indicator:** Refer to the battery indicator lights on the main unit or battery pack to monitor charging status.

A full charge is indicated when all lights are solid.

2200mAh High-Quality Lithium Battery



Charge for 4.5 hours
Work for 30 mins

Image Description: A close-up view of the SINCHER H150R's 2200mAh high-quality lithium battery pack, showing its internal cell structure. Text on the image indicates a charge time of 4.5 hours for 30 minutes of operation.

6. OPERATING INSTRUCTIONS

Your SINCHER H150R vacuum cleaner offers versatile cleaning modes and attachments.

6.1 Power On/Off and Suction Modes

1. Press the power button on the handle to turn the vacuum on.
2. Press the mode button (often indicated by '+' and '-' symbols) to switch between the two available suction modes: standard (10kPa) and super (14kPa).
3. Press the power button again to turn the vacuum off.



Image Description: A close-up of the handle of the SINCHER H150R vacuum, highlighting the red power button and the mode adjustment button, which allows switching between suction levels.

6.2 Using Attachments

The 4-in-1 design allows for various cleaning configurations:

- **Stick Vacuum Mode:** Use with the extension wand and electric floor brush for general floor cleaning (hard floors, carpets). The LED lights on the brush head illuminate dust.
- **Handheld Vacuum Mode:** Detach the extension wand and floor brush. Attach the crevice tool or 2-in-1 brush directly to the main unit for cleaning furniture, car interiors, keyboards, or tight spaces.
- **Specialized Cleaning:**
 - Use the **crevice tool** for narrow gaps, corners, and edges.
 - Use the **2-in-1 brush tool** for upholstery, curtains, and pet hair on fabric surfaces.
 - The **motorized floor brush** is effective on both hard floors and carpets, with its integrated roller designed to pick up various debris, including pet hair.

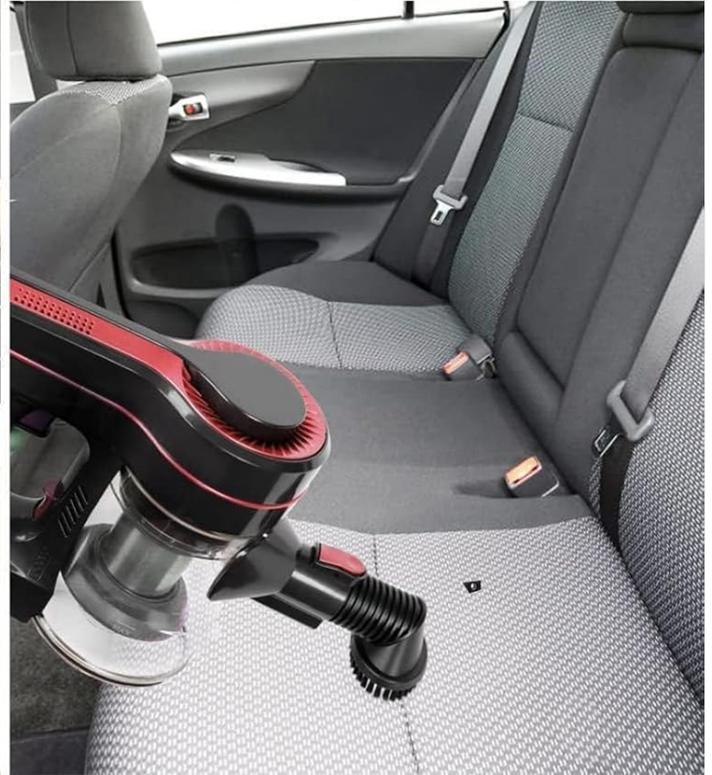


Image Description: A collage demonstrating the versatility of the SINCHER H150R. It shows the vacuum cleaning under furniture with its low-profile head, being used as a handheld vacuum for a car interior, and cleaning a keyboard with an attachment.



Letting dust
under your control
is what we are doing!



Image Description: This image illustrates the SINCER H150R in action across different cleaning tasks. It shows the vacuum cleaning a floor, being used as a handheld unit for quick clean-ups, and reaching high areas like curtains with the extension wand.



Image Description: A visual representation of the flexible maneuverability of the SINCER H150R's floor brush, demonstrating its ability to rotate 180 degrees horizontally and 90 degrees vertically for easy cleaning around obstacles and under furniture.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

Empty the dust cup after each use or when the MAX fill line is reached.

1. Ensure the vacuum is turned off.
2. Press the dust cup release button to detach it from the main unit.
3. Hold the dust cup over a trash bin and press the bottom release button to open the flap and empty the contents.
4. Close the flap and reattach the dust cup to the main unit until it clicks.



Image Description: A three-part image showing the process of maintaining the dust cup. The top left shows the dust cup filled with debris, the top right shows it being emptied by pressing a release button, and the bottom image shows the dust cup and filter being washed under running water.

7.2 Cleaning the Filters

The SINCHER H150R features a 4-stage filtration system, including a HEPA filter and a unique high-density sponge filter. These are washable.

1. Ensure the vacuum is turned off and the dust cup is empty.
2. Remove the filters from the dust cup.
3. Rinse the HEPA filter and sponge filter under cold running water until the water runs clear.
4. Allow all filter parts to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
5. Reassemble the dry filters into the dust cup and reattach the dust cup to the main unit.



Image Description: An exploded diagram illustrating the multi-stage filtration system of the SINCHER H150R. It highlights the Sponge Filter, Cone Metal Sedimentation Filtration, Vortex Cyclone Filtration, and Precise Filter Fresh Exhaust, showing the path of air and dust separation.

7.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Ensure the vacuum is turned off and disconnected from any power source.
2. Locate the brush roll access cover on the bottom of the electric floor brush.
3. Use a coin or screwdriver to unlock the cover and remove the brush roll.
4. Carefully cut away any tangled hair or fibers using scissors.
5. Clean any debris from the brush roll housing.
6. Reinsert the brush roll and secure the cover.

Electric Turbine Brush

Equipped with LED dust searchlights



Image Description: A close-up, cutaway view of the Electric Turbine Brush of the SINCHER H150R, showing its internal roller brush mechanism and the integrated LED dust searchlights. The text highlights its function for deep cleaning.

8. TROUBLESHOOTING

If you encounter issues with your SINCHER H150R, refer to the following table:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Low suction power	Dust cup is full. Filters are clogged. Brush roll is obstructed.	Empty dust cup. Clean or wash filters. Remove obstructions from brush roll.

Problem	Possible Cause	Solution
Brush roll not spinning	Obstruction in brush roll. Floor brush not properly connected.	Clear any debris from brush roll. Ensure floor brush is securely attached.
Battery runtime is short	Battery not fully charged. Using high suction mode continuously. Battery life degradation.	Ensure full charge. Use standard mode for longer runtime. Consider purchasing a replacement battery if significantly degraded.
Charging indicator not working	Power adapter not connected properly. Faulty power outlet.	Check power adapter connection. Try a different power outlet.

9. SPECIFICATIONS

Feature	Specification
Model Number	H150R
Brand	SINCHER
Motor Power	150W
Suction Power	Up to 14kPa (Super Mode)
Battery Type	2200mAh 6-Cell Lithium-ion
Voltage	3.7 Volts (per cell, total voltage not explicitly stated but implied by 6-cell 2200mAh)
Runtime	Up to 30 minutes (Standard Mode)
Charging Time	Approximately 4.5 hours
Dust Cup Capacity	1.2 Liters
Filtration System	4-stage, including HEPA and high-density sponge filters
Item Weight	3.23 Kilograms
Special Features	Cordless, 4-in-1 design, Motorized Head with LED lights, Detachable Battery, Wall Mount

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact SINCHER customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.



