

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PHILIPS](#) /

› [Philips Series 5000 Blender/Mixer HR2764/00 User Manual](#)

PHILIPS HR2764/00

Philips Series 5000 Blender/Mixer HR2764/00 Instruction Manual

Model: HR2764/00 | Brand: PHILIPS

1. INTRODUCTION

The Philips Series 5000 Blender (Model HR2764/00) is designed for efficient blending with its powerful 800W motor. It processes various ingredients, from soft fruits to solid vegetables, using six sharp blades and ProBlend Plus technology for smooth results. The blender features a simple press-and-twist operation. Its large container is suitable for daily smoothies, and the leak-proof lid allows for portability or refrigeration. All detachable parts are easy to rinse and dishwasher-safe for convenient cleaning. The blender's compact, stainless steel design ensures easy storage and complements kitchen aesthetics.

2. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the appliance and save them for future reference. Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the appliance corresponds to the local mains voltage before connecting.
- Do not immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a damp cloth to clean the motor unit.
- Always unplug the appliance before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the container while blending to prevent injury.
- Never blend hot liquids to avoid scalding and pressure buildup.
- Do not operate the blender if the blades are damaged or if the container is cracked.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT COMPONENTS

The Philips Series 5000 Blender HR2764/00 includes the following main components:

- **Motor Unit:** The base containing the 800W motor.
- **Blade Unit:** Detachable unit with six sharp blades.
- **700ml Tritan Tumbler:** The blending container.
- **Leak-proof Lid:** For portability and storage of the tumbler.



Figure 3.1: Overview of the Philips Series 5000 Blender HR2764/00 and its typical use with fresh ingredients and prepared smoothies.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Philips Series 5000 Blender before first use:

1. Place the motor unit on a stable, flat surface.
2. Add your desired ingredients into the 700ml Tritan tumbler. Do not exceed the maximum fill line.
3. Attach the blade unit to the open end of the tumbler by twisting it securely until it clicks into place. Ensure it is tightly sealed to prevent leaks.
4. Invert the assembled tumbler with the blade unit and place it onto the motor unit. Twist the tumbler clockwise until it locks into position.

5. Ensure the appliance is properly assembled before plugging it into a power outlet.



Processus de mélange facile en un seul mouvement

Mélangez vos jus et mixez vos aliments sans difficulté

Figure 4.1: Assembling the tumbler with ingredients onto the motor unit.

5. OPERATING INSTRUCTIONS

The Philips Series 5000 Blender is designed for simple, one-touch operation:

1. After assembling the blender as described in Section 4, plug the power cord into a suitable electrical outlet.
2. To start blending, press down on the tumbler and twist it clockwise. The motor will activate, and blending will begin.
3. Blend until your desired consistency is achieved. The ProBlend Plus technology ensures smooth results even with tough ingredients.
4. To stop blending, release the pressure and twist the tumbler counter-clockwise to unlock it from the motor unit.
5. Unplug the appliance from the power outlet after use.
6. Carefully remove the blade unit from the tumbler and attach the leak-proof lid if you plan to take your drink on the go or store it.

Note: Do not operate the blender continuously for more than 60 seconds. Allow the motor to cool down for a few minutes before resuming operation if blending for extended periods.



Technologie ProBlend Plus

Obtenez des résultats lisses même avec les ingrédients les plus durs

Figure 5.1: The ProBlend Plus technology ensures efficient blending and ice crushing.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your Philips Series 5000 Blender. All detachable parts are dishwasher-safe for convenience.

1. **Before Cleaning:** Always unplug the appliance from the power outlet.
2. **Disassembly:** Detach the tumbler from the motor unit, then carefully remove the blade unit from the tumbler.
3. **Cleaning Detachable Parts:**
 - Rinse the tumbler, blade unit, and lid under running water immediately after use to prevent food residue from drying.
 - These parts can be washed in the dishwasher (top rack recommended) or by hand using warm, soapy water and a non-abrasive sponge.
 - Exercise caution when handling the blade unit due to sharp blades.
4. **Cleaning Motor Unit:**

- Wipe the motor unit with a damp cloth. Do not immerse it in water or rinse it under the tap.
- Ensure the motor unit is completely dry before storing or next use.

5. **Storage:** Store the cleaned and dried blender in a cool, dry place.



Facile à nettoyer

Pièces détachées faciles à nettoyer

Figure 6.1: Detachable parts of the blender are dishwasher-safe for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Philips Series 5000 Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; tumbler not correctly assembled/locked.	Ensure power cord is securely plugged in. Twist tumbler clockwise until it locks into the motor unit.
Ingredients are not blending smoothly.	Too many ingredients; not enough liquid; ingredients are too large/hard.	Reduce ingredient quantity. Add more liquid. Cut hard ingredients into smaller pieces.

Problem	Possible Cause	Solution
Blender leaks during operation.	Blade unit not securely attached to tumbler; tumbler not properly sealed to motor unit.	Ensure blade unit is twisted tightly onto the tumbler. Verify tumbler is locked onto the motor unit. Check the sealing ring for damage.
Burning smell from motor.	Overloading the motor; continuous operation for too long.	Unplug immediately. Reduce ingredients. Allow motor to cool down. Do not operate continuously for more than 60 seconds.

If the problem persists after trying these solutions, please contact Philips customer support.

8. SPECIFICATIONS

Key technical specifications for the Philips Series 5000 Blender HR2764/00:

Feature	Detail
Brand	PHILIPS
Model Number	HR2764/00
Power	800 Watts
Capacity	700 Milliliters
Voltage	220V
Material	Stainless Steel
Product Dimensions (L x W x H)	14.4 x 14 x 38.3 cm
Item Weight	2.23 Kilograms
Special Features	ProBlend Plus Blade, ProBlend Plus Motor, ProBlend Plus Technology
Included Components	Blender, 700ml Tritan Tumbler
Recommended Uses	Blending, crushing, emulsifying, mixing, pureeing
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Philips website. Philips offers customer support for product inquiries, technical assistance, and service requests. Regarding spare parts availability, the provided information indicates: *"Information unavailable on spare parts"*. Please contact Philips customer service directly for any spare part inquiries. You can typically find support contact details on the Philips official website or within the product packaging.

