

## Tefal HB95LD38

# Tefal InfinyForce Pro 5-in-1 Hand Blender HB95LD38 User Manual

Model: HB95LD38 | Brand: Tefal

## 1. INTRODUCTION

Thank you for choosing the Tefal InfinyForce Pro 5-in-1 Hand Blender HB95LD38. This versatile kitchen appliance is designed to simplify your food preparation with its powerful 1200W motor and advanced Powelix Life blade technology. Please read this manual carefully before first use to ensure safe and optimal operation of your appliance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Blades are very sharp. Handle with extreme care when assembling, disassembling, and cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

### 3. PACKAGE CONTENTS

---

Your Tefal InfinyForce Pro 5-in-1 Hand Blender package includes the following components:

- Hand Blender Motor Unit
- Blender Foot with Powelix Life Blades
- Food Processor Attachment (with 5 functions)
- 500 ml Chopper Attachment
- 800 ml Measuring Beaker
- Whisk Attachment
- Puree Accessory



Image 1: All components included with the Tefal InfinyForce Pro 5-in-1 Hand Blender.

### 4. PRODUCT FEATURES

---

- **Powerful 1200W Motor:** Ensures efficient and quick blending for various ingredients.
- **Powelix Life Blade Technology:** Extreme precision blades offering up to 30% faster results and up to 2 times more resistance compared to standard blades.
- **Variable Speed Control:** Ergonomic button for precise speed adjustment across 10 settings.
- **Anti-Splash Guard:** Designed to prevent splashes and keep your kitchen countertop clean during use.
- **Dishwasher-Safe Components:** Removable parts are compatible with dishwashers for easy cleaning.



Image 2: The main hand blender unit (left) and a close-up of the Powelix Life blades (right).

## 5. SETUP AND ASSEMBLY

---

### 5.1 Attaching the Blender Foot

1. Align the blender foot with the motor unit.
2. Twist the blender foot clockwise until it clicks securely into place.
3. To detach, twist counter-clockwise and pull apart.

### 5.2 Attaching Other Accessories (Chopper, Whisk, Puree Accessory)

Each accessory has a specific coupling mechanism. Ensure the accessory is correctly aligned with the motor unit and twist or push until it locks into position. Refer to the individual accessory instructions for detailed assembly.

## 6. OPERATING INSTRUCTIONS

---

Always ensure the appliance is correctly assembled and plugged into a suitable power outlet before operation.

### 6.1 Using the Hand Blender

1. Attach the blender foot to the motor unit.
2. Immerse the blender foot into the ingredients in a suitable container (e.g., the 800 ml beaker).
3. Press and hold the power button. Adjust the speed using the variable speed dial on the top of the motor unit (10 speeds available).
4. Move the blender up and down gently to ensure even blending.
5. Release the power button to stop.

*Tip: For best results and to prevent splashing, start blending at a lower speed and gradually increase as needed. Do not operate continuously for more than 60 seconds.*

## 6.2 Using the Chopper Attachment

1. Place the chopping blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl. Do not overfill.
3. Place the chopper lid onto the bowl, ensuring it is securely locked.
4. Attach the motor unit to the chopper lid.
5. Press and hold the power button to operate. Use short pulses for coarse chopping, or hold longer for finer results.

## 6.3 Using the Whisk Attachment

1. Attach the whisk to the whisk adapter, then attach the adapter to the motor unit.
2. Immerse the whisk into the ingredients (e.g., egg whites, cream).
3. Press and hold the power button. Use appropriate speed for whisking.

## 6.4 Using the Puree Accessory

1. Attach the puree accessory to the motor unit.
2. Place the accessory into cooked, soft ingredients (e.g., potatoes, cooked vegetables).
3. Press and hold the power button, moving the accessory gently to achieve a smooth puree.

# 7. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your appliance.

## 7.1 Cleaning the Motor Unit

- Always unplug the motor unit before cleaning.
- Wipe the motor unit with a damp cloth. Do not immerse it in water or rinse under running water.

## 7.2 Cleaning Attachments

- Detach all accessories from the motor unit.
- The blender foot, chopper bowl, chopper blade, whisk, and puree accessory are dishwasher-safe. Alternatively, they can be washed by hand in warm, soapy water.
- Exercise extreme caution when handling the blades of the blender foot and chopper.
- Rinse thoroughly and dry immediately after washing.

## 7.3 Storage

Store the appliance and its accessories in a dry, safe place, out of reach of children.

# 8. TROUBLESHOOTING

---

If you encounter any issues with your Tefal InfinyForce Pro Hand Blender, please refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Ensure the appliance is properly plugged into a working power outlet.
  - Check if the attachment is correctly assembled and locked onto the motor unit.

- **Poor blending/chopping results:**

- Ensure ingredients are cut into appropriate sizes before processing.
- Do not overfill the chopper bowl or blending beaker.
- Increase the speed setting.
- Check if blades are clean and free from obstructions.

- **Appliance stops during operation:**

- The appliance may have overheated. Unplug it and let it cool down for at least 30 minutes before resuming use.
- Ensure the motor unit is not overloaded with too dense ingredients.

## 9. SPECIFICATIONS

---

|                         |   |
|-------------------------|---|
| <b>Brand</b>            | Tefal   |
| <b>Model Number</b>     | HB95LD38  |
| <b>Power</b>            | 1200 Watts  |
| <b>Voltage</b>          | 230 Volts   |
| <b>Material</b>         | Metal   |
| <b>Number of Speeds</b> | 10  |
| <b>Special Features</b> | Exclusive Powelix Life Technology, Variable Speed |
| <b>Recommended Uses</b> | Blending, Chopping, Mashing, Mixing, Pureeing     |

## 10. WARRANTY AND SUPPORT

---

Information regarding specific warranty details for this product is not available in the provided data. For warranty claims, spare parts, or further support, please contact Tefal customer service directly or refer to the warranty card included with your purchase.

You can often find support information on the official [Tefal brand store](#) or their official website.