

M10

Andtron M10 Wireless Earbuds User Manual

Model: M10

INTRODUCTION

This user manual provides detailed instructions for the operation, maintenance, and troubleshooting of your Andtron M10 Wireless Earbuds. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your listening experience.

WHAT'S IN THE BOX

- Andtron M10 Wireless Earbuds
- Wireless Charging Case
- USB Cable
- Battery Pack (integrated)

PRODUCT OVERVIEW



The Andron M10 Wireless Earbuds are shown inside their open charging case. The case features a smart LED display indicating battery levels for both the case and individual earbuds, providing clear visual feedback on power status.

HD LED display

No need to guess the amount of electricity
LED digital power display, the remaining power of the charging cabin is clear at a glance, to avoid the embarrassment of suddenly running out of electricity




A detailed view of the M10 charging case's HD LED display. This display accurately shows the remaining power of the charging compartment and the individual battery capacity of the left and right earbuds, eliminating guesswork.

I can charge my phone

Portable mobile power supply

Not only can you charge the headset

You can also charge your phone

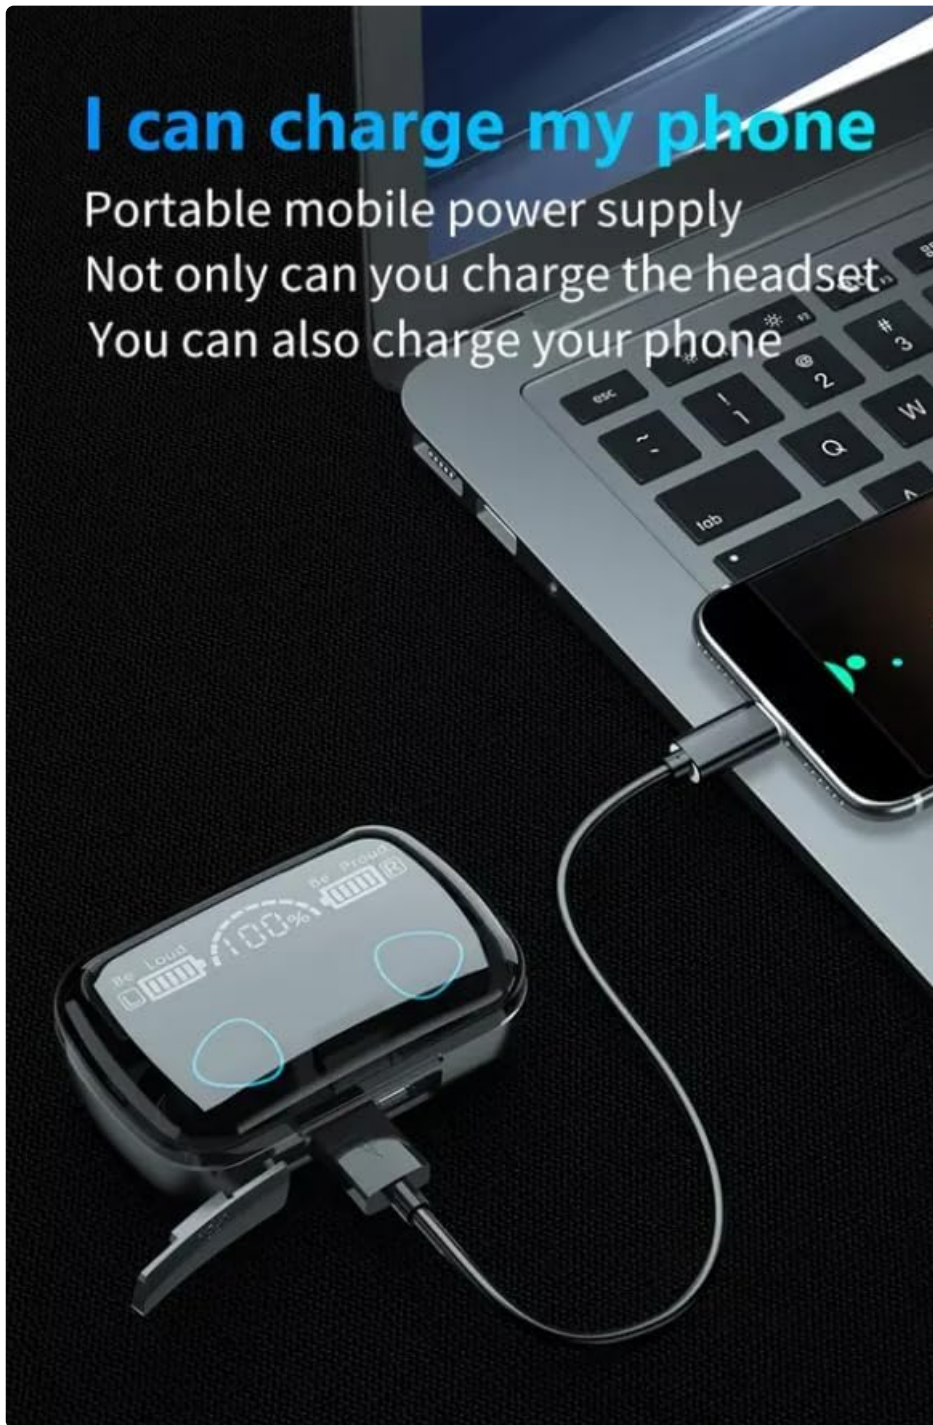

The M10 charging case can function as a portable power supply. It is depicted connected via a USB-C cable to a smartphone, demonstrating its capability to charge other devices in addition to the earbuds.



Very strong bass

HiFi high fidelity sound quality

Dynamic unit design, good audio analysis, undistorted details, excellent listening experience



An exploded view diagram highlighting the dynamic unit design of the M10 earbuds. This illustration emphasizes the components responsible for delivering HiFi high-fidelity sound quality, including strong bass and clear audio details.

Quick connect Automatic power on pairing

Take the headset out of the charging compartment
Auto start and auto match, auto connect back to
mobile phone



The M10 earbuds feature quick connect and automatic pairing. Simply take the earbuds out of the charging case, and they will automatically power on, start pairing, and connect back to your mobile phone.



The retail packaging for the M10 TWS Bluetooth Headset, indicating "NEWEST Digital indicator True Wireless Headset V5.3 BT Wireless" on the box.

SPECIFICATIONS

Feature	Detail
Model Name	M10 TWS v5.3
Connectivity Technology	Wireless, Bluetooth
Wireless Communication Technology	Bluetooth, True Wireless
Bluetooth Version	5.1 (Note: Product title mentions v5.3, specifications list 5.1. Refer to product packaging for definitive version.)
Charging Time	1.5 Hours
Control Type	Voice Control, Touch, Button
Water Resistance Level	Water Resistant (IP7 mentioned in title, implies high resistance)
Noise Control	Hybrid Noise Cancellation
Ear Placement	In Ear
Form Factor	In Ear
Compatible Devices	iPhone, Cellphones, Windows, Android
Manufacturer	Generic
Color	Black

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the M10 earbuds and their charging case. The case has a 3500mAh capacity and can also serve as a portable power bank for other devices.

1. Connect the provided USB cable to the USB-C port on the charging case.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The LED display on the charging case will show the charging status and battery percentage.
4. A full charge typically takes approximately 1.5 hours.
5. Place the earbuds into the charging slots inside the case to charge them. The LED display will indicate their charging status.

2. Pairing with Your Device

The M10 earbuds feature automatic pairing for a seamless connection experience.

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select "M10" (or similar name) from the list.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when taken out of the case.

OPERATING INSTRUCTIONS

Touch Controls

The M10 earbuds are equipped with intuitive touch-sensitive controls. Specific functions may vary slightly, but common controls include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (e.g., Siri, Google Assistant).
- **Volume Control:** (If supported) Long press on right earbud for volume up, long press on left earbud for volume down. Refer to specific product documentation if available.

Wearing the Earbuds

Insert the earbuds gently into your ears and rotate them slightly to find a comfortable and secure fit. A proper fit ensures optimal sound quality and noise cancellation.

Power On/Off

- **Power On:** Earbuds automatically power on when removed from the charging case.
- **Power Off:** Place earbuds back into the charging case. They will automatically disconnect and power off.

MAINTENANCE

To ensure the longevity and optimal performance of your M10 Wireless Earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips:** If removable, clean the ear tips with a damp cloth and mild soap, then dry thoroughly before reattaching.
- **Charging Contacts:** Ensure the charging contacts on both the earbuds and the case are clean and free of debris to maintain proper charging.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Water Resistance:** While the earbuds are IP7 waterproof (as per title), avoid prolonged submersion in water and do not expose them to saltwater or other corrosive liquids. Dry them thoroughly if they get wet.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or high humidity.

TROUBLESHOOTING

If you encounter issues with your M10 Wireless Earbuds, refer to the following common solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Earbuds not pairing with device	<p>Ensure earbuds are fully charged.</p> <p>Make sure Bluetooth is enabled on your device.</p> <p>Place earbuds back in the case, close it, then open and remove them again to re-enter pairing mode.</p> <p>Forget "M10" from your device's Bluetooth list and try pairing again.</p> <p>Try pairing with another device to rule out device-specific issues.</p>
No sound from one or both earbuds	<p>Check the volume level on your device and the earbuds.</p> <p>Ensure earbuds are properly connected to your device.</p> <p>Re-pair the earbuds.</p> <p>Clean any debris from the earbud speaker mesh.</p>
Charging case not charging	<p>Verify the USB cable is securely connected to both the case and the power source.</p> <p>Try a different USB cable or power adapter.</p> <p>Ensure the charging port on the case is clean and free of debris.</p>
Earbuds not charging in case	<p>Ensure the charging case itself has sufficient battery.</p> <p>Make sure the earbuds are correctly seated in their charging slots.</p> <p>Clean the charging contacts on both the earbuds and inside the case.</p>

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the manufacturer's official website or contact their customer service department.