

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Devoko](#) /
- > [Devoko 0428-1822 Height Adjustable Electric Standing Desk User Manual](#)

Devoko 0428-1822

Devoko 0428-1822 Height Adjustable Electric Standing Desk User Manual

Model: 0428-1822 | Brand: Devoko

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Devoko 0428-1822 Height Adjustable Electric Standing Desk. This desk is designed to promote healthy working habits by allowing seamless transitions between sitting and standing positions. It features a spacious 180 x 80 cm desktop, integrated USB A charging ports, and a cable management system for an organized workspace. Please read this manual thoroughly before assembly and use, and retain it for future reference.



Image 1.1: The Devoko Electric Standing Desk in a typical office setup, showcasing its large surface area and integrated features.

2. SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation to prevent injury.
- Do not overload the desk. Refer to the specifications for weight limits.
- Avoid placing liquids directly on the control panel or near electrical components.
- Disconnect power before cleaning or performing any maintenance.
- Do not attempt to modify the desk's electrical or mechanical components. Contact support for assistance.
- The desk is equipped with an anti-collision system. Ensure the area around the desk is clear during height adjustments to prevent damage or injury.

3. PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Desktop sections (typically 3 pieces for this model)
- Desk frame (legs, crossbar)
- Electric motor and control box
- Control panel with USB A charging ports
- Cable management tray
- 360° Swivel Wheels (pre-installed or to be attached)
- Headphone hook
- Assembly hardware (screws, bolts, Allen wrenches)
- Power adapter and cable
- User Manual

4. SETUP AND ASSEMBLY

Assembly typically takes approximately 30 minutes. Tools required for assembly are included. An electric screwdriver may expedite the process for attaching the desktop sections.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Desk Frame:** Follow the included assembly diagram to connect the desk legs to the crossbar and motor assembly. Ensure all bolts are tightened securely.
3. **Attach Desktop:** Place the desktop sections onto the assembled frame. Align the pre-drilled holes and secure the desktop to the frame using the provided screws.
4. **Install Control Panel:** Mount the control panel to the underside of the desktop in a convenient location. Connect the control panel cable to the motor control box.
5. **Install Cable Management Tray:** Attach the cable management tray to the underside of the desk to organize power strips and cables.

6. **Attach Headphone Hook:** Secure the headphone hook to the desired location on the desk frame.
7. **Connect Power:** Plug the power adapter into the control box and then into a wall outlet.

Montaggio Semplicissimo



Video per l' Installazione



Montato in 30 Minuti



Attrezzi per il Montaggio Inclusi



Image 4.1: An illustration of the desk frame assembly, highlighting the ease of installation with included tools.

Più Spazio di Archiviazione

1 Vano Porta Cavi per Set



Acciaio Spesso
e di Qualità



Montaggio
Rapido

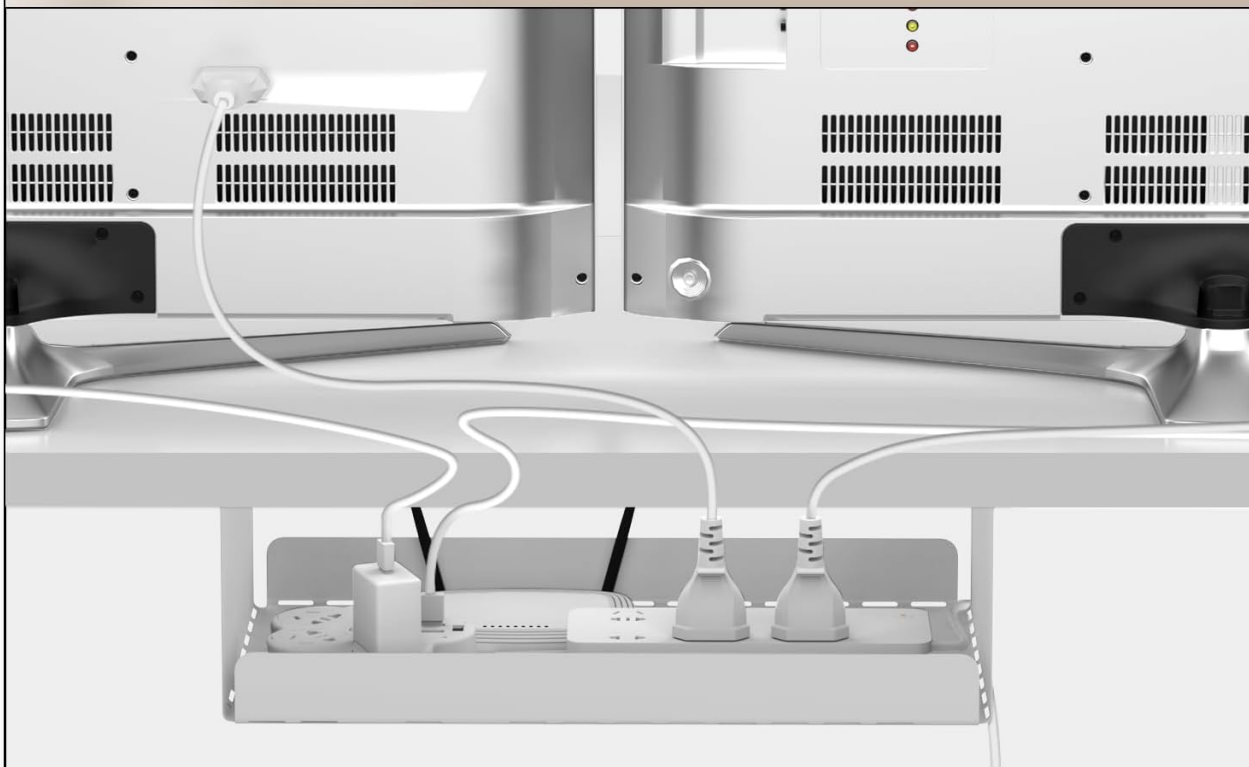


Image 4.2: The integrated cable management tray, designed to keep power cords and adapters neatly organized beneath the desktop.

5. OPERATING INSTRUCTIONS

5.1. Height Adjustment

Use the **Up** (▲) and **Down** (▼) buttons on the control panel to adjust the desk height. The desk can be adjusted smoothly and quietly within a range of 72 cm to 118 cm.



Image 5.1: The desk illustrating its adjustable height range, suitable for both sitting (72 cm) and standing (118 cm) positions.

5.2. Memory Presets

The control panel features three memory keys (1, 2, 3) to save your preferred sitting and standing heights.

- **To Save a Height:** Adjust the desk to your desired height. Press the **"S"** button, then press one of the number buttons (1, 2, or 3) within 3 seconds. The display will confirm the setting.
- **To Use a Saved Height:** Press the corresponding number button (1, 2, or 3). The desk will automatically move to the saved height.

5.3. USB A Charging Ports

The control panel includes integrated USB A charging ports for convenient charging of mobile devices. Simply connect your device's USB cable to the port. *Note: While the product description specifies USB A, some visual representations of the control panel may show a USB-C port. Please refer to your specific product's control panel.*

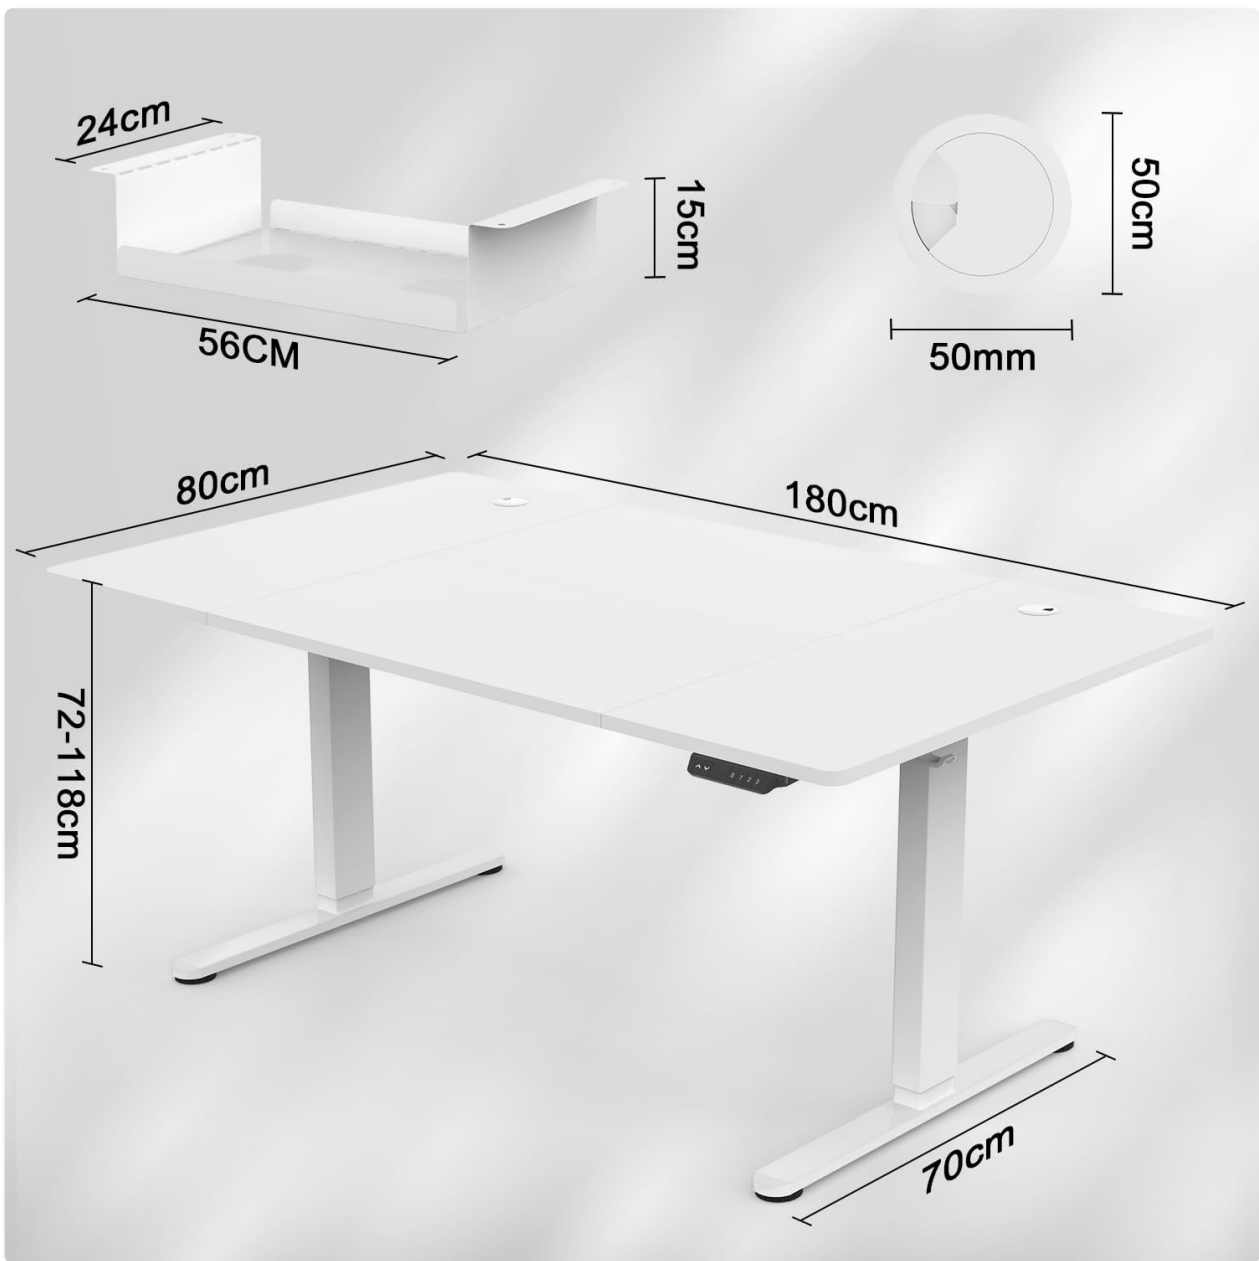


Image 5.2: The intelligent multifunction control panel, featuring memory presets, up/down controls, and a charging port (shown here as USB-C, but product features USB-A).

5.4. Anti-Collision System

The desk is equipped with a sensitive anti-collision system that detects reaction forces. If the desk encounters an obstruction during height adjustment, it will automatically stop and reverse slightly to prevent damage or injury. Ensure the area around the desk is clear during operation for optimal safety.

5.5. 360° Wheels

The desk is fitted with 360° swivel wheels, allowing for easy mobility and repositioning within your workspace. Lock the wheels when the desk is in its desired position to ensure stability.

6. MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Regularly inspect cables for wear or damage. Ensure cables are neatly organized

within the cable management tray to prevent snagging.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; control panel cable loose; motor error.	Check power connections. Ensure control panel cable is securely plugged in. Unplug the desk for 10 seconds and plug it back in to reset.
Desk moves unevenly or makes unusual noise.	Uneven load; loose connections; obstruction.	Ensure weight is evenly distributed. Check all assembly screws. Clear any obstructions.
Anti-collision system frequently activates.	Obstruction in the path of movement.	Ensure the area around the desk is clear of objects during height adjustment.
USB charging port not working.	Device not compatible; cable issue; power issue.	Try a different device or cable. Ensure the desk is powered on.


If you encounter issues not listed here or require further assistance, please contact Devoko customer support.

8. SPECIFICATIONS

Tastiera Multifunzione Intelligente (Tipo C)



Adatto per Caricare
Cellulari con Connessioni di Tipo C.

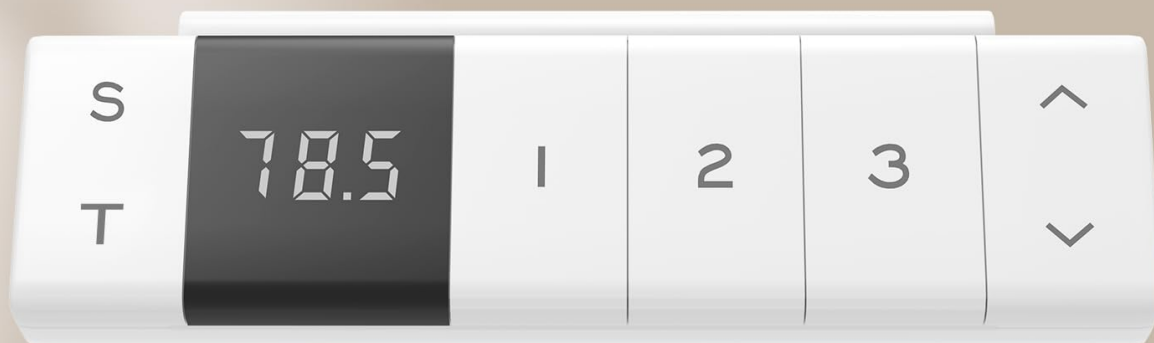

3 Pulsanti di
Alta Memoria



Tasto
Su/Giù



Blocco
Bambini



Funzione
Anti-Collisione



Image 8.1: Detailed dimensions of the desk, including desktop size (180x80 cm) and height range (72-118 cm).

GRÖÖE DER SPLEIÖPLATTE



Image 8.2: An overhead view confirming the 180 cm by 80 cm desktop dimensions.

- **Model:** 0428-1822
- **Brand:** Devoko
- **Desktop Dimensions:** 180 cm (Length) x 80 cm (Width)
- **Desktop Thickness:** 15 mm
- **Height Range:** 72 cm to 118 cm
- **Lifting Mechanism:** Electric
- **Lifting Speed:** 20 mm/s
- **Noise Level:** Less than 45 dB
- **Certifications:** TÜV, CE
- **Included Features:** USB A Charging Ports, Cable Management Tray, 360° Wheels, Headphone Hook, Anti-Collision System, 3 Height Memory Keys
- **Frame Material:** Metal
- **Item Weight:** 35 Kilograms
- **Assembly Required:** Yes

9. WARRANTY AND SUPPORT

Warranty: The Devoko 0428-1822 Electric Standing Desk comes with a 5-year warranty on the motor and table frame, ensuring long-term reliability and performance.

Returns: A 30-day unconditional return policy is provided.

Customer Support: For any installation issues, operational questions, or warranty claims, please contact Devoko customer support through the Amazon platform. Our team is committed to responding within 24 hours to assist you.