

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PRORETAILER](#) /
- › [PRORETAILER Fixing Kit for Bosch/Thermador Range/Stove/Oven \(Part 00619016\) Instruction Manual](#)

## PRORETAILER 00619016

# PRORETAILER Fixing Kit for Bosch/Thermador Range/Stove/Oven (Part 00619016) Instruction Manual

Model: 00619016

## 1. PRODUCT OVERVIEW

This instruction manual provides essential information for the safe and correct installation of the PRORETAILER Fixing Kit, compatible with Bosch and Thermador range/stove/oven models requiring part number 00619016. This kit is designed to replace the original fixing component, ensuring proper function and stability of your appliance.

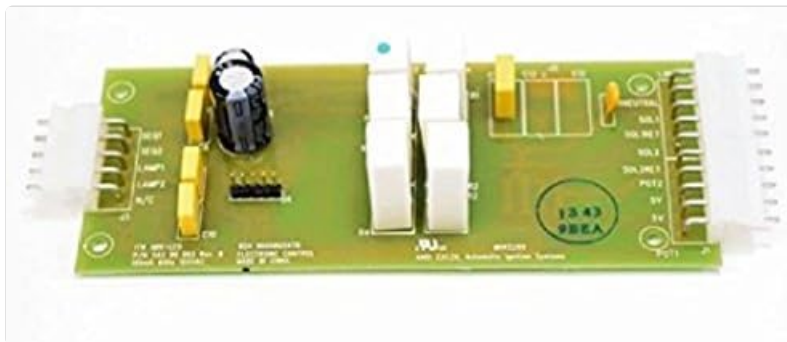


Figure 1: PRORETAILER Fixing Kit (Part 00619016)

This image displays the electronic circuit board that constitutes the fixing kit. It features a green PCB with white and yellow components, including capacitors and connectors, indicating its role in the appliance's electronic system.

## 2. SAFETY INFORMATION

**WARNING: Before attempting any installation or repair, ensure the appliance is completely disconnected from the power supply. Failure to do so may result in electric shock, injury, or death.**

- Always wear appropriate personal protective equipment (PPE), such as gloves and safety glasses.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep children and pets away from the work area.

- Handle electronic components with care to avoid damage from static electricity.

## 3. INSTALLATION INSTRUCTIONS

### 3.1. Preparation

1. **Disconnect Power:** Locate the circuit breaker for your range/stove/oven and turn it off. Verify that the power is off by attempting to turn on the appliance.
2. **Access Panel Removal:** Depending on your specific appliance model, you may need to remove a rear, bottom, or control panel to access the faulty component. Refer to your appliance's original service manual for precise instructions on panel removal.
3. **Identify Component:** Locate the existing fixing kit or electronic control board that needs replacement. It will typically resemble the component shown in Figure 1.

### 3.2. Replacement Procedure

1. **Document Connections:** Before disconnecting any wires, take clear photos or make a diagram of all wire connections to the existing component. This will aid in correct reassembly.
2. **Disconnect Wires:** Carefully disconnect all wires and connectors from the old component. Note that some connectors may have locking tabs that need to be pressed or squeezed.
3. **Remove Old Component:** Unscrew or unclip the old fixing kit from its mounting location.
4. **Install New Component:** Position the new PRORETAILER Fixing Kit (00619016) in the same location as the old one. Secure it using the original screws or clips.
5. **Reconnect Wires:** Refer to your photos or diagram and carefully reconnect all wires and connectors to the new component. Ensure all connections are secure and properly seated.

### 3.3. Post-Installation

1. **Replace Panels:** Reattach any panels or covers that were removed during the installation process.
2. **Restore Power:** Return to your circuit breaker and turn the power back on to the appliance.
3. **Test Functionality:** Test the range/stove/oven to ensure it is functioning correctly. Check all relevant features that the fixing kit influences.

## 4. MAINTENANCE

This fixing kit is a sealed electronic component and requires no routine maintenance. If the component becomes dirty during other appliance maintenance, gently wipe it with a dry, lint-free cloth. Do not use liquid cleaners or solvents directly on the circuit board.

## 5. TROUBLESHOOTING

If the appliance does not function correctly after installing the new fixing kit, consider the following:

- **No Power:** Ensure the circuit breaker is on and the appliance is properly plugged in (if applicable).
- **Incorrect Connections:** Double-check all wire connections against your photos or diagram. Ensure they are secure and connected to the correct terminals.
- **Damaged Component:** Inspect the new fixing kit for any visible damage that may have occurred during shipping or installation.
- **Appliance Specific Issues:** Consult your appliance's original user manual or service guide for troubleshooting steps related to the specific symptoms you are experiencing.

If issues persist, it is recommended to contact a qualified appliance repair technician.

## 6. SPECIFICATIONS

Attribute	Value
Part Number Compatibility	00619016
Brand Compatibility	BOSCH, THERMADOR
Appliance Type	Range/Stove/Oven
ASIN	B0CPBGCZ65
Date First Available	December 2, 2023

## 7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your PRORETAILER Fixing Kit, please contact the seller directly through the platform where the purchase was made. Keep your proof of purchase for any warranty claims.

For appliance-specific issues not related to the part itself, please refer to your appliance manufacturer's support resources.