

[Manuals.plus](#) /

› [Costzon](#) /

› Costzon Corner Kids Kitchen Playset Instruction Manual (Model TM10079)

Costzon TM10079

Costzon Corner Kids Kitchen Playset Instruction Manual

Model: TM10079

1. INTRODUCTION

Thank you for choosing the Costzon Corner Kids Kitchen Playset. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Please read it thoroughly before assembly and retain it for future reference.

This playset is designed to provide an immersive and educational play experience for children aged 3 to 8 years, encouraging creativity and the development of practical skills.

Corner Kids Kitchen Playset for Fun

Provide Spacious Space to be an Extra Cabinet for Storage



Image: Overview of the Costzon Corner Kids Kitchen Playset with key features labeled.

2. SAFETY INFORMATION

Your child's safety is our top priority. Please observe the following safety guidelines:

- **Recommended Age:** This playset is suitable for children aged 3 to 8 years.
- **Adult Supervision:** Always supervise children during play to prevent accidents.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before allowing children to play.
- **Stability:** The playset is made of durable wooden material and designed for stability. Ensure it is placed on a flat, stable surface.
- **Rounded Edges:** Edges and corners are smoothly rounded to minimize the risk of injury.
- **Certifications:** This product is certified by ASTM and CPSIA for reliable use and safety standards.
- **Small Parts:** Some accessories may be small. Keep them away from very young children to avoid choking.

hazards.

3. WHAT'S IN THE BOX

Please check the contents of the package against the list below. If any items are missing or damaged, please contact customer support.

- 1 x Corner Kids Kitchen Playset (main unit)
- 1 x Instruction Manual (this document)
- 11 x Accessories, including:
 - 3 x Utensils
 - 1 x Pot with Lid
 - 2 x Plates
 - 2 x Spice Bottles
 - 1 x Skillet
 - 1 x Chef Suit Set (apron and hat)
 - 1 x Cup with wooden Ice Cubes



Fun Accessories

Cook up a Feast with the Included Accessories



3 × Utensils



Cup with
wooden Ice Cubes



1 × Pot with Lid



2 x Plates



2 x Spice Bottles



1 × Skillet



1 x Chef Suit Set

Image: Included accessories for the playset.

4. SETUP AND ASSEMBLY

Assembly of the Costzon Corner Kids Kitchen Playset requires adult supervision and tools (not included). Please follow the step-by-step instructions provided in the assembly video below for a smooth setup process.

Your browser does not support the video tag.

Video: Detailed assembly instructions for the Costzon Kids Kitchen Playset.

Ensure all screws and fasteners are tightened appropriately. Do not overtighten. Once assembled, verify the playset is stable and all components are securely attached.



Image: Example of an assembly step, joining wooden panels.



Image: Example of an assembly step, securing components with a drill.

5. OPERATING INSTRUCTIONS

The Costzon Corner Kids Kitchen Playset offers various interactive features for realistic play:

- **Range Hood:** Features lights and authentic whirring sounds. Activate by pressing the designated button.
- **Stovetops:** Equipped with glowing "flame" lights and vivid cooking sounds. Turn the knobs to activate.
- **Oven & Microwave:** Open the doors to place play food inside. Knobs on the oven provide clicking sounds for interactive play.
- **Sink & Faucet:** The faucet can be rotated 180 degrees and features an on/off function for pretend washing.
- **Ice Maker:** Press the button on the ice maker to dispense wooden ice cubes into the cup.
- **Washing Machine:** Open the door and place play clothes inside for pretend laundry.
- **Storage:** Utilize the shelves, door cabinets, and tower rack for organizing play food and accessories.

Your browser does not support the video tag.

Video: Demonstration of the interactive features of the Costzon Kids Corner Kitchen Playset.



Image: Stovetop and range hood with interactive lights and sounds.

Realistic Cooking Role-play Game

Wash in the Sink



Cut on the Countertop



Cook on the Stove



Baking in the Oven



Image: Examples of realistic cooking role-play activities with the playset.

True-To-Life for Hours of Fun



Image: Children engaging with various features of the playset, including the washing machine and ice dispenser.

6. MAINTENANCE

To ensure the longevity and cleanliness of your Costzon Corner Kids Kitchen Playset, follow these maintenance tips:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Dusting:** Regularly dust the playset to prevent accumulation.
- **Moisture:** Keep the playset away from excessive moisture or direct sunlight to prevent warping or fading of the wood.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Battery Replacement:** For electronic components (range hood, stovetops), replace batteries as needed.

Refer to the battery compartment for correct battery type and installation.

7. TROUBLESHOOTING

If you encounter any issues with your playset, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lights/Sounds not working	Dead batteries or incorrect battery installation.	Check battery compartment for proper installation. Replace batteries with new ones if necessary.
Loose parts after assembly	Screws not fully tightened during assembly.	Carefully re-tighten all screws and fasteners. Do not overtighten.
Ice dispenser not working	No wooden ice cubes loaded or mechanism jammed.	Ensure wooden ice cubes are properly loaded. Check for any obstructions in the dispenser mechanism.

If the problem persists after attempting these solutions, please contact Costzon customer support for further assistance.

8. SPECIFICATIONS

- **Brand:** Costzon
- **Model Number:** TM10079
- **Material:** Wood
- **Color:** White
- **Recommended Age:** 3 - 8 years
- **Overall Dimensions (D x W x H):** 31" x 12.5" x 32" (78.7 cm x 31.7 cm x 81.3 cm)
- **Certifications:** ASTM, CPSIA
- **Features:** Range hood with lights & sounds, stovetops with lights & sounds, oven, microwave, sink with faucet, washing machine, ice maker.

Product Size



For 3-10 Years Old



ASTM Certification



CPSIA Certification



Image: Product dimensions and certifications.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Costzon website. Please have your model number (TM10079) and purchase date ready when contacting support.

© 2023 Costzon. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question