

[Manuals.plus](#) /

› [HP](#) /

› HP KM150 Wired Keyboard and Mouse Combo User Manual

HP KM150

HP KM150 Wired Keyboard and Mouse Combo User Manual

Model: KM150

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your HP KM150 Wired Keyboard and Mouse Combo. Please read these instructions carefully to ensure proper use and longevity of your product.

WHAT'S IN THE BOX

Upon unpacking your HP KM150 combo, verify that all components are present:

- HP KM150 Wired Keyboard
- HP KM150 Wired Mouse
- Warranty Card
- Setup Guide (this document)

Keyboard Mouse Combo KM150

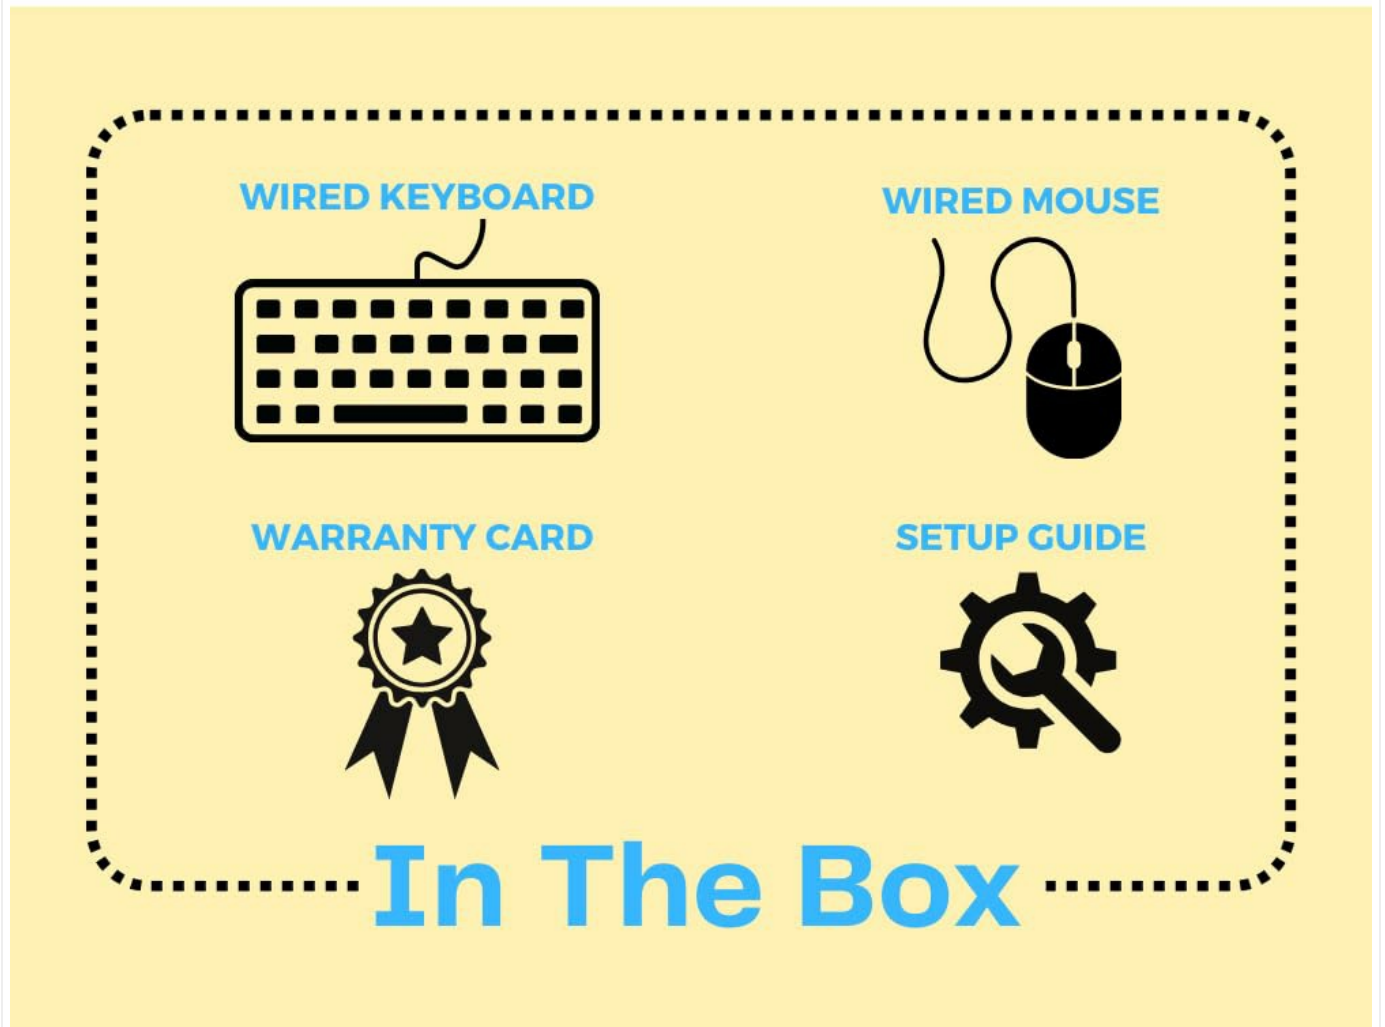


Image: Contents of the HP KM150 Combo Box.

SETUP INSTRUCTIONS

The HP KM150 Keyboard and Mouse Combo features instant USB plug-and-play functionality, requiring no additional software installation.

1. **Connect the Keyboard:** Locate an available USB-A port on your computer. Insert the USB connector of the HP KM150 keyboard into the USB port.
2. **Connect the Mouse:** Locate another available USB-A port on your computer. Insert the USB connector of the HP KM150 mouse into the USB port.
3. **System Recognition:** Your operating system (Windows 10 or Windows 11) will automatically detect and install the necessary drivers. This process typically takes a few seconds.
4. **Ready for Use:** Once the drivers are installed, your keyboard and mouse are ready for immediate use.



Image: USB Plug-and-Play Connectors.

OPERATING INSTRUCTIONS

Keyboard Operation

The HP KM150 keyboard is a full-size QWERTY layout keyboard designed for comfortable typing. It features 105 keys, including a numeric keypad and function keys.

- **Adjustable Slope:** The keyboard includes adjustable feet on the underside. Flip these feet out to change the typing angle for improved ergonomics.
- **Shortcut Keys:** Utilize the 12 integrated shortcut keys for quick access to common functions such as media control, volume adjustment, and application shortcuts. Refer to the key legends for specific functions.



Image: HP KM150 Wired Keyboard.

Mouse Operation

The HP KM150 mouse is an ergonomic optical sensor mouse designed for precise tracking and comfortable use, suitable for right-hand orientation.

- **Optical Sensor:** The mouse uses an optical sensor for accurate tracking on various surfaces.
- **DPI Settings:** Adjust the mouse sensitivity (DPI) by pressing the dedicated DPI button located behind the scroll wheel. Cycle through 800, 1200, and 1600 DPI settings to match your preference.

KM150

Keyboard
Mouse
Combo



**High Precision
Wired Mouse**
(works with any surface type)

Image: HP KM150 Wired Mouse.

Keyboard Mouse Combo KM150



Image: Mouse DPI Settings (800/1200/1600).

MAINTENANCE

To ensure optimal performance and extend the lifespan of your HP KM150 combo, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the surfaces of the keyboard and mouse. Avoid harsh chemicals or abrasive materials.
- **Dust Removal:** For the keyboard, use compressed air to remove dust and debris from between the keys. For the mouse, ensure the optical sensor area on the underside remains clean and unobstructed.
- **Storage:** When not in use for extended periods, store the combo in a clean, dry environment away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your HP KM150 combo, try the following troubleshooting steps:

- **Device Not Recognized:**
 - Ensure the USB connectors are fully inserted into the computer's USB ports.
 - Try connecting the keyboard and mouse to different USB ports on your computer.
 - Restart your computer.
- **Keyboard Not Typing / Mouse Not Moving:**
 - Verify the USB connections as described above.
 - Check if the Num Lock or Caps Lock indicator lights on the keyboard respond when pressed.
 - For the mouse, ensure the optical sensor on the bottom is not obstructed and is clean.
 - Test the devices on another computer if possible to rule out a computer-specific issue.
- **Mouse Cursor Jumps or is Erratic:**
 - Clean the optical sensor on the underside of the mouse.
 - Use the mouse on a clean, uniform surface or a mouse pad.
 - Adjust the DPI setting using the DPI button on the mouse.

If problems persist after attempting these steps, please refer to the Warranty and Support section.

SPECIFICATIONS

Brand	HP
Model Number	KM150 (7J4G2AA)
Colour	Black
Connectivity Technology	Wired (USB-A)
Keyboard Layout	QWERTY, Full-Size (105 Keys)
Keyboard Features	12 Shortcut Keys, Adjustable Slope
Mouse Movement Detection	Optical
Mouse DPI Settings	800 / 1200 / 1600 DPI
Mouse Hand Orientation	Right
Compatible Devices	Personal Computer
Compatible Operating Systems	Windows 10, Windows 11
Batteries Required	No (Wired)
Item Weight	680 Grams
UPC / GTIN	197497760217

WARRANTY AND SUPPORT

Your HP KM150 Wired Keyboard and Mouse Combo is covered by a **3-Year Limited Brand Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or further assistance, please contact HP customer service through their official website or the contact information provided with your purchase documentation. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question