

**Generic 100012589, 100012590, 100018971**

## Instruction Manual

### OEM PART- REMOTE CONTROL FOR ONN Roku LED SMART TV

Compatible Models: 100012589, 100012590, 100018971

## Introduction

---

This manual provides essential information for the proper use and maintenance of your new OEM replacement remote control. This remote is designed for direct compatibility with specific ONN Roku LED Smart TV models, offering a seamless and straightforward user experience without the need for complex setup or programming.

## Product Overview

---

Familiarize yourself with the remote control's design and key features.



**Figure 1:** Front view of the remote control, showing the power button, navigation pad, playback controls, and dedicated app buttons for Netflix, Disney+, Apple TV+, and HBO Max.



**Figure 2:** Back view of the remote control with the battery compartment cover removed, revealing the slots for two AAA batteries.



**Figure 3:** Side profile of the remote control, highlighting its ergonomic design and the placement of side-mounted volume and mute buttons.



**Figure 4:** Detailed view of the remote control, showing close-ups of the volume controls on the side and the dedicated streaming service buttons at the bottom.

## Setup

This remote control requires no programming or pairing. Simply install the batteries, and it will be ready for use with compatible ONN Roku LED Smart TV models.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new 1.5V AAA (LR3) batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. *(Batteries are not included)*
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.
5. The remote is now ready to operate your compatible ONN Roku LED Smart TV.

## Operating Instructions

This remote functions identically to your original ONN Roku TV remote. Point the remote directly at your television and press the desired buttons.

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Arrow Buttons & OK):** Use the arrow buttons to navigate menus and select items. Press **OK** to confirm a selection.
- **Home Button:** Returns to the Roku Home screen.
- **Back Button:** Returns to the previous screen or menu.

- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback.
- **Dedicated App Buttons:** Provides quick access to popular streaming services such as Netflix, Disney+, Apple TV+, and HBO Max.

## Maintenance

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## Troubleshooting

If you encounter issues with your remote control, try the following solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"><li>• Ensure batteries are inserted correctly with correct polarity.</li><li>• Replace old batteries with new AAA batteries.</li><li>• Check for any obstructions between the remote and the TV's infrared receiver.</li><li>• Ensure you are within the effective range of the TV's IR receiver.</li></ul>
Some buttons are not working.	<ul style="list-style-type: none"><li>• Check if the remote is pointed directly at the TV.</li><li>• Replace batteries, as low power can affect button responsiveness.</li><li>• Ensure the TV model is one of the compatible models (100012589, 100012590, 100018971).</li></ul>

## Specifications

- **Product Dimensions:** 5.51 x 1.65 x 0.81 inches
- **Battery Type:** 2 x AAA (LR3) batteries (not included)
- **Compatible Devices:** ONN Roku LED Smart Televisions
- **Compatible Models:** 100012589, 100012590, 100018971
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Television)

## Support

If you have any questions, require further assistance, or if your TV model is not listed among the compatible models, please do not hesitate to contact us. We are committed to helping you find the correct remote for your television and resolve any issues you may encounter.

*Contact information is typically provided by your retailer or the product packaging.*

© 2024 Generic. All rights reserved.