

Legami SPS0001

Legami The Sound of Cuteness Panda Wireless Speaker with Phone Stand User Manual

Model: SPS0001

1. INTRODUCTION

Welcome to your new Legami The Sound of Cuteness Panda Wireless Speaker. This device combines a portable wireless speaker with a convenient phone stand, designed for ease of use and portability. Enjoy your favorite music and media with this charming and functional accessory.

2. SAFETY INFORMATION

Please read all safety instructions before using this product to ensure proper operation and to prevent damage.

- Do not expose the device to extreme temperatures, direct sunlight, or open flames.
- Keep the speaker away from water and high humidity to prevent electrical hazards.
- Do not attempt to disassemble, modify, or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the provided USB cable for charging. Using incompatible chargers may damage the device.
- Dispose of batteries and electronic components responsibly, following local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Legami The Sound of Cuteness Panda Wireless Speaker
- USB Charging Cable



Image 3.1: Product packaging for the Legami Panda Wireless Speaker.

4. PRODUCT OVERVIEW

The Legami Panda Wireless Speaker features a compact design with integrated phone stand functionality. Familiarize

yourself with the device's components:



Image 4.1: Front view of the Legami Panda Wireless Speaker with its USB charging cable.

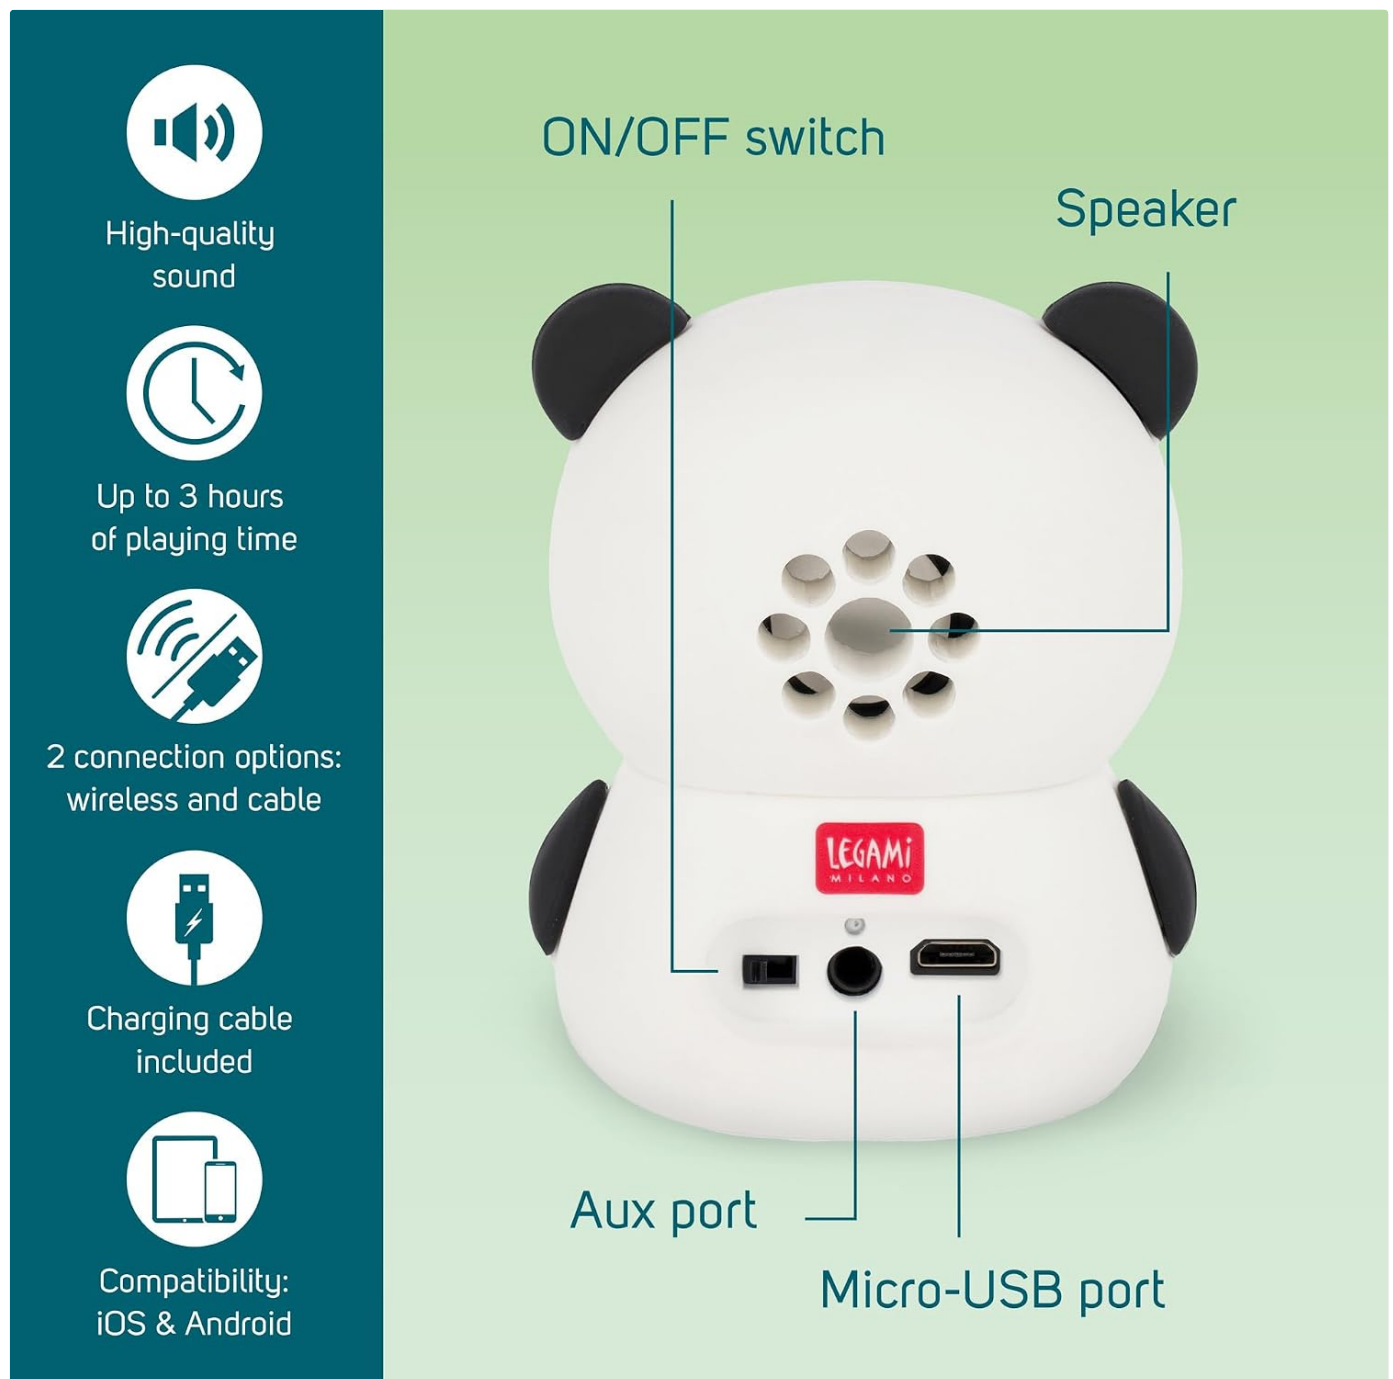


Image 4.2: Back view of the speaker showing the ON/OFF switch, speaker grille, Aux port, and Micro-USB port.

Components:

- **ON/OFF Switch:** Located at the back, used to power the speaker on or off.
- **Speaker:** Audio output grille.
- **Aux Port:** Labeled for wired audio connection. *Note: Some users have reported this port may function as an LED indicator rather than an audio input. Please verify functionality with your specific unit.*
- **Micro-USB Port:** For charging the device using the supplied USB cable.
- **Phone Stand:** Integrated into the panda's paws, designed to securely hold a smartphone or tablet.

5. SETUP

5.1. Charging the Speaker

1. Connect the supplied USB charging cable to the Micro-USB port on the back of the speaker.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall

adapter).

3. The speaker will indicate its charging status, typically via an LED light.
4. A full charge provides up to 3 hours of playing time.

5.2. Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Turn on the speaker using the ON/OFF switch located on the back.
3. The speaker will enter Bluetooth pairing mode, usually indicated by a flashing LED light.
4. On your smartphone or tablet, navigate to the Bluetooth settings.
5. Search for available devices and select "Legami Panda Speaker" (or a similar name) from the list.
6. Once successfully paired, the LED indicator will typically stop flashing and remain solid.

6. OPERATING INSTRUCTIONS

6.1. Playing Music via Bluetooth

1. Ensure the speaker is paired with your device as described in Section 5.2.
2. Open your preferred music or media application on your smartphone or tablet.
3. Start playing your desired audio. The sound will be routed through the Legami Panda Speaker.

6.2. Using the Phone Stand

The panda's paws are designed to securely hold your smartphone or tablet, allowing for hands-free viewing while listening to music or watching videos.

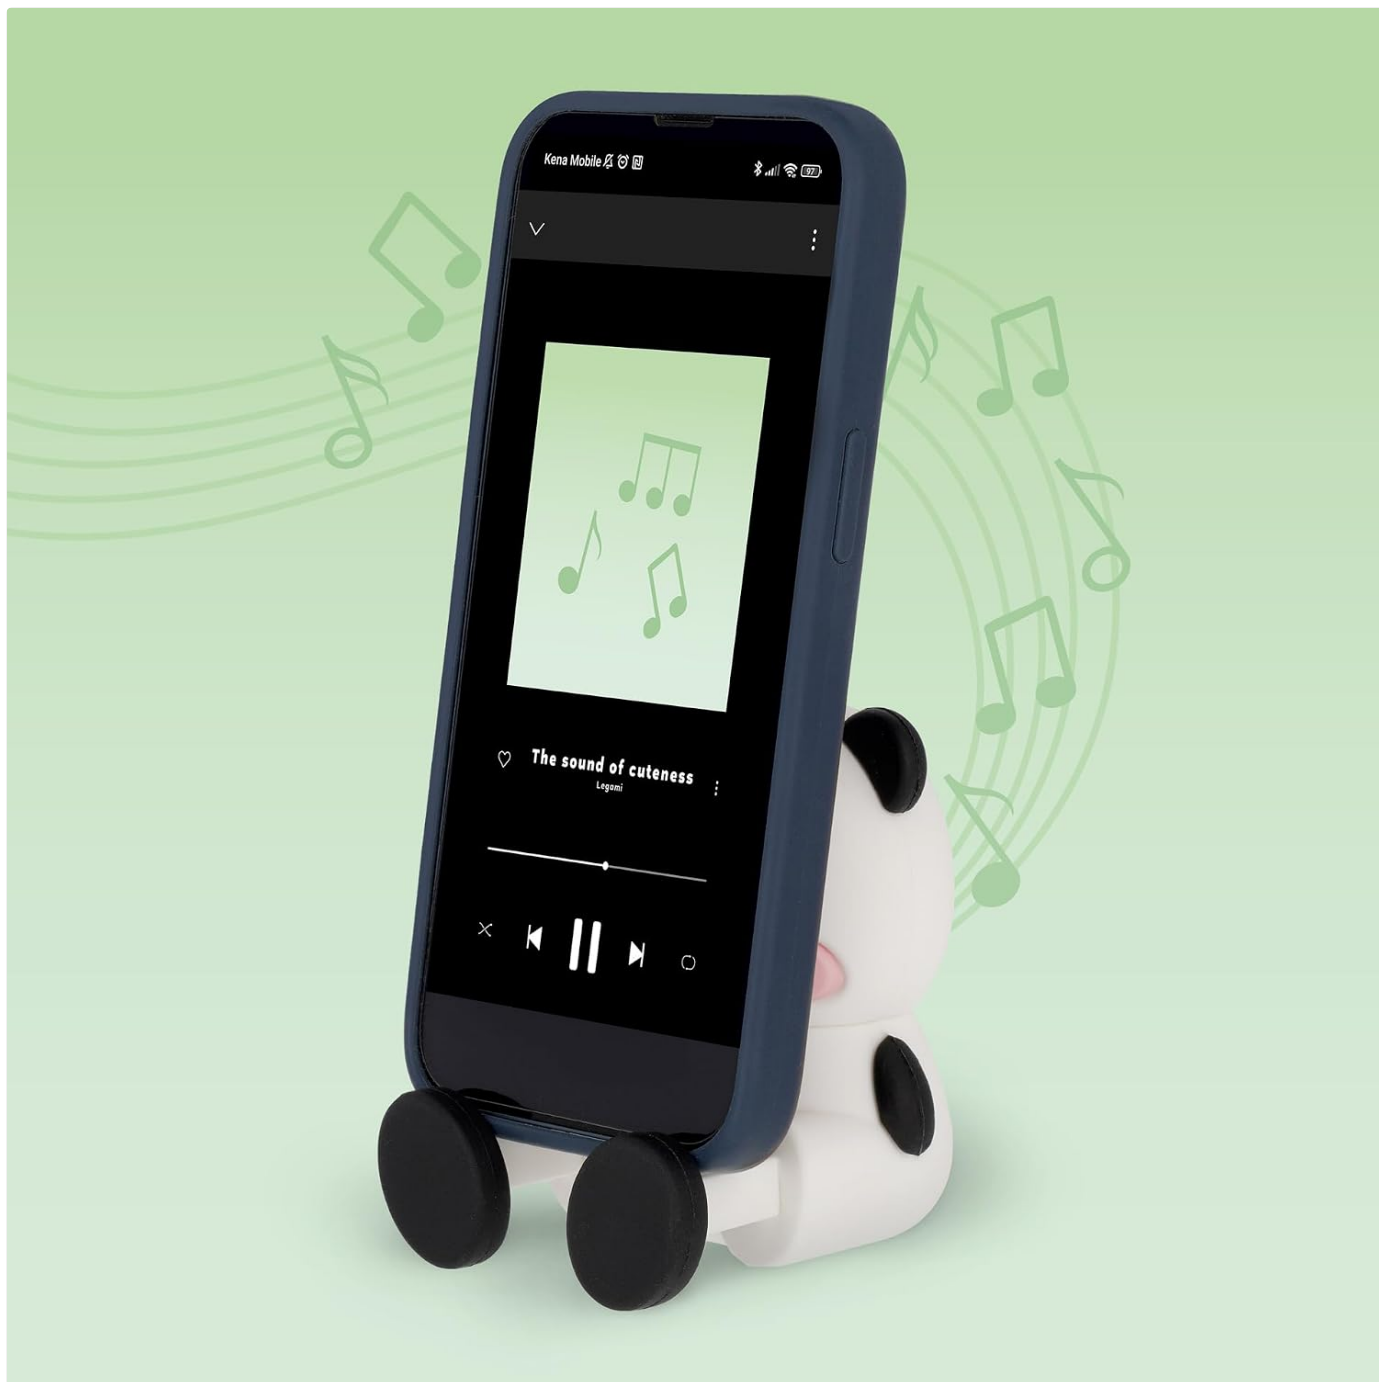


Image 6.1: A smartphone resting in the integrated phone stand of the panda speaker.

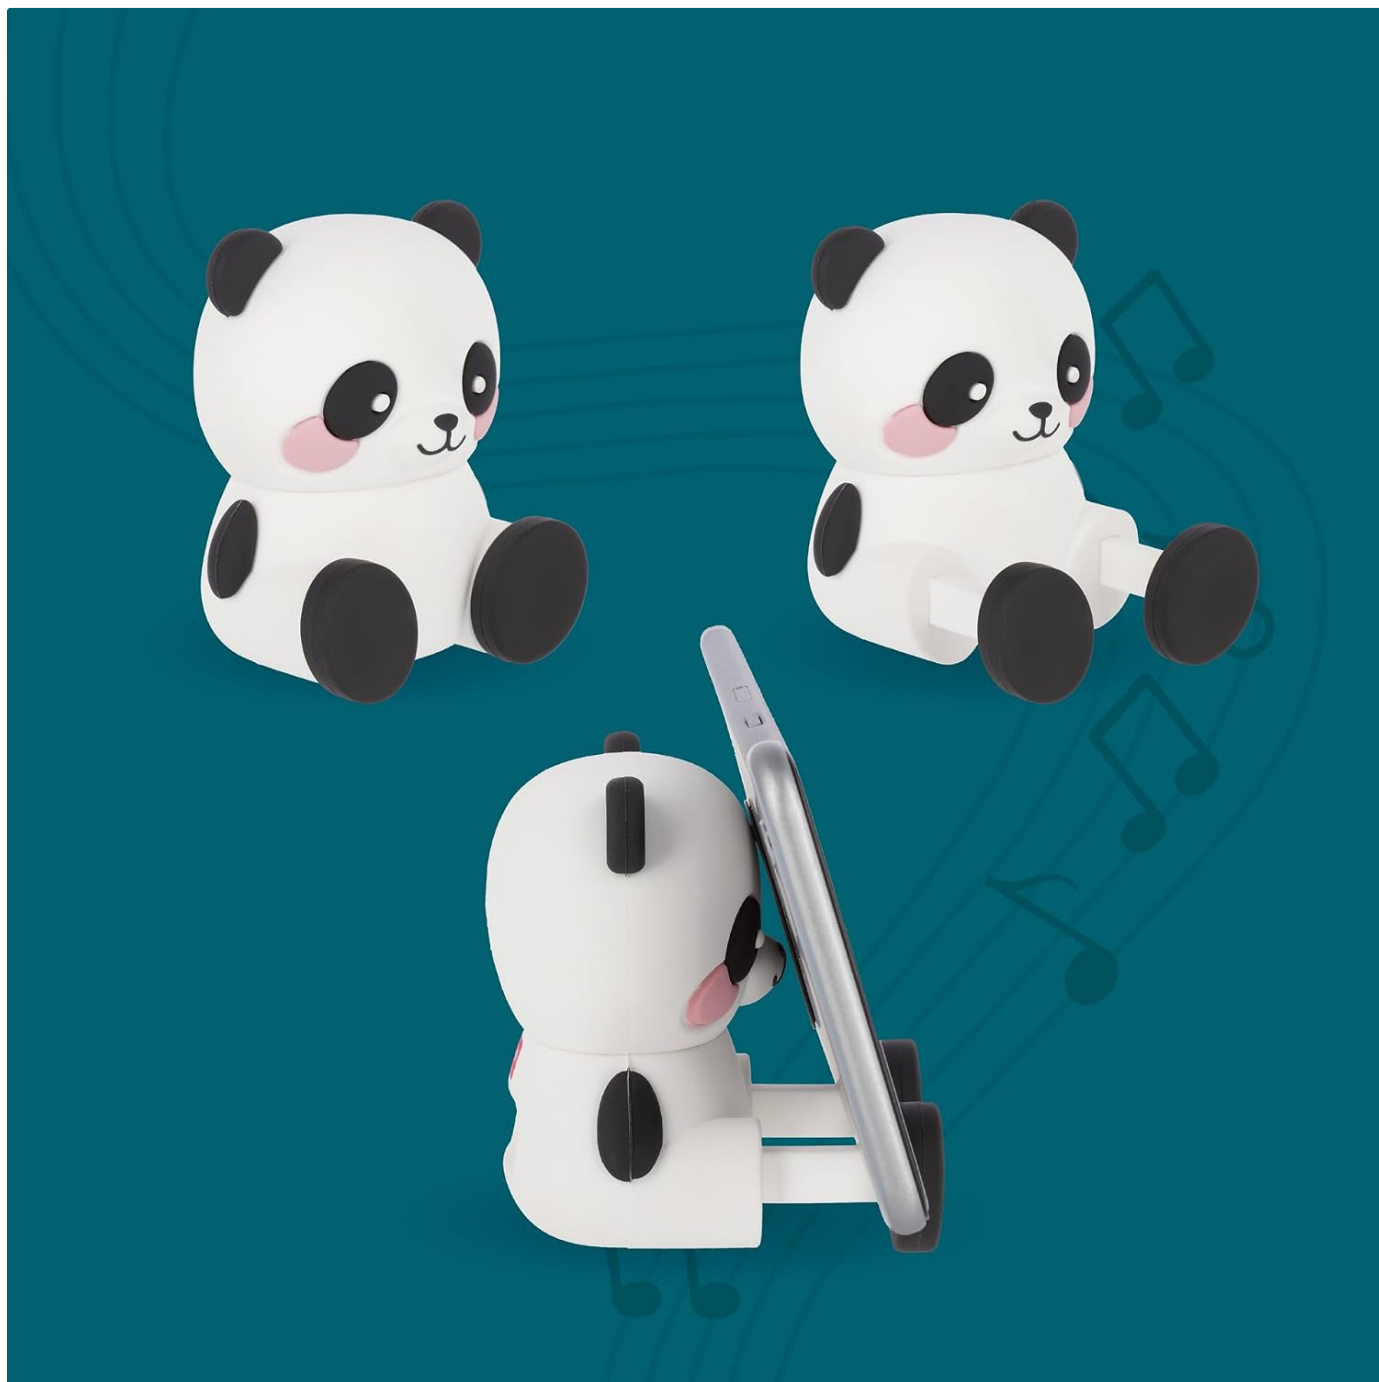


Image 6.2: Various angles of the panda speaker, highlighting its use as a phone stand.

6.3. Wired Audio Connection (If Applicable)

If your device supports it and you prefer a wired connection, connect an audio cable (not included) from your device's audio output to the Aux port on the back of the speaker. *As noted in Section 4, some users have reported that the port labeled "Aux" may function as an LED indicator only. Please verify functionality with your specific unit.*

7. MAINTENANCE AND CARE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- Store the speaker in a cool, dry place when not in use.
- Avoid dropping the device or subjecting it to strong impacts, which could cause internal damage.
- Do not block the speaker grille or charging port.

8. TROUBLESHOOTING

Problem	Solution
Speaker does not turn on.	Ensure the speaker is charged. Connect it to a power source using the USB cable.
Cannot pair via Bluetooth.	Make sure the speaker is in pairing mode (flashing LED). Check your device's Bluetooth settings and ensure it is discoverable. Try turning both devices off and on again.
No sound or low volume.	Check the volume levels on both the speaker and your connected device. Ensure the speaker is properly paired.
Aux port does not work.	The port labeled "Aux" on some units may be an LED indicator only. If you require wired audio, please confirm your specific unit's functionality.

9. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Legami
Model Name	THE SOUND OF CUTENESS PANDA
Model Number	SPS0001
Product Dimensions	5 x 6 x 8 cm
Weight	200 grams
Connectivity Technology	Bluetooth
Speaker Type	Portable Speaker
Audio Output Mode	Stereo
Power Source	Battery Powered (Rechargeable via USB)
Battery	1 x 9V (Type of battery required)
Playing Time	Up to 3 hours
Compatible Devices	Smartphones, Tablets
Included Components	USB cable
Control Method	App (via connected device)
Waterproof	No
Warranty Type	Limited

10. WARRANTY AND SUPPORT

This product comes with a limited warranty. For details regarding returns or defective products, please refer to the retailer's return policy or contact Legami customer support.

For specific information on purchases made through marketplaces, consult the relevant marketplace's help page.

Manufacturer: Legami

For further assistance, please visit the [Legami Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question