

[Manuals.plus](#) /

› [PIXPEAK](#) /

› PIXPEAK 2K Tablet 10.4 Inch Android 14 User Manual

## PIXPEAK X608

# PIXPEAK 2K Tablet 10.4 Inch Android 14 User Manual

Model: X608

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your PIXPEAK 2K Tablet. Please read it thoroughly before operating the device and keep it for future reference.

### Package Contents

Verify that all items are present in the package:

- 1 x Android 14.0 10-inch Tablet
- 1 x Earphones
- 1 x Protective Case
- 1 x Bluetooth Wireless Keyboard
- 1 x Wireless Mouse
- 1 x Capacitive Pen
- 1 x USB Cable
- 1 x OTG Adapter
- 1 x EU Charger
- 1 x User Manual



Image: PIXPEAK 2K Tablet with all included accessories, such as the keyboard, mouse, and stylus.

## 2. SETUP

---

### Charging the Tablet

Before first use, fully charge the tablet using the provided EU charger and USB cable. Connect the USB cable to the tablet's charging port and the charger to a power outlet.



Image: Tablet connected to charger, illustrating battery usage for various tasks.

## Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power Off" from the options.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

## Initial Setup

Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account login.

## Inserting SIM Card and Micro SD Card

The tablet supports 4G LTE connectivity and expandable storage up to 2TB via a Micro SD card. Locate the SIM/SD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Carefully insert your SIM card(s) and/or Micro SD card into the designated slots, ensuring correct orientation. Close the tray securely.

## T606 Octa-Core Processor 1.6GHz

The octa-core processor in the PIXPEAK tablet allows it to respond quickly and increase processing speed. From work to play, it brings you a faster and smoother user experience



Octa-Core Processor



1.6 GHz High frequency



12nm Reduces heat

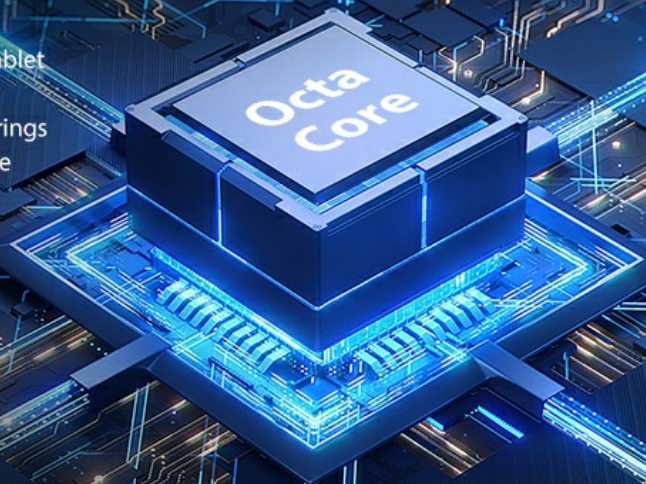


Image: Diagram illustrating the tablet's memory specifications, including RAM, ROM, and Micro SD card expansion.

### Connecting Accessories (Keyboard, Mouse, Pen)

- **Bluetooth Keyboard:** Turn on the keyboard and enable Bluetooth on your tablet (Settings > Connected devices > Bluetooth). Pair the keyboard with your tablet.
- **Wireless Mouse:** Insert the USB receiver for the wireless mouse into the OTG adapter, then connect the OTG adapter to the tablet's USB-C port.
- **Capacitive Pen:** The capacitive pen is ready for use directly on the screen.



Image: Tablet set up with its wireless keyboard and mouse, demonstrating its use for work or study.

### 3. OPERATING INSTRUCTIONS

---

#### Navigation and Interface

Your tablet runs on Android 14, offering an intuitive user interface. Swipe gestures, taps, and long presses are used for navigation. Familiarize yourself with the home screen, app drawer, and notification panel.

#### Wi-Fi and Mobile Data

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn Wi-Fi on and select your desired network.
- **Mobile Data (4G LTE):** Go to Settings > Network & internet > Mobile network. Ensure your SIM card is active and mobile data is enabled.

# Dual 4G LTE & Dual-band 5G Wi-Fi

Making high-speed communications possible



Image: Tablet in use for a video call, demonstrating its 4G LTE and 5G Wi-Fi connectivity.

## Camera Usage

The tablet features a 13MP rear camera and an 8MP front camera. Open the Camera app to take photos or record videos. Tap the screen to focus and press the shutter button to capture.

## Display Settings

Adjust brightness, font size, and display mode (e.g., dark theme) in Settings > Display. The 10.4-inch 2K FHD (2000x1200) IPS display offers clear visuals.

# Bigger 10.36" 2K Display



2000\*1200  
INCELL Screen



8MP+13MP  
Camera



10"



10.36"

Image: Visual comparison highlighting the larger and higher resolution 10.36-inch 2K display of the PIXPEAK tablet.

## Audio

The tablet is equipped with dual speakers for enhanced audio. Connect the included earphones for private listening or use Bluetooth headphones via Bluetooth 5.0.



Image: Tablet in use, showcasing Bluetooth 5.0 connectivity and stereo dual speakers for audio playback.

## 4. MAINTENANCE

### Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

### Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the provided charger or a certified compatible charger.

### Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to Settings > System > System update.

### Storage Management

To maintain performance, periodically clear unnecessary files, uninstall unused apps, and transfer large media files to external storage (Micro SD card or cloud services). The tablet has 256GB ROM and supports up to 2TB TF expansion.

## 5. TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Tablet does not turn on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a force restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues.	Check if Wi-Fi is enabled. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Close unused applications. Clear cache for frequently used apps. Free up storage space. Restart the tablet. The tablet utilizes 12GB physical RAM with an additional 24GB virtual RAM (total 36GB) for smooth multitasking.
Accessories (keyboard/mouse) not connecting.	For Bluetooth devices, ensure Bluetooth is enabled on the tablet and the accessory is in pairing mode. For the wireless mouse, verify the USB receiver is correctly inserted via the OTG adapter. Check battery levels of accessories.
Apps crashing or freezing.	Update the app to the latest version. Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache). If the issue persists, uninstall and reinstall the app.

## 6. SPECIFICATIONS

---

Detailed technical specifications for the PIXPEAK 2K Tablet Model X608:

Feature	Detail
Brand	PIXPEAK
Model Number	X608
Operating System	Android 14
Display Size	10.4 Inches
Display Resolution	2000 x 1200 pixels (2K FHD IPS)
Processor	Octa-Core (Qualcomm), up to 2.0 GHz
RAM	36 GB (12GB physical + 24GB virtual expansion)
Internal Storage (ROM)	256 GB
Expandable Storage	Up to 2 TB via Micro SD card
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	8000 mAh
Average Battery Life	Up to 72 hours (usage dependent)
Connectivity	4G LTE, 5G Wi-Fi (Dual-band 802.11ac), Bluetooth 5.0
Dimensions	26 x 18 x 1.5 cm

Feature	Detail
Weight	490 grams

**10.36-Inch**  
2000\*1200 IPS

**36** GB RAM  
**256** GB ROM

**8000mAh** Battery

**8000mAh Battery**

**Octa Core**

**Android 14**

**4G LTE/5G Wi-Fi**

**Bluetooth 5.0**

**8MP+13MP Camera**


Image: Overview of the tablet's main features and specifications.

## 7. WARRANTY AND SUPPORT

Your PIXPEAK 2K Tablet is covered by a comprehensive warranty and dedicated customer support.





- **Warranty:** 24-month manufacturer warranty and statutory guarantee.
- **Return Policy:** 30-day return policy for dissatisfaction or dislike.
- **Customer Service:** Response guaranteed within 24 hours, including holidays.
- **Warranty Claims:** Free returns in case of a valid warranty claim.

For support, please refer to the contact information provided in your product packaging or visit the official PIXPEAK website.



**Customer Service**

---

-  24-month manufacturer warranty & statutory guarantee
-  30-day return policy-Dissatisfied Or dislike
-  Response guaranteed within 24 hours – even on holiday
-  Free returns in case of warranty claim

**PIXPEAK**

Image: Summary of PIXPEAK customer service and warranty details.

