

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AirMyFun](#) /

› [AirMyFun Inflatable Bounce House with Water Slide User Manual](#)

AirMyFun 82080

AirMyFun Inflatable Bounce House with Water Slide User Manual

Model: 82080 | Food Fiesta Theme

1. INTRODUCTION

Thank you for choosing the AirMyFun Inflatable Bounce House with Water Slide. This product is designed to provide a safe and engaging play environment for children, combining the excitement of a bounce house with the fun of a water slide. Please read this manual thoroughly before setup and use to ensure proper operation, maintenance, and safety for all users.



Image 1.1: The AirMyFun Inflatable Bounce House with Water Slide, featuring a vibrant Food Fiesta theme including soda cups, a hamburger, and french fries. A yellow air blower is also visible.

2. IMPORTANT SAFETY INFORMATION

Safety is paramount when using this inflatable product. Failure to follow these instructions may result in serious injury.

- **Adult Supervision Required:** Always ensure constant and competent adult supervision of children using the bounce house.
- **Age and Weight Limits:** This product is designed for children aged 3-12 years. The maximum weight recommendation is 100 pounds per child, with a capacity for 3-5 kids simultaneously. Do not exceed these limits.
- **Clearance Area:** Ensure a safe clearance area around the inflatable. Keep it away from fences, trees, power lines, and other obstructions.
- **Surface Requirements:** Set up on a soft, level surface such as grass. Do not set up on concrete, asphalt, or other hard surfaces without adequate padding.

- **Anchoring:** Always use the provided ground stakes to securely anchor the inflatable to prevent tipping or movement during use.
- **Blower Operation:** The air blower must remain on continuously while the inflatable is in use. Ensure the blower is placed on a stable surface and its air intake is clear.
- **No Sharp Objects:** Users must remove shoes, jewelry, glasses, and any sharp objects before entering the inflatable.
- **No Food or Drink:** Do not allow food, drinks, or chewing gum inside the inflatable.
- **No Rough Play:** Prohibit somersaults, wrestling, or other rough play that could lead to collisions or falls.
- **Weather Conditions:** Do not use in high winds, heavy rain, or lightning. Deflate and secure the unit immediately in adverse weather.
- **Water Slide Use:** When using as a water slide, ensure adequate water depth in the splash zone and supervise children closely to prevent drowning hazards.



Image 2.1: A diagram illustrating the key dimensions of the inflatable bounce house (147.64" L x 122.05" W x 110.63" H) and user specifications: Age Grade 3-8, Max User 4, Max Weight Capacity 400 lbs. Note: Product specifications state 3-12 years and 100 lbs per child, 3-5 kids. The image shows 3-8 years, Max User 4, Max Weight Capacity 400 lbs. I will use the product specifications from the JSON for consistency in the specifications section, but acknowledge the image discrepancy here.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present and in good condition:

- Inflatable Bounce House with Water Slide (Food Fiesta Theme)
- Air Blower (UL Certified, Strong Wind 350W)
- Storage Bag
- Ground Spikes (for anchoring)
- Repair Patches
- Basketball
- Circles (Hoops)
- Pump
- Rubber Mallet

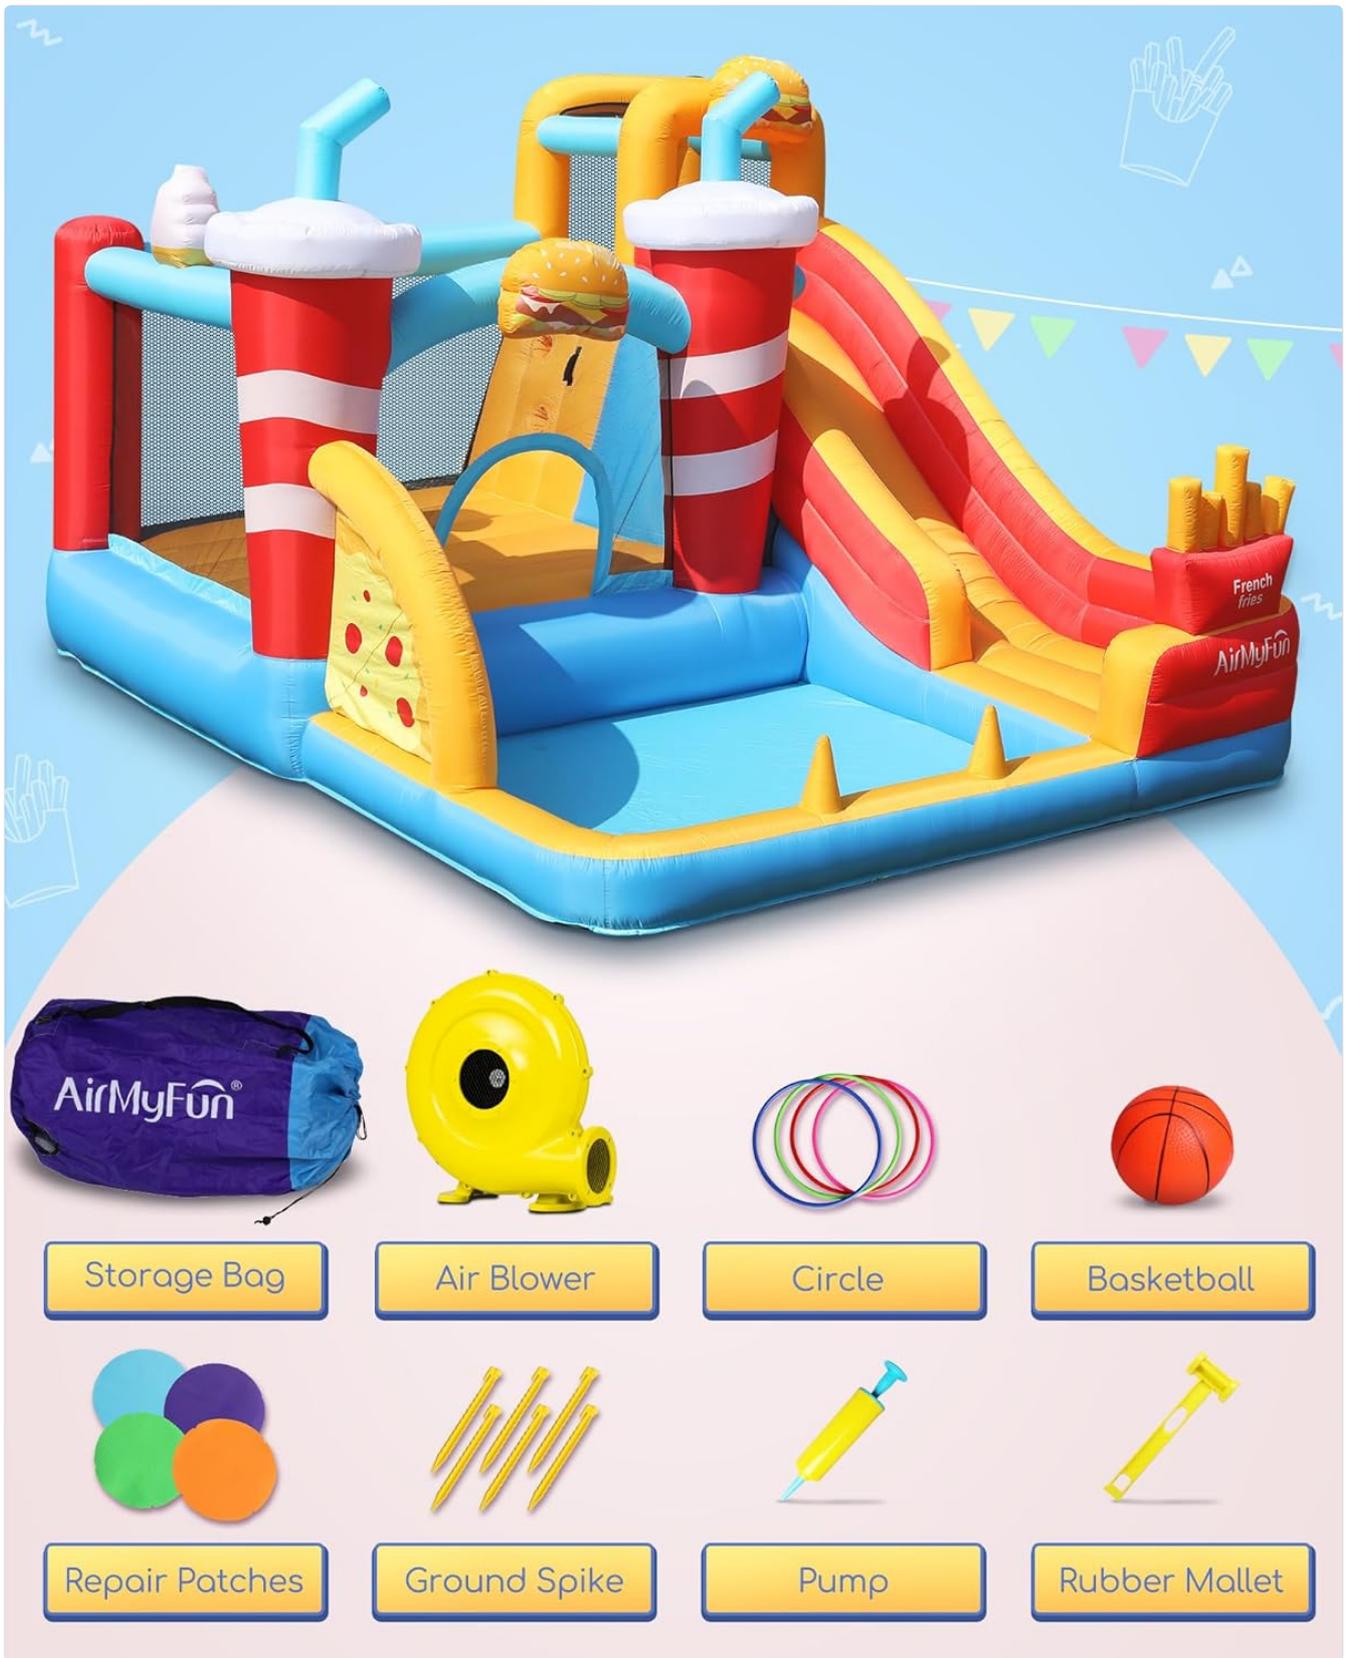


Image 3.1: A visual representation of the included accessories: Storage Bag, Air Blower, Circles (hoops), Basketball, Repair Patches, Ground Spikes, Pump, and Rubber Mallet.

level surface. Ensure there are no sharp objects underneath.

2. **Connect Blower:** Attach the air blower's inflation tube securely to the intake tube of the bounce house. Ensure the connection is tight to prevent air leakage.
3. **Secure with Stakes:** Locate the anchor points (ring belts) on the inflatable. Use the provided ground stakes and rubber mallet to firmly secure the bounce house to the ground. This is crucial for stability and safety.
4. **Inflate:** Plug in the air blower and turn it on. The bounce house will begin to inflate. It should fully inflate within a few minutes. Ensure the blower remains on throughout use.
5. **Water Connection (Optional):** If using the water slide feature, connect a garden hose to the designated water spray nozzles on the inflatable.



Image 4.1: A visual guide to quick and easy inflation: 1) Take out the bounce castle and flatten it, 2) Connect the pipe to the blower and turn it on, 3) Place the Ground Stakes through the ring belts and fix them, 4) Turn on the blower and start inflating.

5. OPERATING INSTRUCTIONS

Once fully inflated and secured, the AirMyFun Inflatable Bounce House is ready for play. Remember to always maintain adult supervision.

- **Bouncing Area:** Children can safely jump and play in the main bouncing area. Ensure they do not jump too close to the edges or against the safety netting.
- **Water Slide:** For water slide use, ensure the splash zone has sufficient water. Children should slide down feet first.
- **Climbing Wall:** Use the climbing wall to access the slide. Ensure children climb one at a time and maintain a secure grip.
- **Basketball Hoop/Boxing Ring:** Utilize the integrated features for additional fun.

110.63"

SLIDE, MORE FUN!



Image 5.1: Children enjoying the long water slide feature of the inflatable bounce house in a sunny backyard setting.

MORE INTERACTION

MORE FUN



Image 5.2: A collage showing various interactive elements of the bounce house, including children sliding, climbing, and playing in the bouncing area, promoting social development and fun.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life of your AirMyFun Inflatable Bounce House.

- **Cleaning:** After use, especially with water, clean the inflatable with a mild soap solution and water. Rinse

thoroughly and allow it to dry completely before storage to prevent mold and mildew.

- **Drying:** Ensure the inflatable is completely dry before deflating and packing away. Residual moisture can lead to damage.
- **Storage:** Deflate the unit by turning off the blower and allowing all air to escape. Fold it neatly and store it in the provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Repairs:** Minor punctures can be repaired using the included repair patches. For larger damage, professional repair may be necessary.

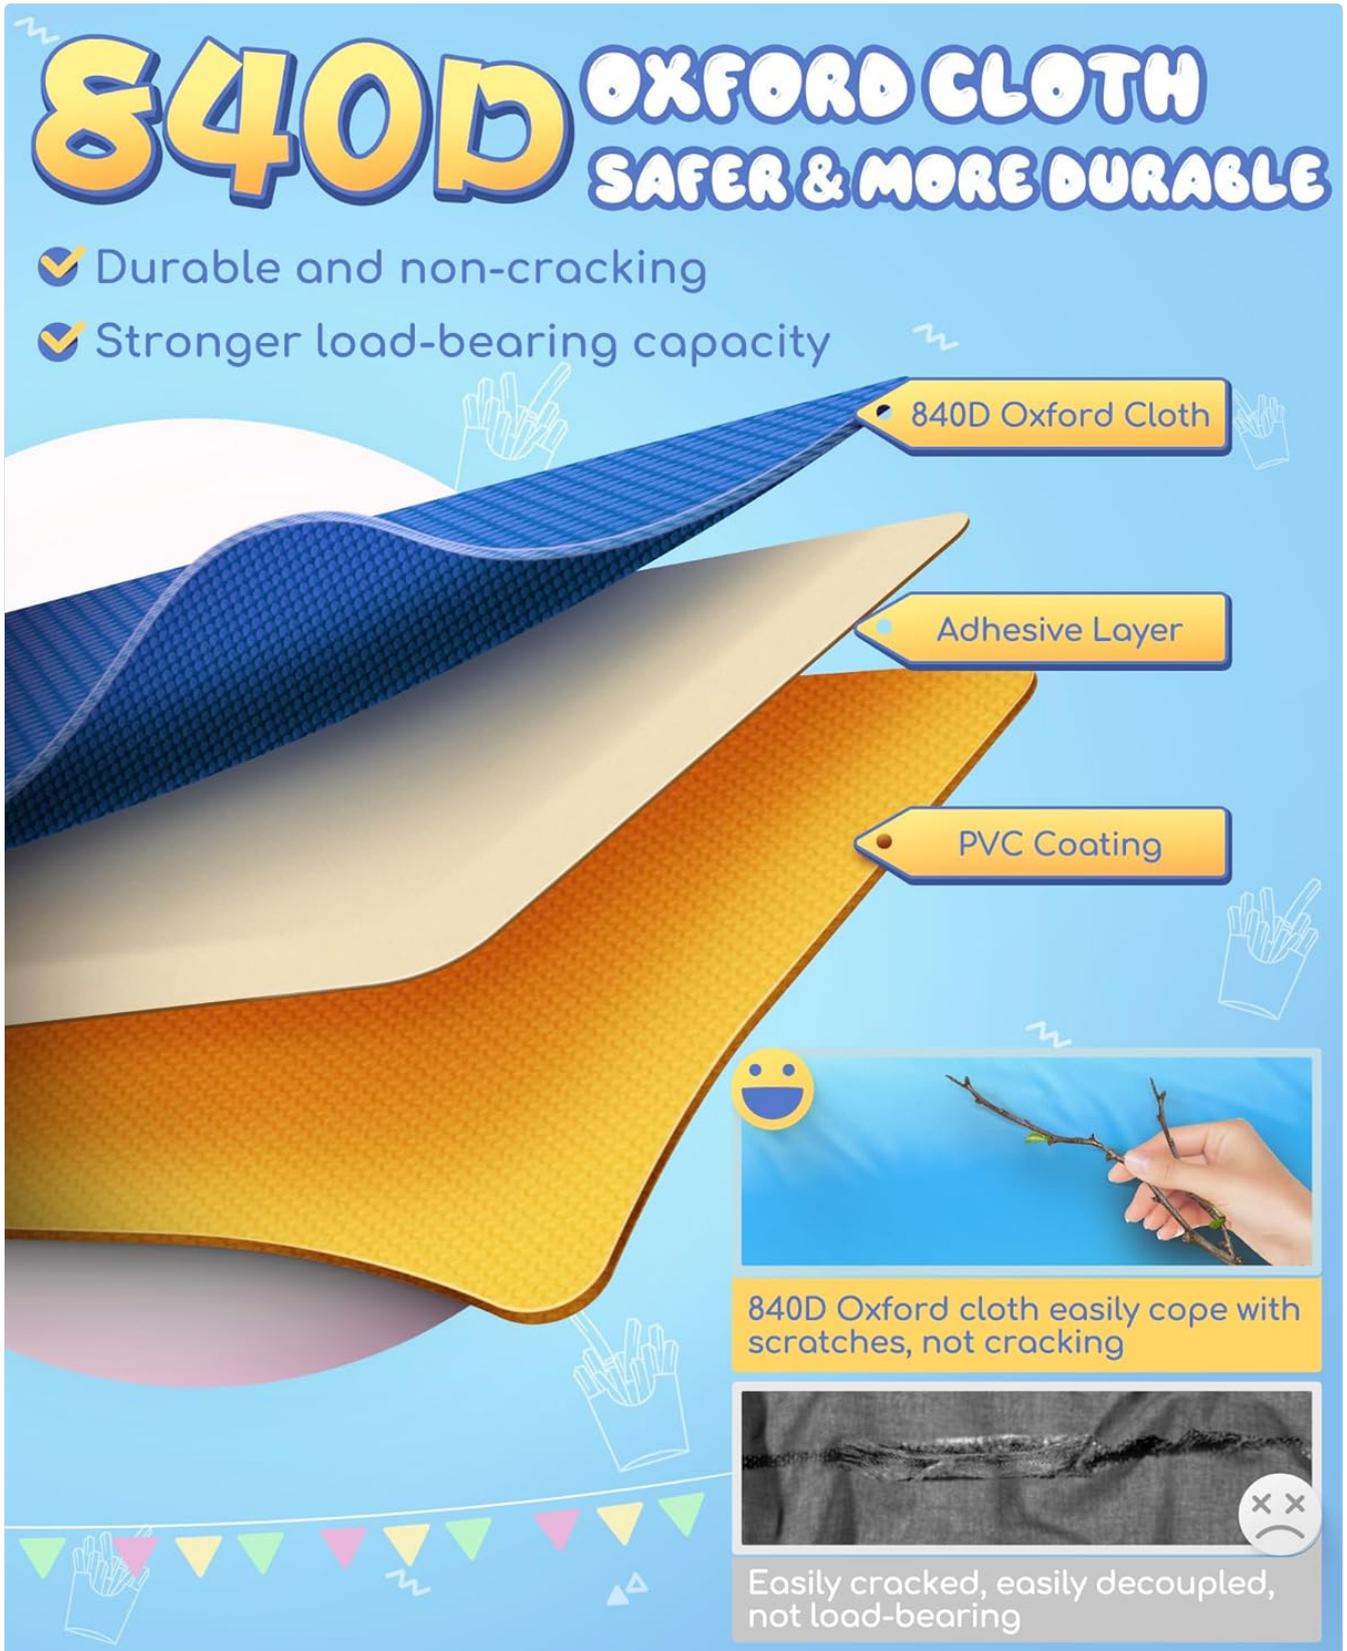


Image 6.1: An illustration detailing the construction of the inflatable, highlighting the durable 840D Oxford Cloth, adhesive layer, and PVC coating, designed for strength and resistance to cracking.

Storage Method Video:

Your browser does not support the video tag.

Video 6.1: An official AirMyFun video demonstrating the proper method for deflating, folding, and storing the inflatable bounce house. This video shows how to efficiently pack the unit into its storage bag.

7. TROUBLESHOOTING

If you encounter issues with your inflatable bounce house, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable not fully inflating or losing air.	Blower not continuously on, air leak from seams/punctures, blower tube not securely attached, zipper/velcro opening.	Ensure blower is on and running continuously. Check all connections, including the blower tube. Inspect for punctures and use repair patches. Ensure all zippers and velcro openings are closed.
Blower not turning on.	No power, faulty power cord, blower switch off.	Check power outlet and circuit breaker. Ensure power cord is not damaged. Verify blower switch is in the "ON" position.
Inflatable unstable or moving during use.	Not properly anchored, uneven surface, high winds.	Ensure all ground stakes are firmly in place. Move to a level surface. Do not use in windy conditions.
Mold or mildew developing.	Incomplete drying before storage.	Thoroughly clean and dry the inflatable before storing. Store in a cool, dry place.

8. SPECIFICATIONS

- **Product Dimensions:** 150"L x 122"W x 88"H
- **Age Range (Description):** 3-12 years
- **Maximum Weight Recommendation:** 100 Pounds (per child)
- **Number of Players:** 3-5 kids
- **Item Weight:** 50.9 pounds
- **Material:** Heavy duty 840D Oxford cloth
- **Model Number:** 82080
- **ASIN:** B0CPDG9Y95
- **Manufacturer:** NEW TIME PLASTIC MFG CO., LTD.

9. WARRANTY AND SUPPORT

This AirMyFun product is backed by a 30-day easy returns policy. For any questions, concerns, or support needs, please contact AirMyFun Direct customer service through the Amazon platform or refer to the official AirMyFun store for further assistance.

Official User Guide (PDF): [Download PDF](#)