

Daysnew DB100

Daysnew Wireless TV Headphones User Manual

Model: DB100

Brand: Daysnew

INTRODUCTION

Welcome to the user manual for your Daysnew Wireless TV Headphones. These headphones are designed to provide a high-quality audio experience for TV watching, featuring both 2.4GHz RF and Bluetooth 5.3 connectivity. This manual will guide you through the setup, operation, and maintenance of your new headphones.



The Daysnew Wireless TV Headphones, shown with their charging dock, offer a convenient audio solution for television viewing.

WHAT'S IN THE BOX

- 1 Wireless TV Headphone
- 1 RF Transmitter (Charging Dock)
- 1 Type-C Adapter
- 1 AUX Audio Cable
- 1 RCA Audio Cable
- 1 Optical Audio Cable
- 2 Rechargeable Batteries
- 1 User Manual

SETUP

Initial Charging

Before first use, fully charge the headphones. Place the headphones on the transmitter charging dock. The charge indicator light on the dock will show charging status.



The headphones are placed on the RF transmitter, which also functions as a charging dock. Ensure proper alignment for charging.

Connecting the Transmitter to Your TV

 
The RF transmitter offers multiple connection options to your TV. Choose the method compatible with your

television's audio output.

Optical Audio Connection (Recommended)

Connect one end of the optical audio cable to the OPTICAL OUT port on your TV and the other end to the OPTICAL IN port on the RF transmitter.

On your TV's audio settings, select "Optical" or "Digital Audio Out" and ensure the format is set to PCM.

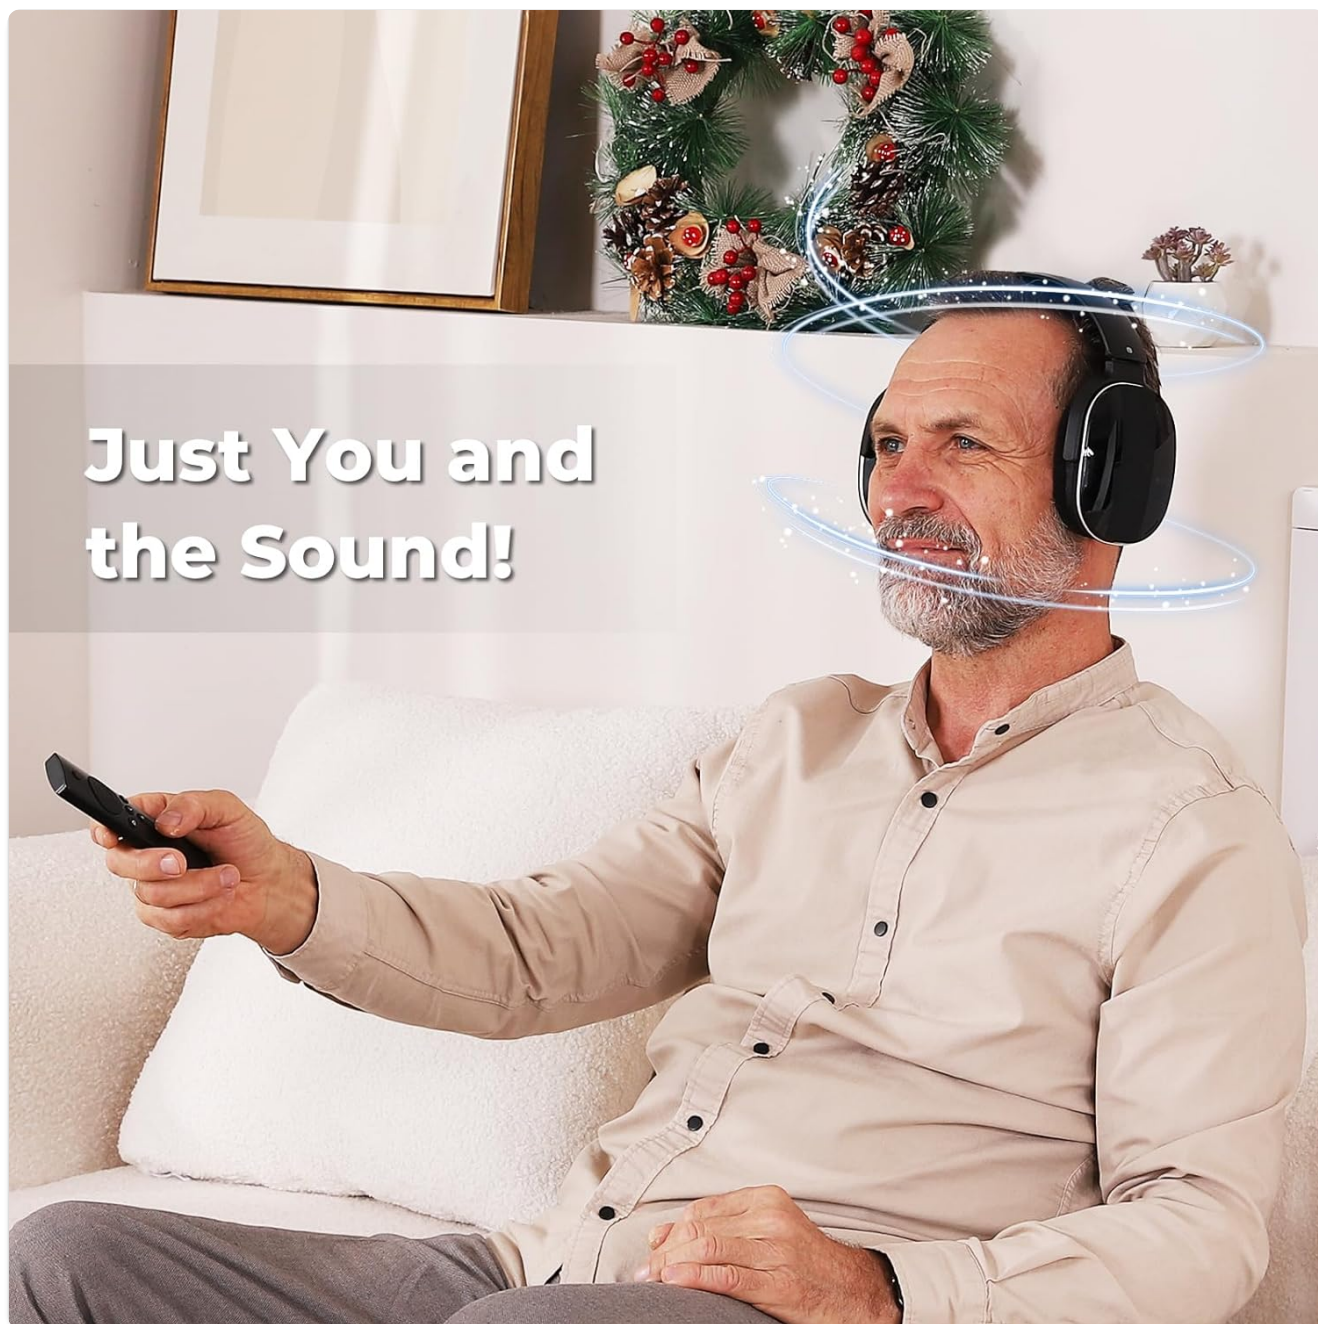

A diagram illustrating the connection of the optical audio cable from the TV's optical output to the transmitter's optical input.



A screenshot of a TV's audio settings menu, highlighting the "Optical" output selection.

RCA Audio Connection

Connect the red and white plugs of the RCA audio cable to the corresponding AUDIO OUT (L/R) ports on your TV and the other end to the RCA IN ports on the transmitter.

AUX Audio Connection

Connect the 3.5mm AUX cable to the headphone jack or AUX OUT port on your TV and the other end to the AUX IN port on the transmitter.

Powering On

Connect the Type-C adapter to the transmitter and plug it into a power outlet. The transmitter's indicator light will illuminate.

Press and hold the Power button on the headphones for 3 seconds to turn them on. The headphones will automatically connect to the transmitter.

OPERATING INSTRUCTIONS

 
TV Mode (RF 2.4GHz)

Once the transmitter is connected and powered on, and the headphones are turned on, they will automatically establish a 2.4GHz RF connection for TV audio.

Adjust the volume using the volume controls on the headphones.

READY IN SECONDS

Works with Most TVs Straight
Out of the Box!

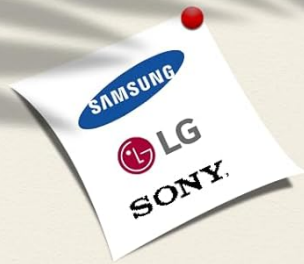

Warranty valid in US only.

A man comfortably wearing the Daysnew headphones while watching television, demonstrating private listening.

Bluetooth Mode (BT 5.3)

To switch to Bluetooth mode, press the "TV/BT" button on the headphones. The indicator light will change to blue, indicating Bluetooth pairing mode.

On your device (phone, tablet, laptop), search for "DAYSNEW DB100" in the Bluetooth settings and select to pair.

Once paired, the headphones will play audio from your Bluetooth device.



Visual representation of the wide compatibility of the headphones with various devices via Bluetooth 5.3.

Controls

The headphones feature intuitive controls for easy operation.

- **Power Button:** Press and hold for 3 seconds to turn on/off.
- **Volume Up/Next Track:** Short press for volume up, long press for next track (in Bluetooth mode).
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track (in Bluetooth mode).
- **Play/Pause/Call Answer:** Single press to play/pause music or answer/end calls (in Bluetooth mode).
- **TV/BT Button:** Press to switch between RF (TV) and Bluetooth modes.



PERSONAL VOLUME

Watching TV At High Volume Without Disturbing Others

A detailed view of the control buttons located on the earcup of the Daysnew headphones, including power, volume, and mode selection.

Personal Volume Control

The headphones allow for independent volume adjustment, enabling you to listen at your preferred level without affecting the TV's main volume or disturbing others.



 
Soft & Breathable



Free Adjustment



Thicken & Soft

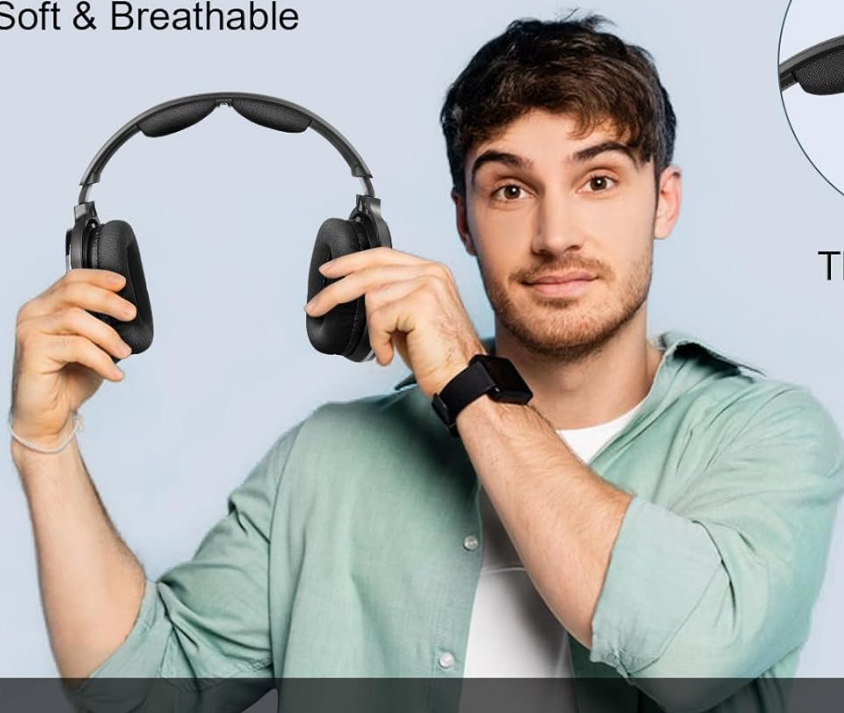

COMFORT FOR LONG TIME TO WEAR

A couple on a couch, with one person wearing the headphones, illustrating the personal volume feature for undisturbed listening.

MAINTENANCE

- Clean the headphones and charging dock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Store the headphones on the charging dock when not in use to ensure they are always charged and ready.
- The earcups are designed for comfort and breathability.

BLUETOOTH 5.3

WIDE COMPATIBILITY



PHONE



IPAD



RADIO



TV



PC



LAPTOP

A close-up image highlighting the soft and breathable material of the headphone earcups, designed for extended comfort.

TROUBLESHOOTING

Problem	Solution
No Sound in TV Mode	<ul style="list-style-type: none">• Ensure the transmitter is powered on and connected correctly to the TV's audio output.• Check TV audio settings: select "Optical" or "Digital Audio Out" and set format to PCM.• Verify headphones are turned on and in TV mode (RF).• Check headphone volume.

Problem	Solution
No Sound in Bluetooth Mode	<ul style="list-style-type: none">• Ensure headphones are in Bluetooth mode (blue indicator light).• Check if headphones are paired with your device. If not, re-pair.• Verify Bluetooth is enabled on your device.• Check volume on both headphones and your device.
Poor Audio Quality / Static	<ul style="list-style-type: none">• Ensure headphones are within the 98ft (30M) operating range of the transmitter.• Minimize interference from other 2.4GHz devices.• Check cable connections for looseness or damage.
Headphones Not Charging	<ul style="list-style-type: none">• Ensure the transmitter is plugged into a working power outlet.• Verify headphones are correctly seated on the charging dock.• Check the charging indicator light on the dock.

SPECIFICATIONS

Feature	Detail
Noise Control	None
Frequency Response	2.4 GHz
Headphones Jack	3.5 mm Jack
Model Name	DB100
Connectivity Technology	OPT, AUX, RCA, Bluetooth, Wireless RF
Wireless Communication Technology	Bluetooth, RF
Included Components	TV Headphones, Wireless Charging Holder, User Manual, Cables (OPT, AUX, RCA)
Age Range (Description)	ALL
Material	Plastic
Specific Uses For Product	Listen to Music, Travel, Watching TV Without Disturbing Others
Charging Time	5 Hours
Compatible Devices	Cellphones, Tablets, Ipad, Desktops, All TV

Feature	Detail
Control Type	Volume Control
Cable Feature	Without Cable
Unit Count	1.0 Count
Style	DB100-Charging Holder
Control Method	Touch
Controller Type	Button
Battery Life	30 Hours
Audio Driver Type	Dynamic Driver
Bluetooth Range	100 Meters
Bluetooth Version	5.3
Carrying Case Color	Black & Silver
Audio Latency	20 Milliseconds
Audio Driver Size	40 Millimeters
Earpiece Shape	Over-Ear
UPC	721691700559
Manufacturer	Daysnew
Product Dimensions	8.43 x 4.84 x 9.06 inches
Item Weight	1.92 pounds
ASIN	B0CPDJBD39
Item model number	DB100
Brand	Daysnew
Color	Black & Silver
Ear Placement	Over Ear
Form Factor	Over Ear
Impedance	80 Ohm

WARRANTY AND SUPPORT

DAYSNEW offers 24/7 customer service to assist with any inquiries or issues you may have. Please refer to the contact information provided with your product or visit the official Daysnew website for support.

For protection plans, please refer to the options available at the time of purchase.

Documents - Daysnew – DB100

User manual for the DAYSNEW DB100 2.4G/Bluetooth Dual-mode Wireless TV Headphone, covering product overview, setup, operation, LED indicators, troubleshooting, specifications, safety instructions, and warranty.

lang:en score:25 filesize: 1.06 M page_count: 1 document date: 2024-03-22

▲
封底

