

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [TYMO](#) /

> [TYMO Porta PRO Cordless Hair Straightener Brush - Instruction Manual](#)

TYMO HC122

TYMO Porta PRO Cordless Hair Straightener Brush

Model: HC122 - Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read all instructions before use and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Burn Hazard:** Surfaces become extremely hot during use. Avoid direct contact with skin.
- **Electric Shock Risk:** Keep away from water. Do not use near bathtubs, sinks, or other water sources.
- **Fire Risk:** Unplug when not in use. Do not leave unattended when plugged in.
- Keep out of reach of children.

PRODUCT OVERVIEW

The TYMO Porta PRO Cordless Hair Straightener Brush is designed for convenient, on-the-go hair styling. It features a dual-power mode, intense ionic technology for frizz control and shine, and versatile styling capabilities.

PRO CORDLESS STRAIGHTENER

TOUCH-UPS ON-THE-GO



The TYMO Porta PRO Cordless Hair Straightener Brush, showcasing its compact design.

Key Features:

- **PRO Dual-Power Mode:** Seamlessly switch between cordless and plugging modes for uninterrupted styling.
- **PRO Versatility Styles:** Achieve various looks, from straightening to volumizing roots and flipped ends.
- **PRO Durability Lifespan:** Engineered with cutting-edge materials to combat battery degradation, ensuring long-term reliability.
- **PRO Intense Ionic:** Emits 200 million negative ions to reduce moisture loss, enhance shine, and provide a soft, frizz-free finish.
- **PRO Portability:** Compact and lightweight, ideal for quick touch-ups and styling on the go.

WHAT'S IN THE BOX

Upon unboxing your TYMO Porta PRO, you should find the following items:

- TYMO Porta PRO Cordless Hair Straightener Brush
- USB-C Charging Cable
- Carrying Pouch
- Hair Clips (2 pieces)
- Flight Mode Plug



CORDLESS UPGRADE
TYMO PORTA=FIAT IRON + COMB

COMPARE	TYMO PORTA	FLAT IRON
PORTA VS. FIAT IRONS		
Straightening Hair in Half Time	✓	✗
Ease of Use	✓	✗
Anti-Scald Design	✓	✗
Beginner Friendly	✓	✗

Contents of the TYMO Porta PRO package, including the brush, carrying case, and hair clips.

SETUP

Charging the Device

Before first use, fully charge your TYMO Porta PRO. The device supports dual-power mode, allowing use while charging or cordless.

- Connect the provided USB-C charging cable to the Type-C charging port on the device.

- Plug the other end into a compatible USB power adapter (use only the TYMO branded charger and USB-C to USB-C cable for optimal performance).
- The battery level indicators (three dots) will illuminate to show charging progress. When fully charged, all three lights will be solid.

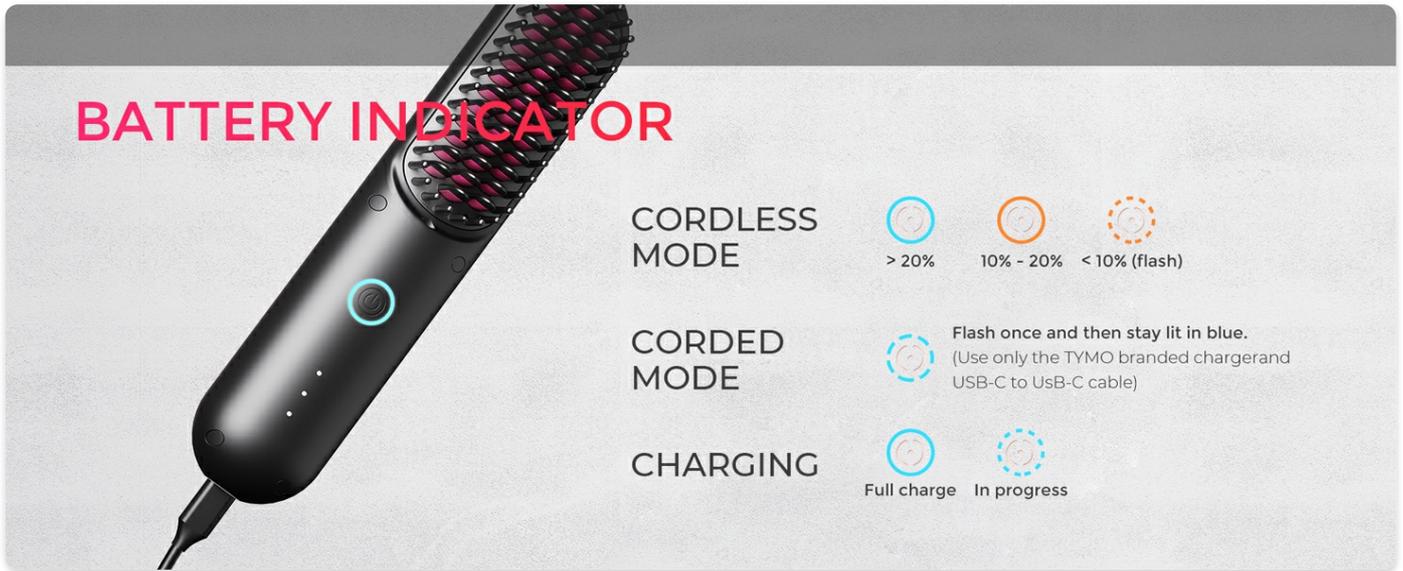


Illustration of the battery indicator and charging modes for the TYMO Porta PRO.

Flight Mode Plug

For safe travel, especially on airplanes, insert the Flight Mode Plug into the Type-C charging port. This prevents accidental activation of the device.

- To use the device, ensure the Flight Mode Plug is removed.
- Insert the plug when storing or traveling to disable the device.



Safety features of the TYMO Porta PRO, highlighting the anti-scald design, auto-off, and anti-start plug.


OPERATING INSTRUCTIONS

Power On/Off and Temperature Adjustment

- Press and hold the Power Button to turn the device ON or OFF.
- Once ON, short press the Power Button to cycle through the 3 temperature settings.

Temperature Settings:

Temperature	Recommended Hair Type
320°F / 160°C	Bleached / Fine Hair
360°F / 180°C	Normal Hair
395°F / 200°C	Thick Hair

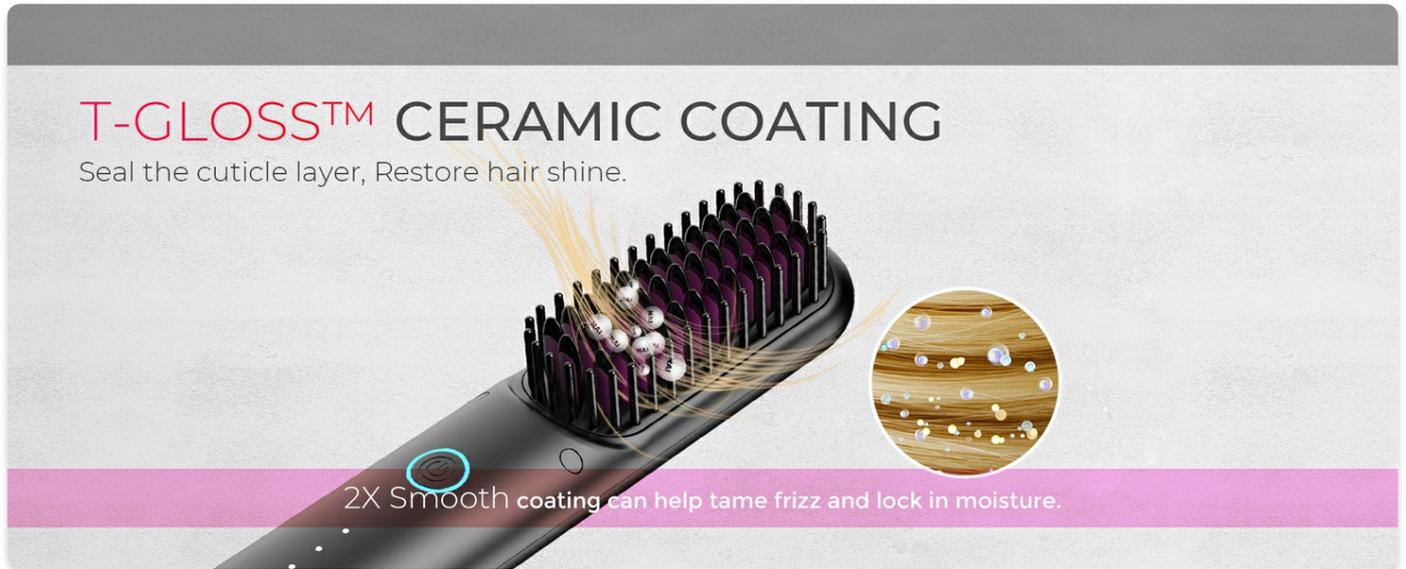


Detailed view of the TYMO Porta PRO's power button, temperature adjustment, and temperature level indicators.

Styling Your Hair

Ensure your hair is dry and detangled before using the brush. For best results, work with small sections of hair.

- **For Straightening:** Slowly brush through sections of hair from root to tip, maintaining tension.
- **For Volumizing:** Brush from underneath the hair section, lifting upwards at the roots.
- **For Waves/Flipped Ends:** Gently twist the brush as you pull through the ends of your hair.

NO MORE CRAZY HAIR DAY

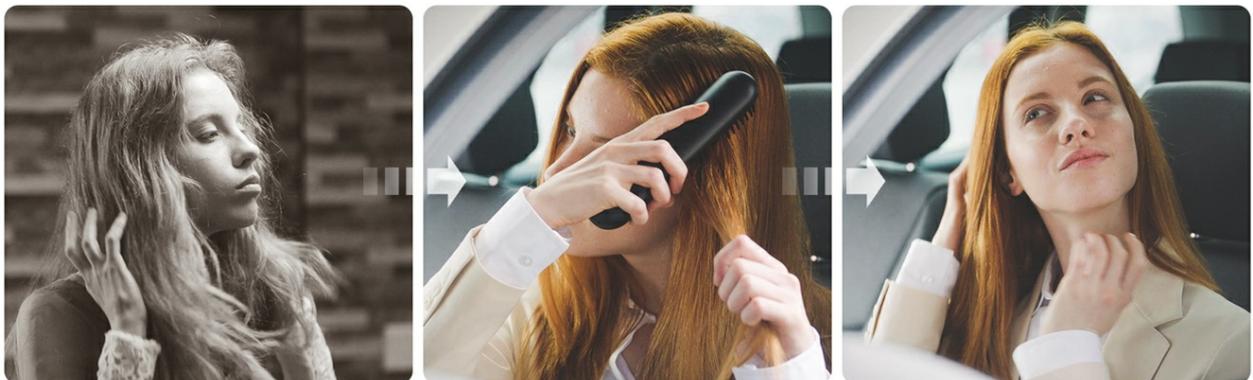

The TYMO Porta PRO's cured edge design allows for creating multiple styles beyond just straightening.

Product Usage Videos

Your browser does not support the video tag.

Video: TYMO Cordless Porta Pro Hair Straightener for Travel USB-C

This video demonstrates the compact size and USB-C charging capability of the TYMO Porta PRO, highlighting its convenience for travel and quick styling.

Your browser does not support the video tag.

Video: Quick Blow Out Look on-the-go

Watch how to achieve a quick blowout look with the TYMO Porta PRO, perfect for styling on the go and adding volume.

Your browser does not support the video tag.

Video: TYMO Cordless Porta Pro heat comb for on the Go

This video provides a comprehensive demonstration of using the TYMO Porta PRO heat comb for various styling needs while on the move.

MAINTENANCE

Cleaning

- Ensure the device is turned OFF and completely cool before cleaning.
- Use a soft, dry cloth to wipe the body of the brush.
- Carefully remove any hair strands caught in the bristles using your fingers or a small brush.
- Do not use abrasive cleaners or immerse the device in water.

Storage

- Store the TYMO Porta PRO in its provided carrying pouch to protect it from dust and damage.
- For travel, always insert the Flight Mode Plug into the charging port to prevent accidental activation.
- Store in a cool, dry place away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on	Low battery; Flight Mode Plug inserted	Charge the device fully; Remove the Flight Mode Plug.
Device not heating up	Low battery; Incorrect temperature setting	Ensure device is charged; Select a higher temperature setting appropriate for your hair type.
Hair getting caught/pulled	Hair is tangled; Too large a section of hair	Ensure hair is thoroughly detangled before use; Work with smaller sections of hair.
Poor straightening/styling results	Hair is not dry; Too fast brushing speed; Incorrect temperature	Use only on dry hair; Brush slowly and evenly; Adjust temperature as needed.

SPECIFICATIONS

- **Model Number:** HC122
- **Product Dimensions:** 7.72 x 1.69 x 1.69 inches
- **Item Weight:** 8.25 ounces (234 Grams)
- **Batteries:** 1 Lithium Ion battery required
- **Power Source:** Battery Powered
- **Max Temperature Setting:** 200°C (395°F)
- **Material Type:** Ceramic Tourmaline
- **Heater Surface Material:** Ceramic

WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact TYMO customer service.

- **Email Support:** csteam@tymo-tech.com (24-Hour Email Support)