



[Manuals.plus](#) /

› [DELSEY](#) /

› DELSEY PARIS Belmont Plus XL Suitcase User Manual

DELSEY Belmont Plus XL 00386182143MR

DELSEY PARIS Belmont Plus XL Suitcase User Manual

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your DELSEY PARIS Belmont Plus XL suitcase. Designed for durability and convenience, this suitcase features a recycled and recyclable polypropylene construction, SECURITECH® zip, and a TSA lock for secure travel. Please read these instructions carefully before using your suitcase.



Image: Front view of the DELSEY PARIS Belmont Plus XL suitcase in Chartreuse Green.

1. Initial Setup

Upon receiving your DELSEY PARIS Belmont Plus XL suitcase, please inspect it for any signs of damage. Ensure all components are present and functional.

1.1. Setting the TSA Combination Lock

Your suitcase is equipped with an integrated TSA combination lock. This lock allows you to secure your luggage while permitting security authorities to inspect it without damage.

1. The lock is preset to 0-0-0. To set your personal combination, locate the small reset button (A) on the side of the lock.
2. Use a pen or a pointed object to press and hold down the reset button (A) until you hear a click.
3. Rotate the dials (B) to your desired three-digit combination.
4. Push the tab (C) to the side. The reset button (A) will pop back up, and you will hear another click. Your new combination is now set.
5. Remember your combination. If you forget it, you will not be able to open your suitcase.





Image: Close-up view of the integrated TSA combination lock on the DELSEY PARIS Belmont Plus suitcase. The lock features three numerical dials and a release tab.

2. Operating Your Suitcase

2.1. Telescopic Handle Operation

The suitcase features a multi-stage telescopic handle for comfortable maneuvering. Press the button on the handle grip and extend or retract the handle to your preferred height. Ensure the handle is fully extended or retracted before moving the suitcase.



Image: Detail of the telescopic handle of the DELSEY PARIS Belmont Plus suitcase, extended for use. The handle features the DELSEY PARIS branding.

2.2. Using the Spinner Wheels

Your DELSEY PARIS Belmont Plus suitcase is equipped with four double spinner wheels, allowing for 360-degree rotation and effortless mobility. Push or pull the suitcase in any direction. For optimal performance, ensure the suitcase is upright when rolling.



Image: Close-up of a double spinner wheel on the DELSEY PARIS Belmont Plus suitcase, highlighting its design for smooth movement.

2.3. Packing and Internal Organization

The interior of your suitcase is designed for optimal organization. It includes internal packing straps to secure your belongings and a zippered mesh divider to separate compartments.



Image: Interior view of the DELSEY PARIS Belmont Plus suitcase, open to reveal the packing straps and a zippered mesh compartment.

2.4. Using the Expansion Feature

For additional packing capacity, your suitcase features an expandable zipper. Unzip the expansion zipper located around the perimeter of the suitcase to increase its depth.





Image: Side view of the DELSEY PARIS Belmont Plus suitcase with the expansion zipper open, demonstrating the increased storage capacity.

3. Care and Maintenance

Proper care will extend the life of your DELSEY PARIS Belmont Plus suitcase.

3.1. Cleaning the Exterior

The polypropylene shell can be cleaned with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents, as these can damage the surface. Wipe dry immediately.

3.2. Wheel Maintenance

Periodically check the wheels for any debris (hair, lint, etc.) that may hinder their smooth operation. Clean them gently with a brush if necessary. Avoid exposing wheels to excessive dirt or sand for prolonged periods.

3.3. Zipper Care

Keep zippers clean and free of debris. If a zipper becomes stiff, apply a small amount of silicone-based lubricant or zipper wax to the teeth.



Image: Detail of the SECURITECH zipper on the DELSEY PARIS Belmont Plus suitcase, emphasizing its robust design.

4. Troubleshooting

Here are solutions to common issues you might encounter:

- **Lock not opening:** Ensure you are entering the correct combination. If you have forgotten your combination, there is no master key provided to the user. You may need to contact DELSEY PARIS customer support for assistance.
- **Stiff telescopic handle:** Ensure no items are obstructing the handle mechanism inside the suitcase. Gently pull and push the handle several times. If it remains stiff, apply a silicone spray to the handle rails.
- **Wheels not rolling smoothly:** Check for trapped debris (hair, dirt) around the wheel axles. Clean as described in the maintenance section.
- **Zipper sticking:** Clean the zipper teeth and apply a lubricant as described in the maintenance section. Avoid forcing the zipper.

5. Product Specifications

Feature	Detail
Model Name	Belmont Plus
Model Number	00386182143MR
Dimensions (L x W x H)	76 x 52 x 32/34 cm (XL, expandable)
Weight	5.58 kg
Capacity	102 Liters
Material	Polypropylene (PP)
Color	Chartreuse Green
Wheels	4 Double Spinner Wheels
Lock Type	Integrated TSA Combination Lock
Special Features	Expandable, SECURITECH® Zip, Recycled Material

6. Warranty Information

Your DELSEY PARIS Belmont Plus suitcase comes with an international five-year warranty. This warranty covers manufacturing defects in materials and workmanship. For specific terms and conditions, please refer to the official DELSEY PARIS website or contact customer support.

7. Customer Support

For any questions, warranty claims, or assistance with your DELSEY PARIS Belmont Plus suitcase, please contact DELSEY PARIS customer service. You can find the contact form on the official DELSEY website: delsey.com/contact.