

TOUCHBeauty TB-2138AUS

TOUCHBeauty Electric Nail Drill TB-2138AUS Instruction Manual

Model: TB-2138AUS

[Introduction](#)
[Operating](#)
[Instructions](#)

[Safety Information](#)
[Maintenance](#)

[Package](#)
[Contents](#)
[Troubleshooting](#)

[Product](#)
[Overview](#)
[Specifications](#)

[Setup](#)
[Warranty &](#)
[Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your TOUCHBeauty Electric Nail Drill, model TB-2138AUS. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Do not use on broken or damaged nails.
- Keep out of reach of children.
- Unplug when not in use.
- Do not operate if the device or cord is damaged.
- Avoid contact with water or other liquids.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Use only the attachments provided or recommended by the manufacturer.
- Do not apply excessive pressure during use, as this may cause injury or damage to the device.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- TOUCHBeauty Electric Nail Drill (1 unit)
- Nail Drill Bits (6 pieces)
- Storage Case (1 unit)
- USB Charging Cable (1 unit)
- User Manual (this document)



Image: The electric nail drill, its storage case, and the included six nail drill bits.

4. PRODUCT OVERVIEW

The TOUCHBeauty Electric Nail Drill is a compact and portable device designed for various nail care tasks. It features a lightweight, pen-shaped handle and offers adjustable rotation directions for versatile use.



Image: The nail drill showing its lightweight design (0.1 lbs), two adjustable rotation directions, and rechargeable USB-C port.

Key Features:

- **Lightweight Design:** The pen-shaped handle weighs approximately 0.1 lbs for comfortable use.
- **Adjustable Direction:** Clockwise and counter-clockwise rotation settings for left or right-hand use.
- **Rechargeable & Cordless:** Powered via USB for convenience and portability.
- **Low Noise Operation:** Engineered for quiet and low-vibration performance.
- **Overload Protection:** Built-in mechanism to prevent damage from excessive pressure.

5. SETUP

5.1 Charging the Device

Before first use, fully charge the electric nail drill. Connect the provided USB charging cable to the device's charging port and plug the other end into a compatible USB power source (e.g., power bank, USB adapter, laptop). The indicator light will show charging status.

Enjoy salon-quality nail drill anywhere



Image: The nail drill being charged via a USB cable connected to a power bank, USB adapter, and laptop.

5.2 Attaching Nail Drill Bits

To attach a nail drill bit:

1. Remove the protective cover from the device.
2. Select the desired nail drill bit.
3. Insert the stem of the bit firmly into the opening at the tip of the drill until it clicks into place. Ensure it is securely seated.
4. To remove a bit, gently pull it out.

3 STEPS TO USE

Simple installation & operation



Remove
protective
cover



Insert head
attachment



Shape, Smooth
Buff, Shine.

Image: Visual guide for installing a drill bit: 1. Remove protective cover, 2. Insert head attachment, 3. Shape, Buff, Shine.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Adjustment

Press the power button to turn the device on. Press again to cycle through available speed settings (if applicable) or to turn off the device. Refer to the specific model's button functionality for precise control.

6.2 Adjusting Rotation Direction

The device features a switch or button to change the rotation direction (clockwise/counter-clockwise). This allows for comfortable use with either hand and for different nail care techniques. Adjust the direction as needed during your manicure or pedicure.

6.3 Using the Nail Drill Bits

The TOUCHBeauty Electric Nail Drill comes with 6 different bits, each designed for specific functions:

- **Conical Bit:** For removing acrylic/gel nails, shaping, and filing.
- **Cylinder Bit:** For sanding thick nails and surface work.
- **Flame Bit:** For removing dip powder nails and intricate cuticle work.

- **Small Barrel Bit:** For removing dead skin and refining nail edges.
- **Needle Bit:** For precise cuticle removal and cleaning under the nail.
- **Soft Polishing Bit:** For buffing and shining natural nails.

Always start with a low speed and gradually increase as needed. Apply gentle pressure and move the bit continuously to avoid heat buildup or damage to the nail.



Image: An array of nail drill bits, illustrating their specific uses for different manicure needs.

Effective Manicure

friendly and safe for beginners



Image: The electric nail drill in use, demonstrating its effectiveness for manicure tasks, including a before and after comparison of gel nail removal.

6.4 Official Product Video: Electric Nail File in Use

Your browser does not support the video tag.

Video: A demonstration of the TOUCHBeauty Electric Nail File, showcasing its features and how to use it for various nail care applications.

7. MAINTENANCE

7.1 Cleaning

- Always turn off and unplug the device before cleaning.
- Wipe the body of the nail drill with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- Clean the drill bits after each use. You can use a small brush to remove dust and debris. For sterilization, follow appropriate procedures for nail tools.
- Ensure all parts are completely dry before storing.

7.2 Storage

Store the electric nail drill and its accessories in the provided compact case in a cool, dry place, away from direct sunlight and moisture. Keep out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no power.	Charge the device fully. Ensure the power button is pressed correctly.
Drill bit stops rotating during use.	Excessive pressure applied (overload protection activated).	Reduce pressure. The device will resume operation once the pressure is eased.
Device vibrates excessively or makes unusual noise.	Drill bit not properly inserted or damaged.	Ensure the drill bit is securely inserted. Replace if damaged.
Ineffective filing/shaping.	Incorrect bit used or bit is worn out.	Select the appropriate bit for the task. Replace worn bits.

9. SPECIFICATIONS

Feature	Detail
Model Number	TB-2138AUS
Brand	TOUCHBeauty
Power Source	Corded Electric (USB rechargeable)
Material	Metal, Plastic
Package Dimensions	7.2 x 2.36 x 1.73 inches
Item Weight	6.7 ounces (device approximately 0.1 lbs)
Manufacturer	TOUCHBeauty

10. WARRANTY & SUPPORT

10.1 Warranty Information

TOUCHBeauty products are manufactured to high-quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. Specific warranty terms and conditions may vary by region and retailer.

10.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact TOUCHBeauty customer support. Refer to the product packaging or the official TOUCHBeauty website for contact details.

Official Website: www.touchbeauty.com

