

[manuals.plus](#) /

› [Kinglucky](#) /

› [Kinglucky Mini Karaoke Machine User Manual](#)

Kinglucky K12

Kinglucky Mini Karaoke Machine User Manual

Model: K12 | Brand: Kinglucky

INTRODUCTION

Thank you for choosing the Kinglucky Mini Karaoke Machine. This portable and fun device is designed to bring joy and entertainment to kids and families with its clear sound, wireless microphones, and exciting voice effects. Please read this manual carefully to ensure proper use and maintenance of your new karaoke machine.



The Kinglucky Mini Karaoke Machine, featuring a beige speaker with colorful LED lights and two matching wireless microphones.

WHAT'S IN THE BOX

Your Kinglucky Mini Karaoke Machine package includes the following items:

- 1 x Karaoke Speaker
- 2 x Wireless Microphones
- 1 x Charging Cable
- 1 x User Manual (this document)

SETUP

1. Charging the Device

Before first use, ensure both the karaoke speaker and the wireless microphones are fully charged. Use the provided charging cable to connect the devices to a compatible USB power source.

1. Connect the charging cable to the charging port on the karaoke speaker.
2. Connect the charging cable to the charging port on each wireless microphone.
3. The charging indicator light will show the charging status (refer to the device for specific light behavior).
4. Once fully charged, disconnect the charging cable.

2. Powering On

1. To power on the karaoke speaker, press and hold the power button for a few seconds until the LED lights illuminate.
2. To power on each wireless microphone, press and hold the power button on the microphone until its indicator light turns on.

3. Pairing Microphones with Speaker

The wireless microphones should automatically pair with the karaoke speaker upon powering on. If they do not pair automatically:

1. Ensure both the speaker and microphones are powered on and within close proximity.
2. If pairing issues persist, power off and then power on both devices again.

OPERATING INSTRUCTIONS

1. Connecting to Audio Source (Bluetooth)

The Kinglucky Karaoke Machine supports Bluetooth 5.3 for seamless wireless connection to your devices.

1. Turn on the karaoke speaker. It will automatically enter Bluetooth pairing mode.
2. On your smartphone, tablet, or TV, enable Bluetooth and search for available devices.
3. Select "Kinglucky K12" (or similar name) from the list of devices to connect.
4. Once connected, you will hear an audible confirmation. You can now play music from your device through the karaoke speaker.

4 connection ways, easy, fast, stable.

Bluetooth 5.3 technology, compatible with all devices.



The karaoke machine offers multiple connection methods including Bluetooth 5.3, USB, and AUX for versatile audio playback.

2. Adjusting Volume

You can adjust the volume of the music, microphone, and echo effect independently.

1. **Music Volume:** Use the volume controls on your connected device (phone, tablet) to adjust the music playback volume.
2. **Microphone Volume (Mic VOL):** Use the '+' and '-' buttons on the wireless microphones to increase or decrease your voice volume.
3. **Echo Volume (Echo VOL):** Long press the '+' or '-' button on the microphone for 2-3 seconds to adjust the echo level. There are 5 levels of echo, with 0 being the default (no echo).



Microphone controls allow for independent adjustment of echo, music, and microphone volume.

3. Voice Effects

The karaoke machine features 5 fun voice-changing effects to enhance your singing experience.

1. Press the voice effect button (often indicated by a microphone icon or 'M') on the wireless microphone to cycle through the available voice effects.
2. Effects include Original, Mom, Dad, Monster, and Baby.

Be the **star** of the party anytime.

Paired with stunning light show & fun voice changer.



Original



Mom



Dad



Monster



Baby

Explore five unique voice effects to add more fun to your karaoke sessions.

4. LED Disco Lights

The karaoke speaker features dynamic LED disco lights that synchronize with the music, creating a lively atmosphere.

1. The LED lights automatically activate when the speaker is powered on.
2. There may be a dedicated button on the speaker to turn the lights on/off or change modes (refer to device markings if available).

MAINTENANCE

- **Cleaning:** Wipe the surface of the karaoke machine and microphones with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the device regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker.	Speaker is off; volume is too low; not connected via Bluetooth.	Ensure speaker is on and charged. Increase speaker and connected device volume. Re-pair Bluetooth.
Microphone not working.	Microphone is off; battery low; not paired with speaker.	Ensure microphone is on and charged. Re-pair microphone with speaker.
Echo effect won't turn off.	Echo level is set too high.	Long press the '-' button on the microphone to decrease the echo level to 0.
Poor sound quality / Distortion.	Volume too high; interference; low battery.	Lower volume. Move closer to the speaker. Charge devices.

SPECIFICATIONS

- **Model:** K12
- **Brand:** Kinglucky
- **Product Dimensions:** 3 x 8 x 6.2 inches
- **Item Weight:** 1.5 pounds
- **Bluetooth Version:** 5.3
- **Special Features:** 10h Battery Life, Super Cute & Portable, Sound loud & clear
- **Color:** Beige
- **Recommended Uses:** Party

Precision-engineered Speakers

Crystal-clear audio,
Studio-quality sound.



Other: Poor sound quality

The Kinglucky karaoke machine features precision-engineered speakers for clear, immersive sound.

Small but mighty, loud sound.

10h ultra-long battery life, enjoy uninterrupted joy.

 

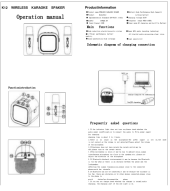 





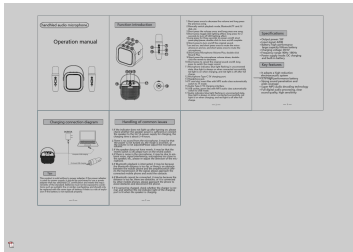 
Enjoy extended playtime with the Kinglucky Mini Karaoke Machine's 10-hour ultra-long battery life.

WARRANTY & SUPPORT

Kinglucky products are designed for durability and performance. For warranty information, technical support, or any inquiries regarding your karaoke machine, please refer to the contact information provided on the product packaging or visit the official Kinglucky website. Keep your purchase receipt for warranty claims. For additional support, you may also refer to the [User Manual \(PDF\)](#) available online.

© 2024 Kinglucky. All rights reserved.

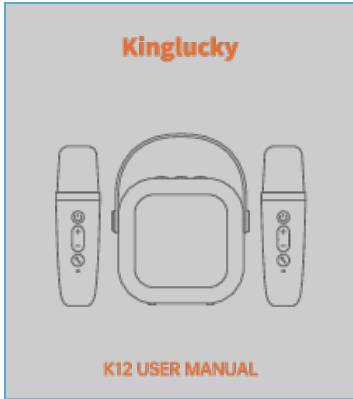 
	<p>K12 Wireless Karaoke Speaker User Manual</p> <p>User manual for the K12 Wireless Karaoke Speaker, detailing its functions, operation, troubleshooting, and warranty information. Includes technical specifications and FCC compliance.</p>
	<p>K12 Wireless Karaoke Speaker Operation Manual</p> <p>Operation manual for the K12 Wireless Karaoke Speaker, detailing product information, functions, charging, and troubleshooting.</p>
	<p>K12 Wireless Karaoke Speaker Operation Manual</p> <p>User manual for the K12 Wireless Karaoke Speaker, detailing product information, functions, charging, troubleshooting, and warranty terms. Features high-quality audio, Bluetooth connectivity, and microphone support.</p>
	<p>K12 Wireless Speaker User Manual and Specifications</p> <p>Detailed user manual and technical specifications for the K12 wireless speaker, covering function introduction, major features, and FCC compliance information.</p>
	<p>K12 Operation Manual</p> <p>Operation manual for the K12 device, providing instructions and specifications.</p>
	<p>K12 Projector Quick Start Guide</p> <p>A quick start guide for the K12 Projector, covering optimal usage environments, mobile mirroring and streaming limitations, noise notice, keystone correction, and frequently asked questions.</p>



[Kinglucky K12 Karaoke Machine User Manual](#)

This manual provides instructions for operating the Kinglucky K12 Karaoke Machine, covering its functions, specifications, and troubleshooting.

lang:en score:34 filesize: 642.99 K page_count: 1 document date: 2025-01-10



[\[pdf\] User Manual Guide](#)

K12 250301 Kinglucky Click Switch Play Mode BT TF Card USB 3 Increase Volume Long Press
Next Track 4 Change LED Lighting Effects K12UserGuide kingluckyshop u file 2503 06 Product manual |||
...

lang:en score:16 filesize: 1.21 M page_count: 4 document date: 2025-03-01