



Manuals.plus /

› CASETiFY /

› CASETiFY Snappy Card Holder Stand for MagSafe - Silver Mirror Instruction Manual

CASETiFY CTF-30136034-16006465

CASETiFY Snappy Card Holder Stand for MagSafe - Silver Mirror

Model: CTF-30136034-16006465

INTRODUCTION

The CASETiFY Snappy Card Holder Stand is a versatile accessory designed for MagSafe compatible phones and cases. It provides secure storage for one card and functions as a convenient kickstand for hands-free viewing. Its slim and sleek design integrates seamlessly with your device, offering both utility and style.

Key Features

- Compatible with MagSafe phones and cases
- Slim and sleek profile
- Secure storage for one card
- Doubles as a versatile kickstand
- Quick card access

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x CASETiFY Snappy Card Holder Stand (Silver Mirror)

SETUP

Attaching to Your Device

The Snappy Card Holder Stand utilizes MagSafe technology for easy and secure attachment. Ensure your phone or phone case is MagSafe compatible.

1. Align the CASETiFY Snappy Card Holder Stand with the MagSafe area on the back of your iPhone or

MagSafe compatible case.

2. The magnets will automatically snap the stand into place, ensuring a strong and secure connection.



Image: The CASETiFY Snappy Card Holder Stand securely attached to a MagSafe compatible iPhone.

Inserting and Removing Cards

The stand is designed to hold one standard-sized card securely.

1. To insert a card, gently slide it into the designated slot on the side of the card holder until it is fully seated.
2. To remove a card, push it out from the bottom opening or slide it out from the top. The design allows for quick and easy access.

Easy One-handed Access

Designed to be practical, you can easily get access to your card with just one hand without having to snap off your Cardholder Stand.



Image: Demonstrating the quick card access feature of the Snappy Card Holder Stand.

Using the Kickstand Function

The integrated kickstand allows for hands-free viewing in both portrait and landscape orientations.

1. To deploy the kickstand, gently pull the bottom edge of the card holder away from your phone. It will pivot outwards to form a stable stand.
2. Adjust the angle as needed for optimal viewing.
3. To retract the kickstand, simply push it back towards the phone until it lies flat against the device.



Image: The Snappy Card Holder Stand supporting an iPhone in a vertical viewing position.



Image: The Snappy Card Holder Stand supporting an iPhone in a horizontal viewing position.

Your browser does not support the video tag.

Video: Official CASETiFY demonstration of the Snap Wallet Stand's features, including magnetic attachment and kickstand functionality.

OPERATING INSTRUCTIONS

General Use

The CASETiFY Snappy Card Holder Stand is designed for daily convenience. Keep your essential card readily available and enjoy hands-free media consumption or video calls.

Magnetic Connection

The strong magnetic connection ensures the stand remains firmly attached to your MagSafe compatible device during normal use. To remove, simply pull the stand away from your device.

Your browser does not support the video tag.

Video: Official CASETiFY overview of various Snappy MagSafe accessories, demonstrating their magnetic attachment and versatility.

MAINTENANCE AND CARE

Cleaning

To clean your CASETiFY Snappy Card Holder Stand, gently wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the finish.

Storage

When not in use, store the card holder stand in a clean, dry place away from direct sunlight and extreme

temperatures.

TROUBLESHOOTING

Issue	Possible Solution
Stand does not attach securely.	Ensure your phone or case is MagSafe compatible. Clean the MagSafe area on both the phone/case and the stand to remove any debris.
Card is difficult to insert or remove.	The stand is designed for one standard-sized card. Do not force multiple cards into the slot. Ensure the card is inserted straight.
Kickstand feels loose or unstable.	Ensure the kickstand is fully extended and locked into position. Avoid applying excessive force or weight to the stand.

SPECIFICATIONS

Feature	Detail
Brand	CASETiFY
Model Number	CTF-30136034-16006465
Color	Silver Mirror
Material	Plastic
Style	Minimalist
Additional Features	Doubles as a kickstand, Quick card access
Wallet Compartment Type	Credit Card
Closure Type	Magnetic
Number Of Pockets	1
Wallet Card Slot Count	1
Form Factor	Slim
Item Dimensions (D x W x H)	0.5"D x 2"W x 4"H
Item Weight	0.08 Kilograms

WARRANTY AND SUPPORT

Warranty Information

This CASETiFY product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the official CASETiFY website or your purchase documentation for specific

warranty terms and conditions.

Customer Support

For technical assistance, product inquiries, or warranty claims, please visit the official CASETiFY support page or contact their customer service team. Contact details can typically be found on the CASETiFY website or within your product packaging.