

[Manuals.plus](#) /

> [CHUBORY](#) /

> CHUBORY F89 Brushless Drone Replacement Accessory Kit User Manual

CHUBORY F89

CHUBORY F89 Brushless Drone Replacement Accessory Kit User Manual

Model: F89 | Brand: CHUBORY

INTRODUCTION

This manual provides essential instructions for the installation and maintenance of the CHUBORY F89 brushless drone replacement accessory kit. Please read this manual carefully before installing the components to ensure proper function and safety.



Image: Contents of the CHUBORY F89 Replacement Accessory Kit.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 4 x Propeller Guards
- 4 x Propellers
- 1 x Charging Cable
- 1 x Screwdriver
- 5 x Screws



Image: Close-up of propeller blades, guards, and charging cable.

SETUP AND INSTALLATION

1. Propeller Installation

1. Ensure the drone is powered off and the battery is removed before beginning installation.
2. Identify the correct propellers for each motor. Propellers are typically marked (e.g., A or B) and must match the markings on the drone's motor arms.
3. Align the propeller with the motor shaft. Use the provided screwdriver and screws to securely fasten each propeller. Do not overtighten.
4. Gently test each propeller to ensure it is firmly attached and spins freely without obstruction.

2. Propeller Guard Installation

1. Locate the mounting points for the propeller guards on the drone's motor arms.
2. Snap or slide each propeller guard into its designated position. Some guards may require a slight force to click into place.
3. Ensure all four guards are securely attached and do not interfere with propeller rotation.



Image: Various accessory components, including propeller guards and screws.

MAINTENANCE

- **Propellers:** Regularly inspect propellers for cracks, bends, or chips. Damaged propellers can affect flight stability and efficiency. Replace them immediately if any damage is observed.
- **Propeller Guards:** Check guards for damage after any impact. Ensure they remain securely attached to the drone.
- **Screws:** Periodically check all screws for tightness. Loose screws can lead to component detachment during flight.
- **Cleaning:** Use a soft, dry cloth to clean propellers and guards. Avoid using harsh chemicals.

TROUBLESHOOTING

- **Drone unstable after propeller replacement:** Ensure propellers are installed correctly (A to A, B to B) and are securely tightened. Check for any bent or unbalanced propellers.
- **Propeller guards falling off:** Verify that the guards are fully snapped into place. If they are consistently loose, they may be damaged and require replacement.
- **Charging cable not working:** Ensure the cable is properly connected to both the power source and the drone battery (if applicable). Test with another compatible charging port or cable if possible.

SPECIFICATIONS

Feature	Detail
Brand	CHUBORY
Model Name	F89
Material	Plastic
Components Included	4 Propeller Guards, 4 Propellers, 1 Charging Cable, 1 Screwdriver, 5 Screws
Item Dimensions (L x W x H)	10L x 10l x 10H mm (Note: This dimension seems to be for a small component, not the full kit or drone)
UPC	721691659611
GTIN	721691659611
ASIN	B0CPDZFJLJ

Note: Some specifications listed are for the drone itself, not solely the accessory kit. This kit provides replacement parts for the CHUBORY F89 drone.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your CHUBORY F89 drone or its replacement accessories, please refer to the original drone's user manual or contact CHUBORY customer service directly. Contact details can typically be found on the manufacturer's official website or product packaging.

